



ASSEMBLY INSTRUCTION FOR


EATON DINING TABLE

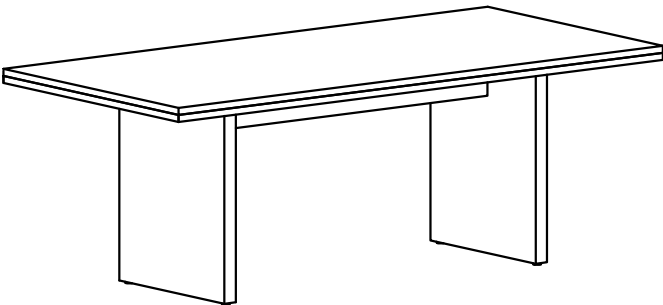


Hardware List				
A		Bolt	8x40mm	14
B		Bolt	8x60mm	2
C		Bolt	6x40mm	6
D		Flat Washer	6x16mm	6
E		Flat Washer	8x19mm	14
F		Spring Washer	8x19mm	14
G		Half Moon Washer		2
H		Wooden Dowel	10x40mm	6
I		Allen Key	4mm	1

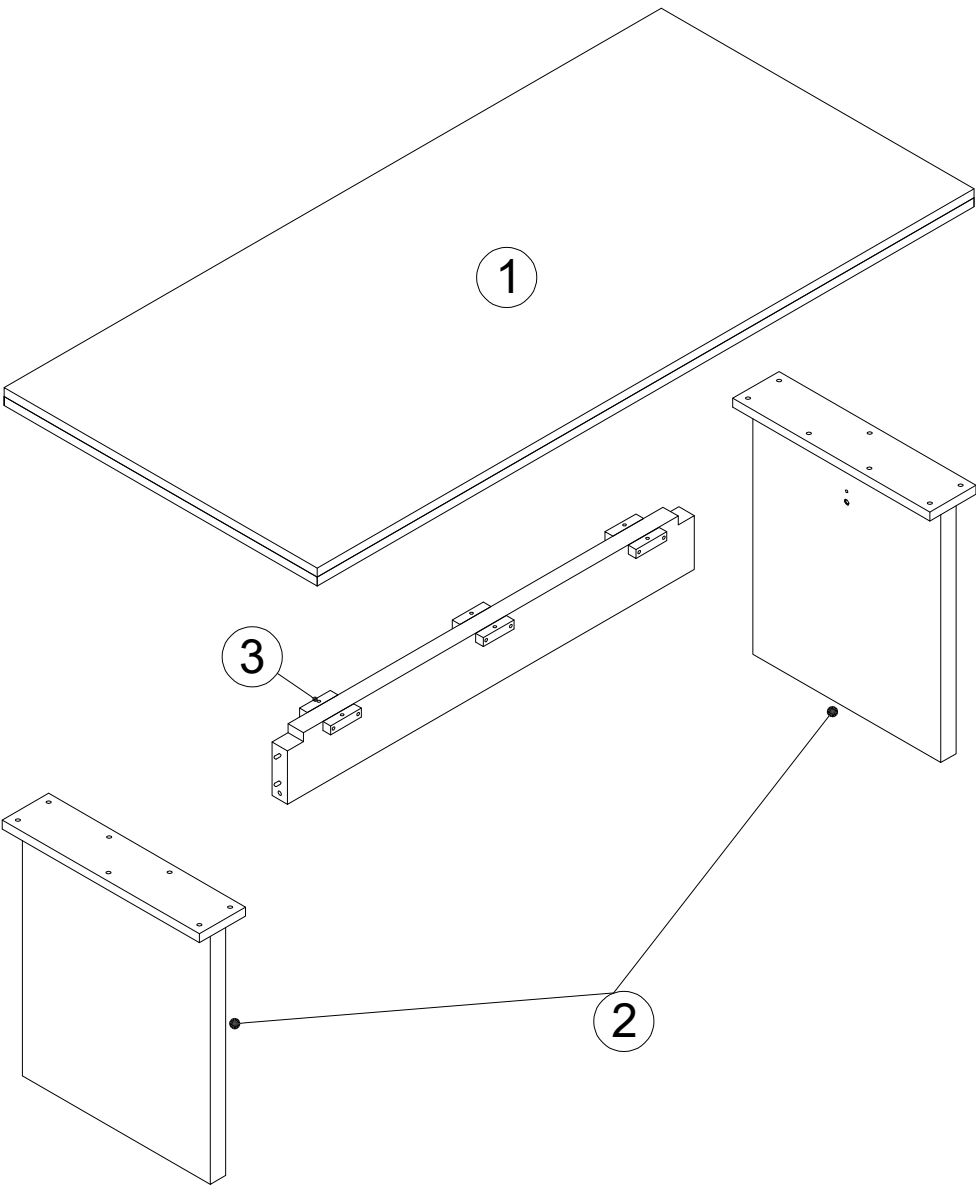


Step 1

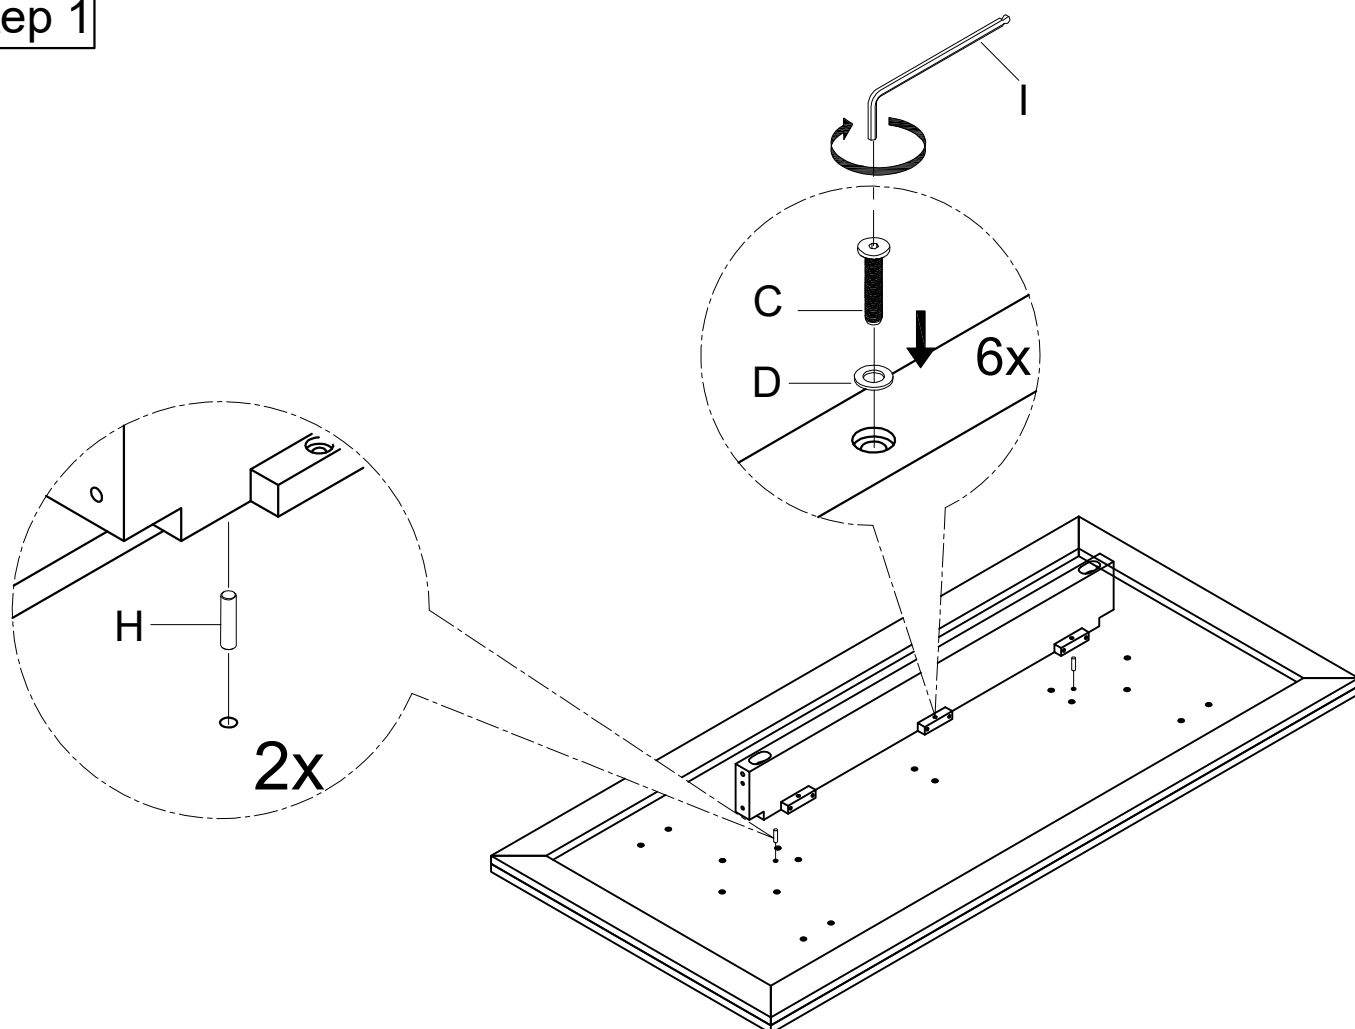


Step 2

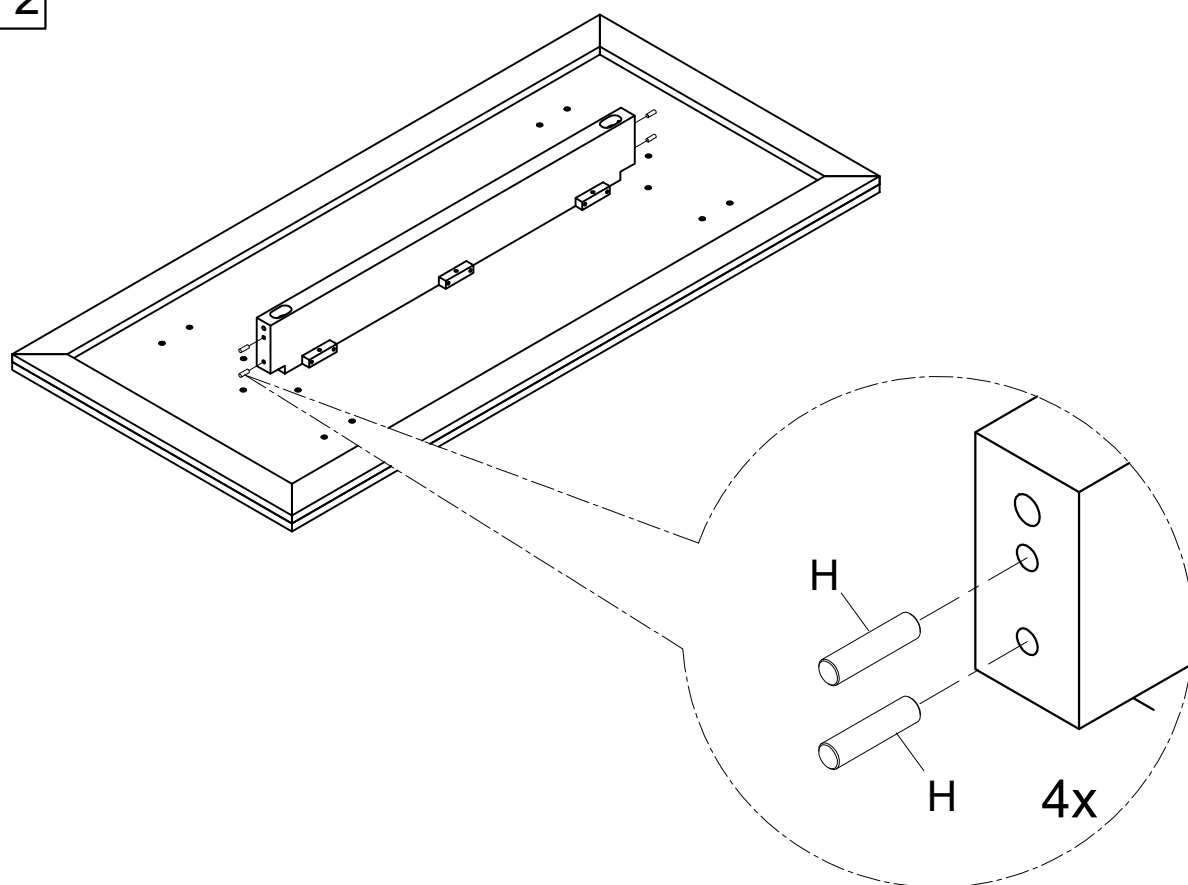

Step 3

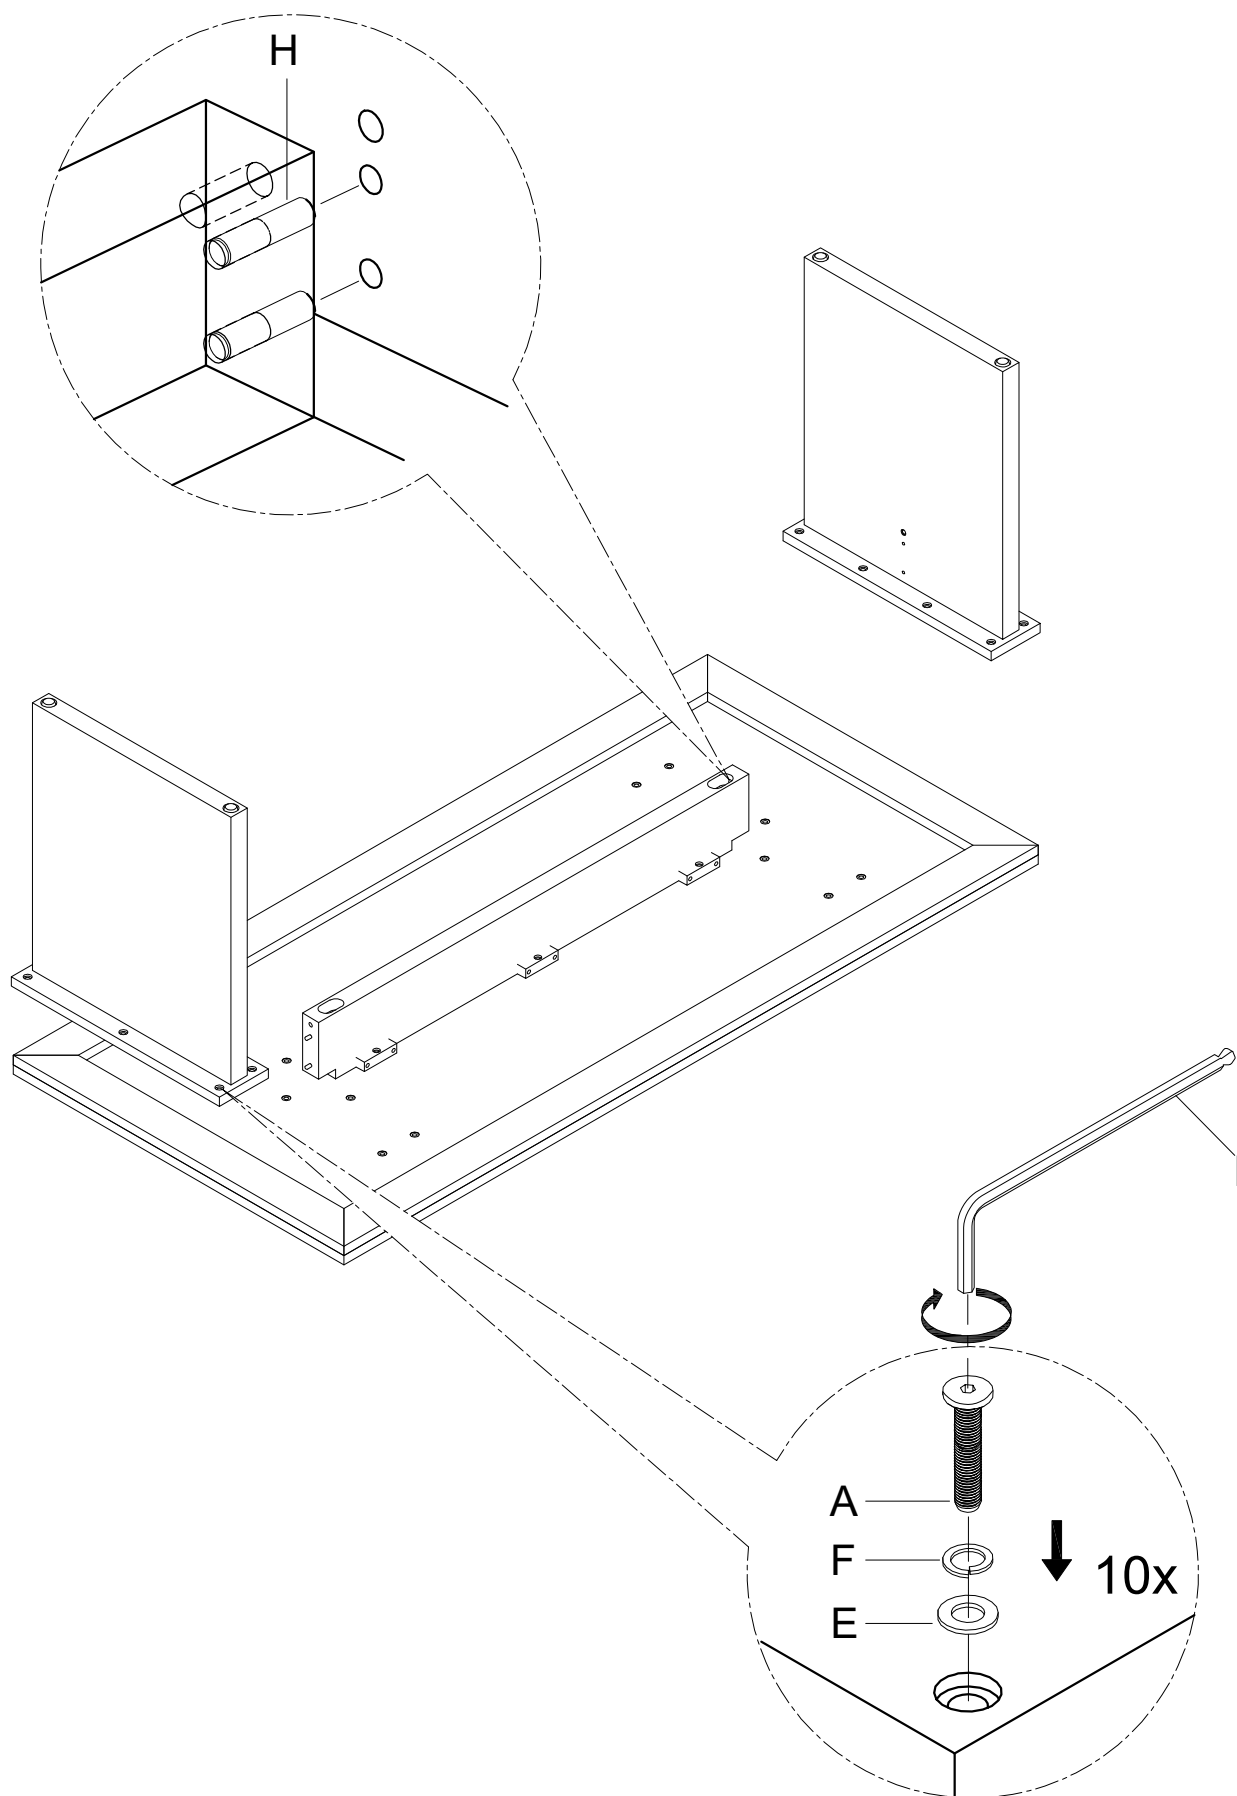


Step 4

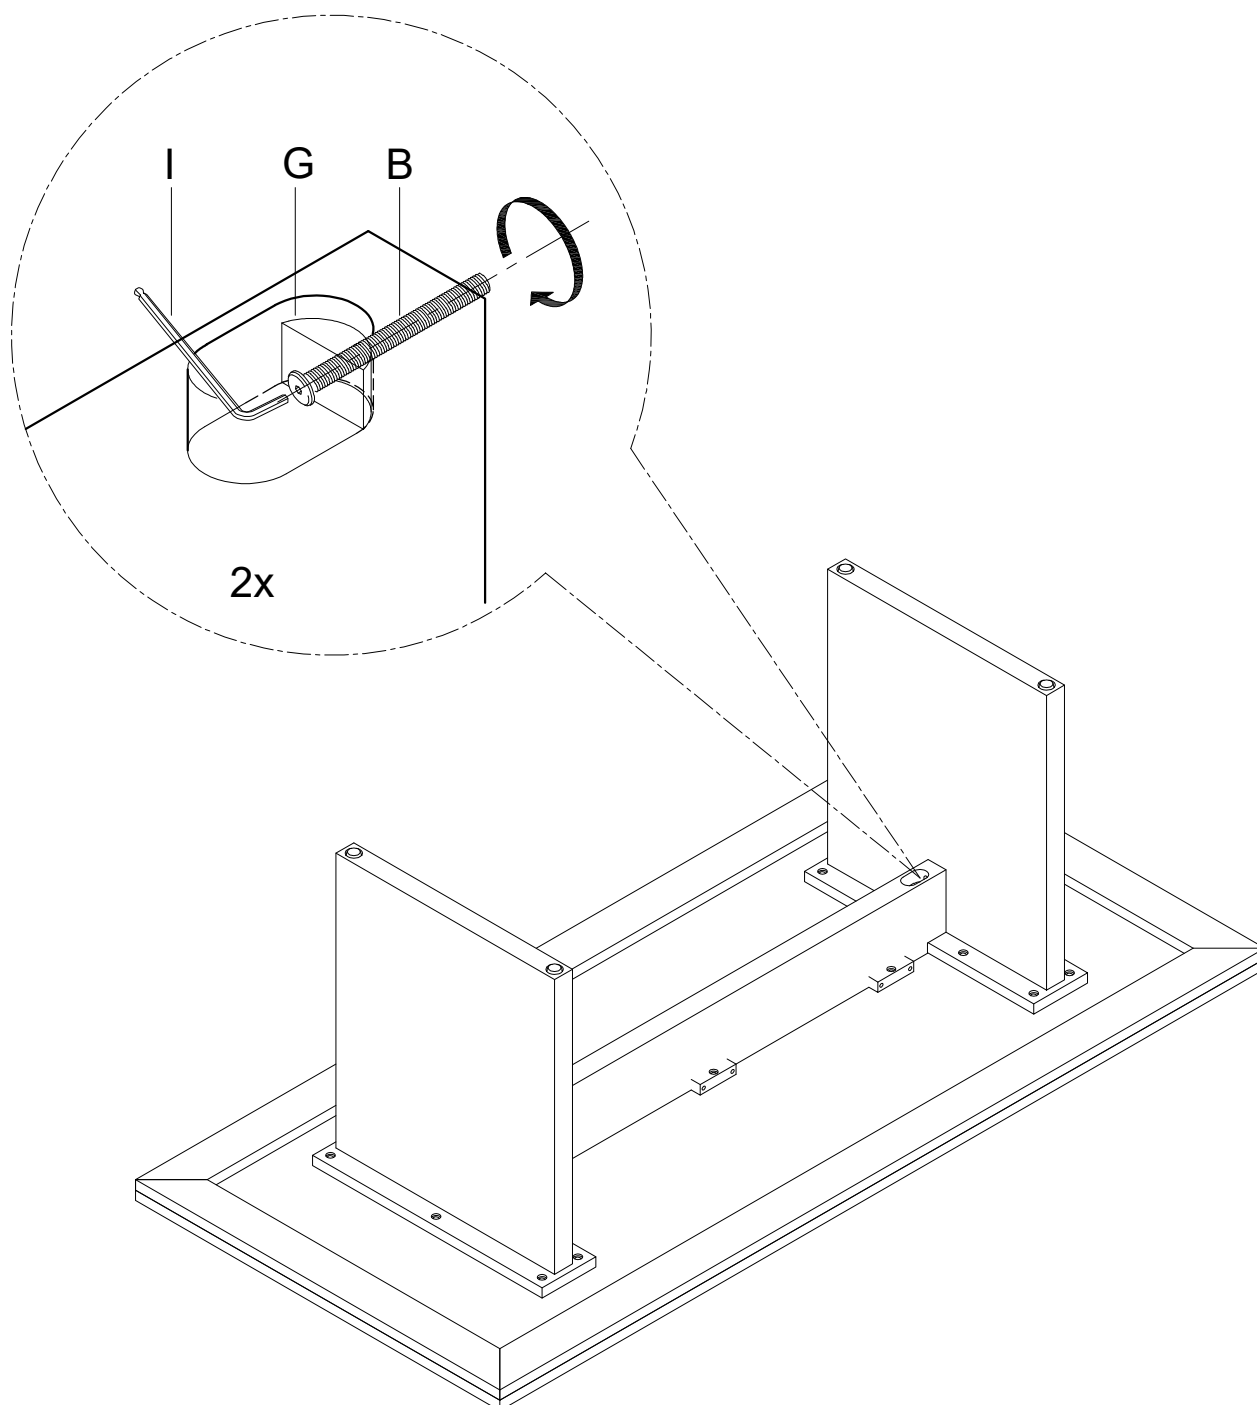

Step 5

Adjusting floor levelers and door hinges

Your furniture has been expertly crafted and re-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

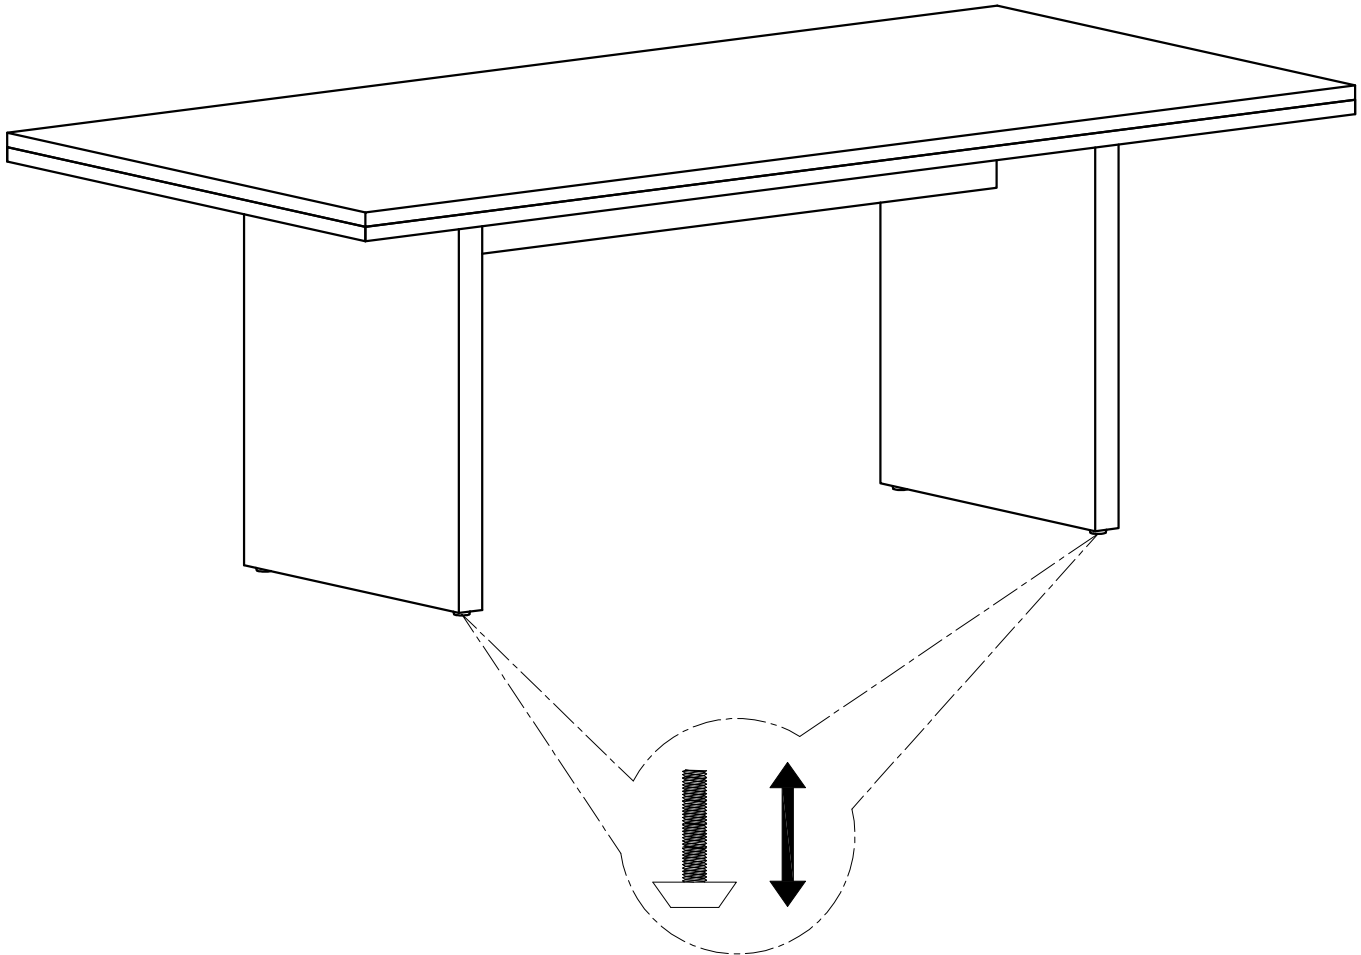

Adjusting Floor Levelers

Check for stability - Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the levelers - These are small adjustable feet found at the bottom corners of your furniture.

Adjust as needed - Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

If you need further adjustments, repeat the process in small increments.