
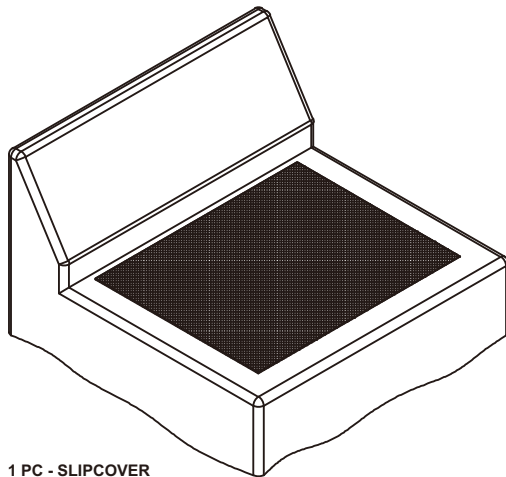




ASSEMBLY INSTRUCTIONS

ELWOOD OUTDOOR SWIVEL CHAIR - SLIPCOVER


1

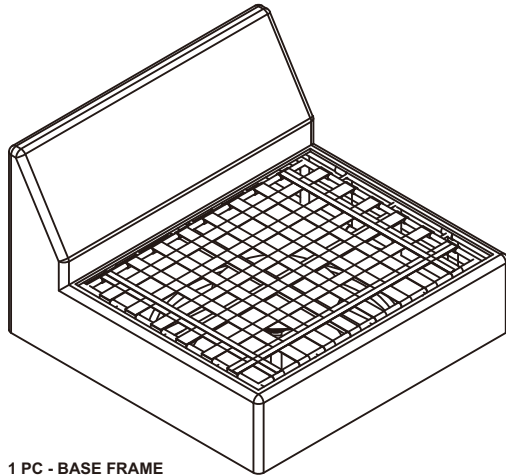


2

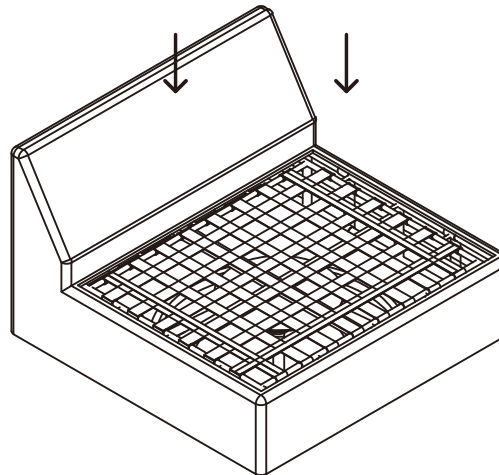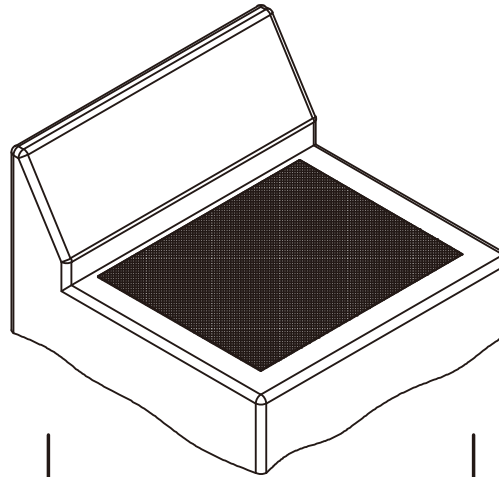

3

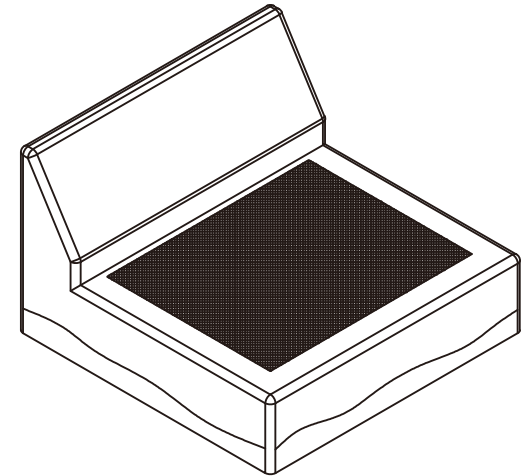

4

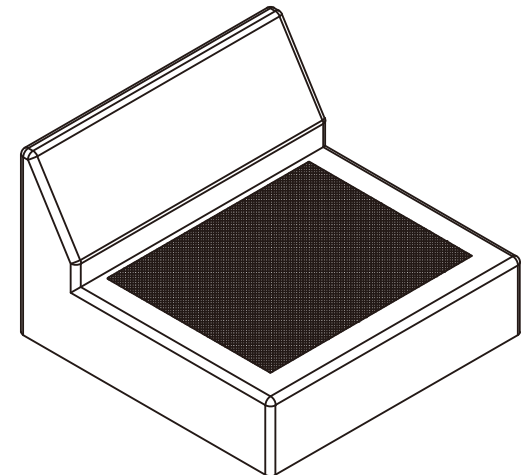

FABRICS MAINTENANCE




Direction of maintenance :

1. Machine wash in luke warm water (up to 40°C, 100°F) at a gentle setting (reduced agitation).
2. A mild bleach agent can be used for cleaning, Avoid concentrated bleach application.
3. Ironing (Low 110 ° C, 230 ° F).
4. Do not dryclean.
5. Tumble dry, low permanent press.


ASSEMBLY INSTRUCTIONS

ELWOOD OUTDOOR SWIVEL CHAIR - CUSHION COVER


1

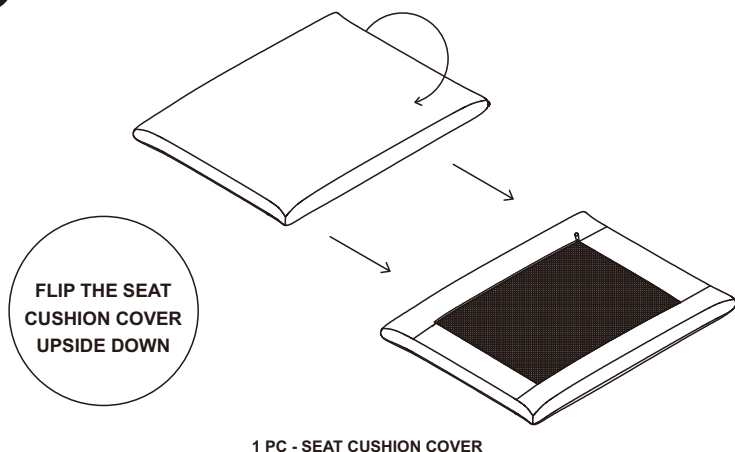


2

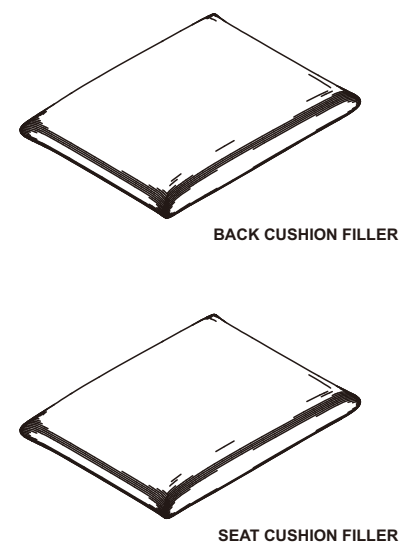

5

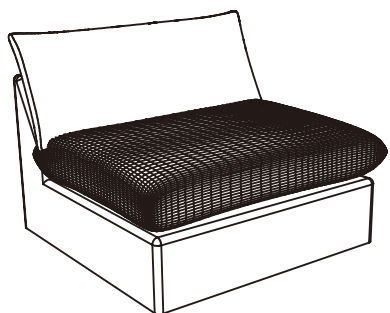

4

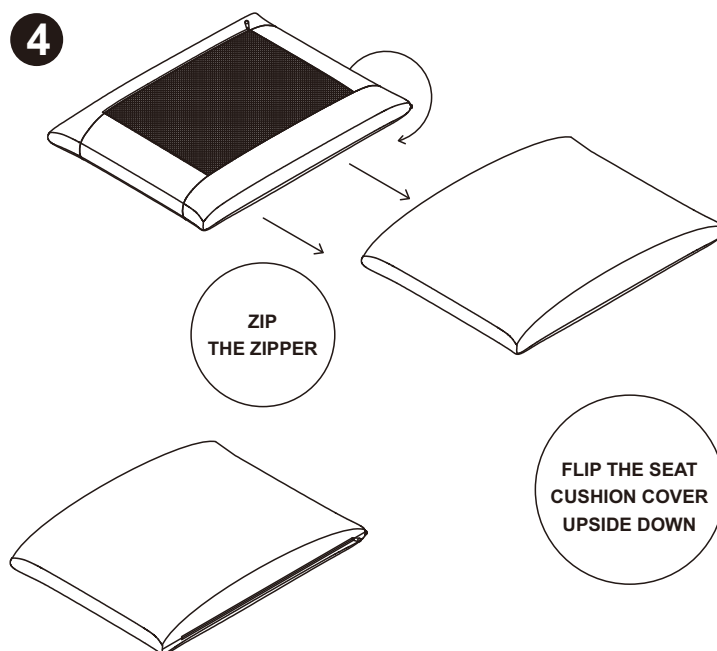

3

