


ASSEMBLY INSTRUCTIONS ELWOOD OUTDOOR SWIVEL CHAIR - SLIPCOVER

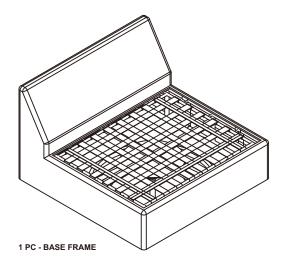


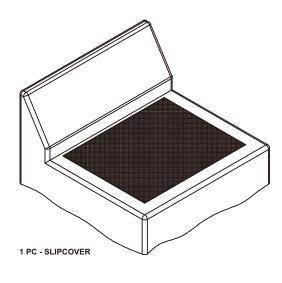

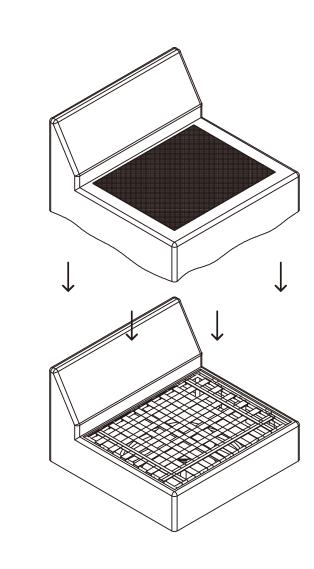






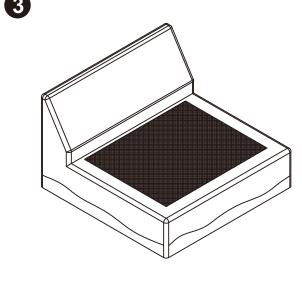



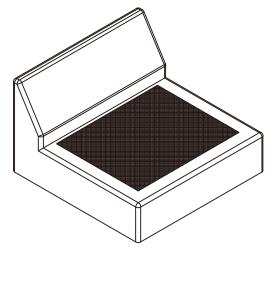

FABRICS MAINTENANCE



Direction of maintenance:

- 1. Machine wash in luke warm water (up to 40°C,100°F) at a gentle setting (reduced agitation).
- 2. A mild bleach agent can be used for cleaning, Avoid concentrated bleach application.
- 3. Ironing (Low 110 ° C, 230 ° F).
- 4. Do not dryclean.
- 5. Tumble dry, low permanent press.

ASSEMBLY INSTRUCTIONS ELWOOD OUTDOOR SWIVEL CHAIR - CUSHION COVER

