


### WALTON PENDANT

#### PARTS ENCLOSED:

ITE	M DESCRIPTION	QTY.
(A)	Mounting plate	1
(B)	Mounting Plate Screw	2
(C)	Canopy	1
(D)	Canopy Loop	1
(E)	Lock Ring	1
(F)	Adjustable Pipes	2(6") 2(12") 2(18")
(G)	Pendant	1
(H)	Bulb	Not included

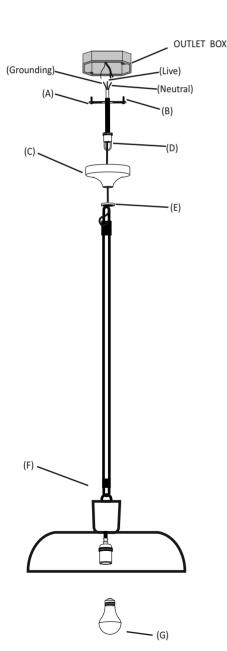

### **IMPORTANT SAFETY INSTRUCTIONS:**

- Use an authorized and certified electrician for consultation and installation.
   Electrician must be familiar with commercial type applications of very heavy chandeliers.
- 2. This fixture has been rated for 1 x 40 Watt maximum Type A standard bulb.
- 3. To avoid the risk of fire, do not exceed the recommended wattage.
- 4. The manufacturer and distributor accept no liability for incorrect installation.
- 5. For indoor use only.
- 6. Keep away from children.

## **WARNINGS:**

- 1. Turn off electricity supply at main circuit panel before installing. Do not connect electricity supply until your ceiling light is fully assembled and installed.
- To reduce the risk of fire, electrical shock, or personal injury, always turn off
  the ceiling light and allow it to cool prior to replacing light bulb. Do not touch
  bulb when fixture is turned on or look directly at light bulb. Keep flammable
  materials away from light bulb.
- 3. Deviation from instruction may result in a risk of fire or electric shock. Please read all instructions completely before installation.

# TO ASSEMBLE:

- 1. Carefully unpack the Pendant. Do not discard any material till assembly is complete.
- 2. Determine the hanging length of Pendant. Connect some or all Connection Rods (F) to the Pendant (G) and Canopy Loop (D) according to the height needed.
- 3. Turn OFF power to the Outlet box where the ceiling light will be installed.
- 4. Feed wires through the Connection Rods the wire will come out on the Back side of the Canopy (C).
- 5. Attach Mounting Plate (A) to ceiling and secure with mounting screws (B).
- Attach the Ground Wire, Neutral wire and Live wire to respective wires of the Outlet Box.
- 6. Attach the Canopy (C) to the Mounting Plate (A) and fix it with Lock Ring (E).
- Install one 9 Watt LED (included) or Type A bulb maximum 40 watt (not included) into the Socket.
- 9. Restore Power to the Outlet box and test ceiling light fixture.

### **CARE INSTRUCTIONS:**

To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.