 
 
 
 
 


THE ARCH DINING TABLE



ASSEMBLY INSTRUCTIONS

HARDWARE LIST				
1		Bolts	8*60mm	16
2		Lock Washer	8mm	16
3		Flat Washer	8mm	16
4		Threaded Rod	10*100mm	2
5		Curved Washer	40*18*3mm	2
6		Hex Nut	10mm Ø	2
7		Open Wrench		1
8		Allen Wrench	108*76*5mm	1

PARTS LIST		
A 	B 	
TABLE TOP 1 PC	STRETCHER 1 PC	
C 	D 	E 
SUPPORT RAIL 1 PC	BRACKET 1 PC	LEG 2 PCS

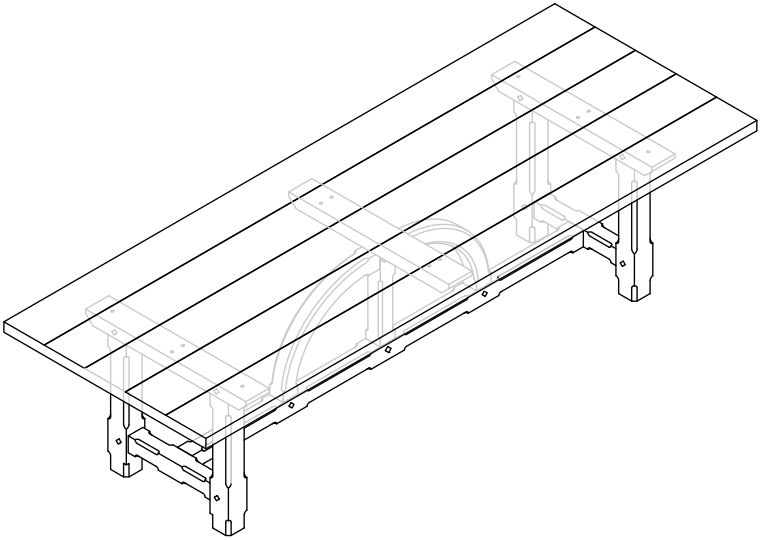

 
 
STEP: 1

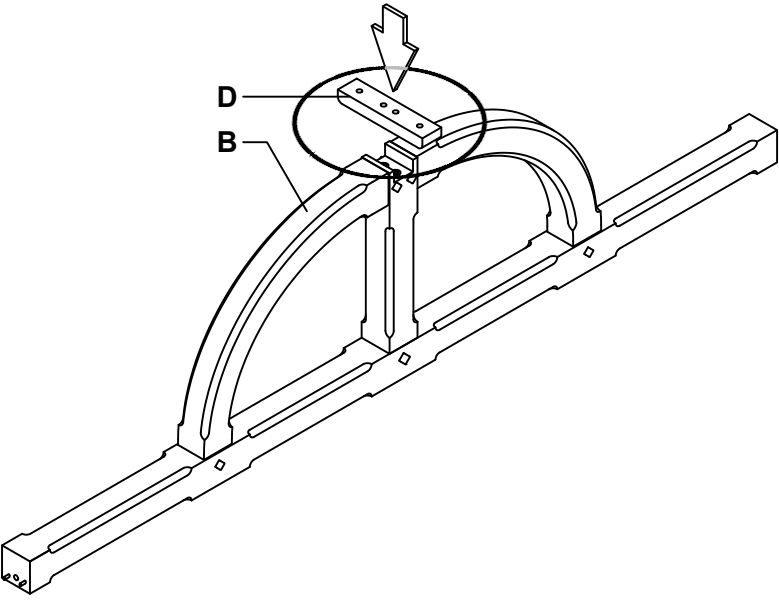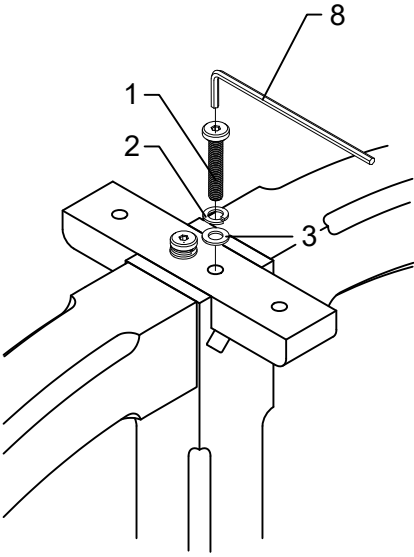



THE ARCH DINING TABLE

ASSEMBLY INSTRUCTIONS

  STEP: 2

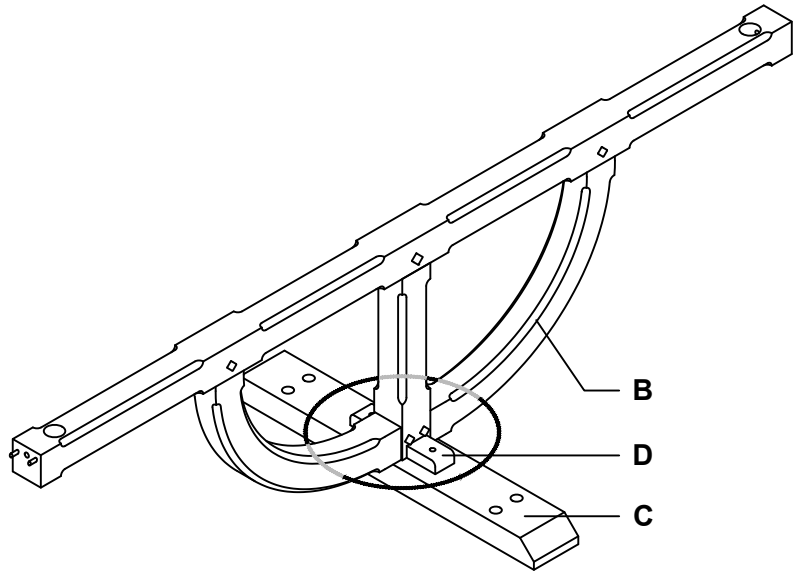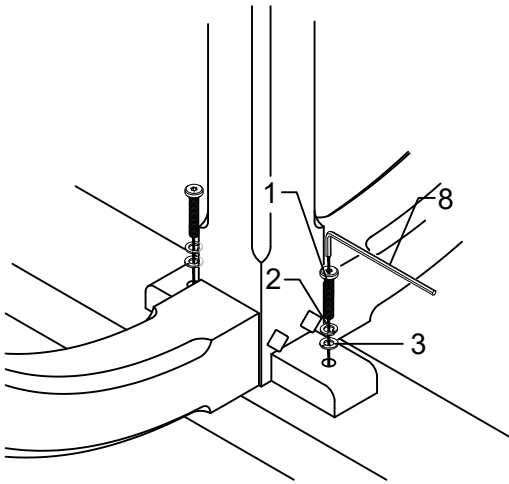


STEP: 3

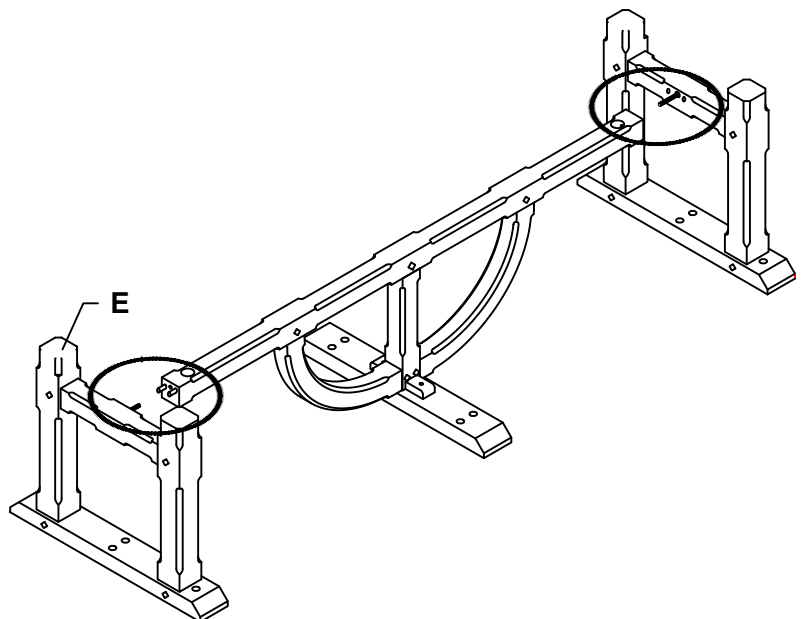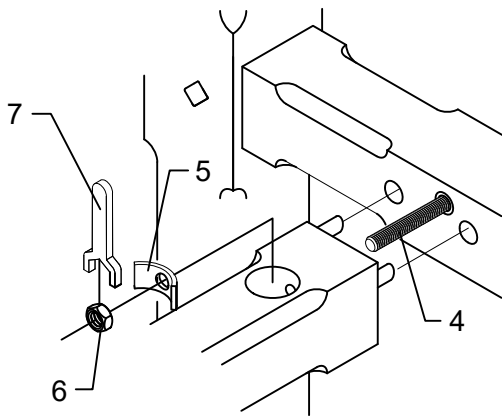  

THE ARCH DINING TABLE

ASSEMBLY INSTRUCTIONS

 STEP: 4

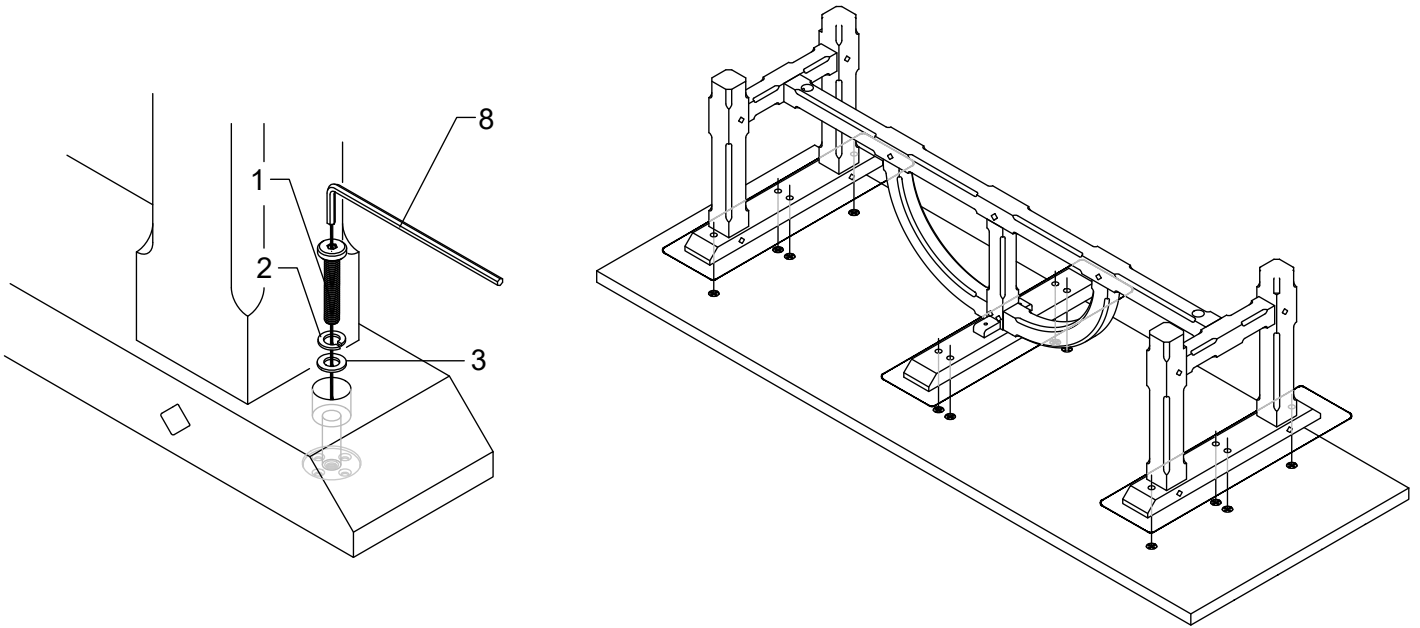

STEP: 5

ADJUST FLOOR LEVELERS

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

ADJUST FLOOR LEVELERS

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

