
 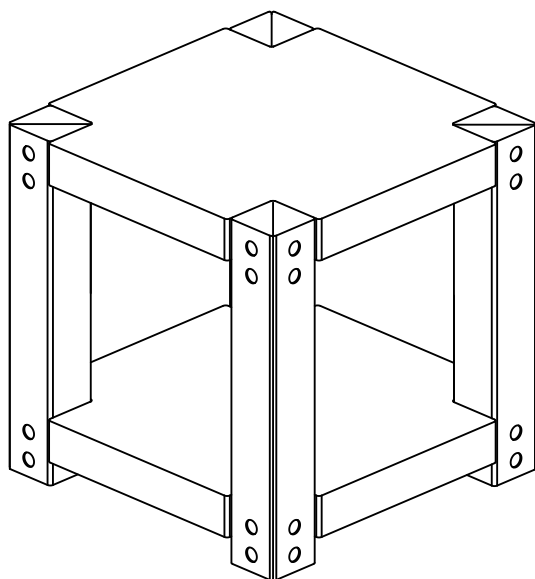






# ASSEMBLY INSTRUCTION FOR

## MODEL: EMMER END TABLE




### HARDWARE LIST

|   |                                                                                   |                  |               |    |
|---|-----------------------------------------------------------------------------------|------------------|---------------|----|
| A |  | Nut              | Ø5/16" x 8mm  | 16 |
| B |  | Lock Washer      | Ø5/16"        | 16 |
| C |  | Flat Washer      | Ø5/16" x 19mm | 16 |
| D |  | Hexagonal Wrench | 14mm          | 1  |

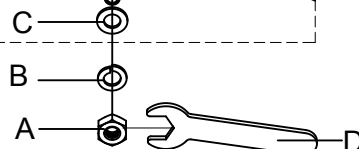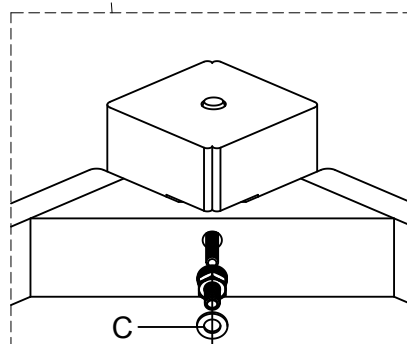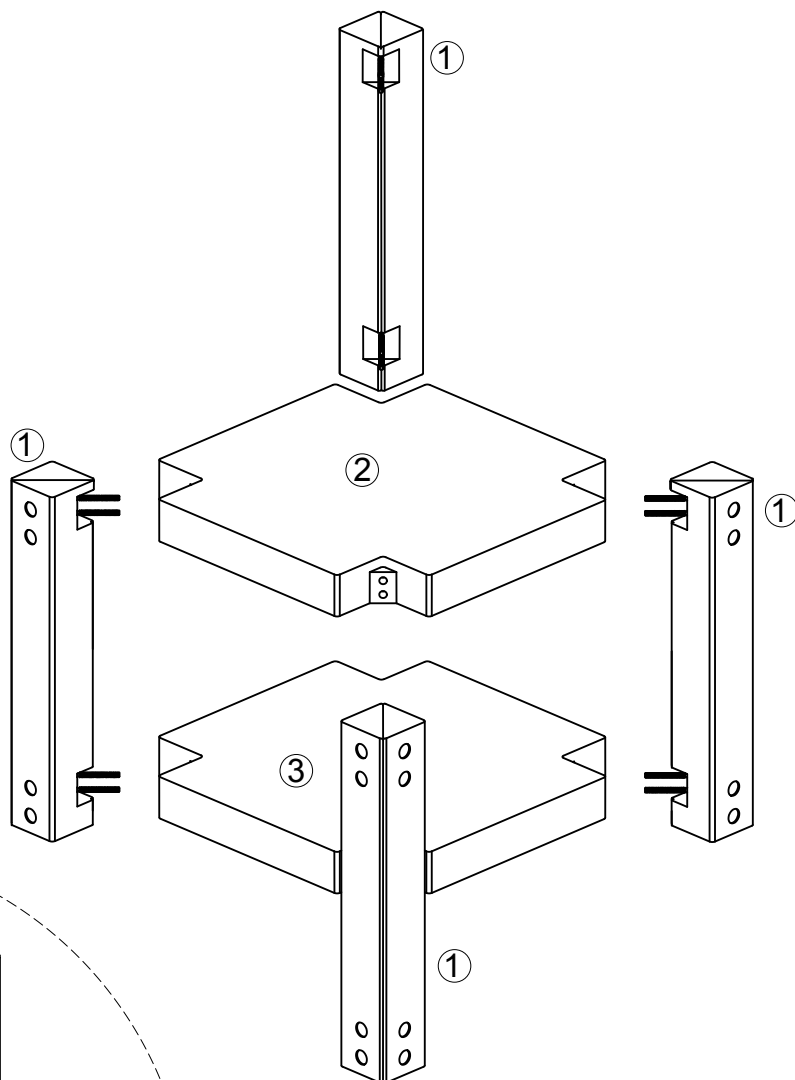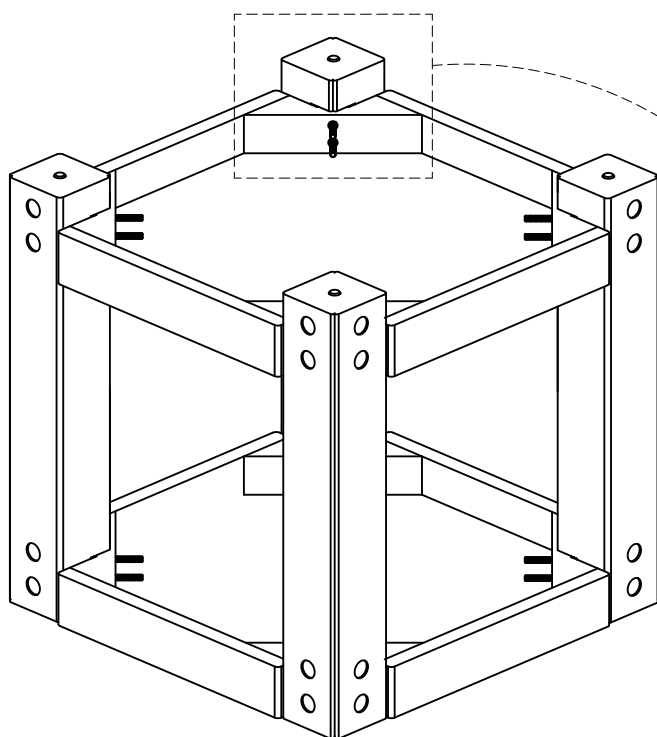

## ASSEMBLY INSTRUCTION FOR MODEL: EMMER END TABLE

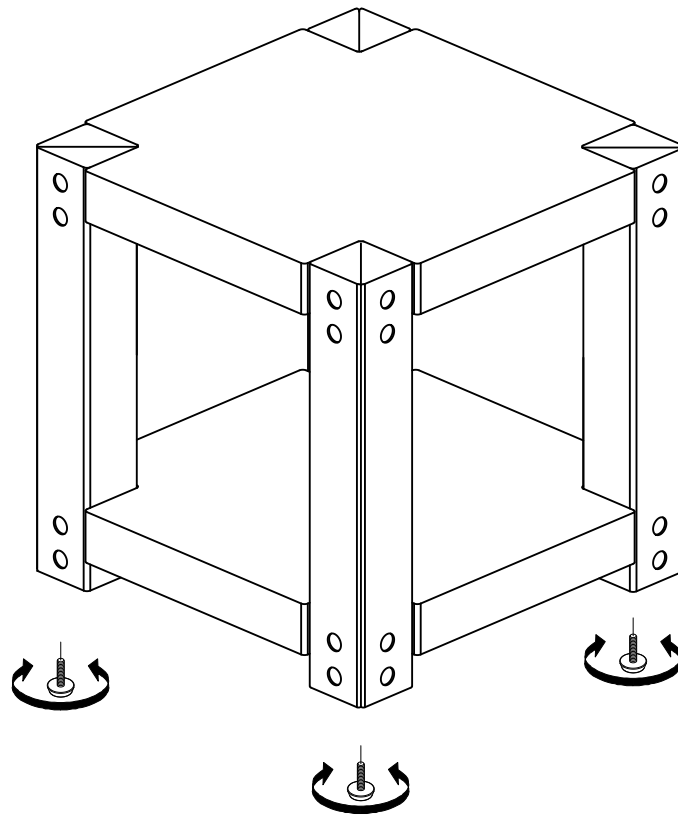

Adjustable Leveler

### Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

#### Adjust the Floor Levelers

**Check for Stability** - Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

**Locate the Levelers** - These are small adjustable feet found at the bottom corners of your furniture.

**Adjust as Needed** - Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.