


ASSEMBLY INSTRUCTION FOR
MODEL: ROSENELL MEDIA CONSOLE


1		Tipping Hardware	1 SET
A		Wooden Shelves	2 PCS
B		Shelf Pin	8 PCS
C		SCREW DRIVER [NOT INCLUDE]	1 PCS

ASSEMBLY INSTRUCTIONS


1. Insert Shelf Pins (B) into the holes inside the media and turn them to the right.
2. Place Wooden Shelves (A) on top of Shelf Pins (B).

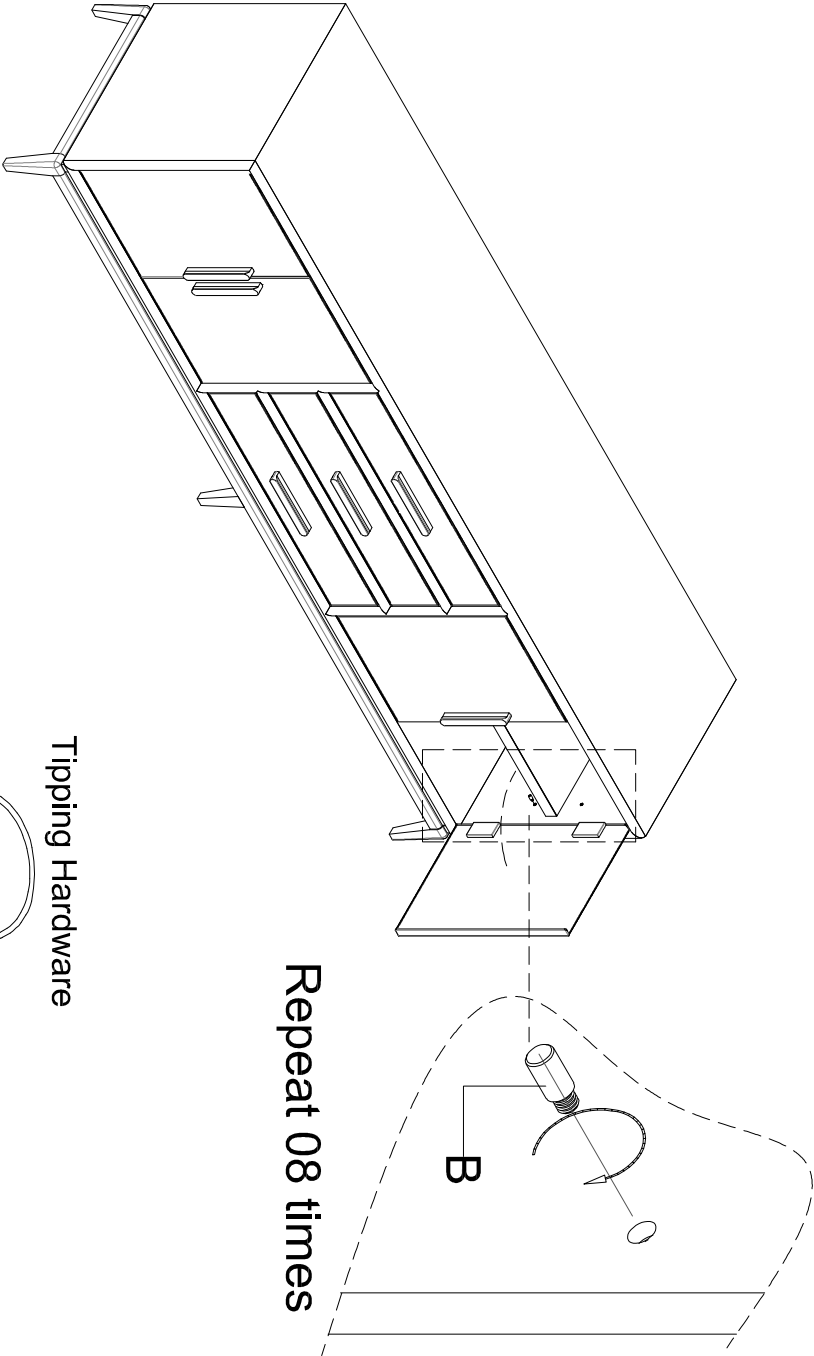

Tipping Hardware

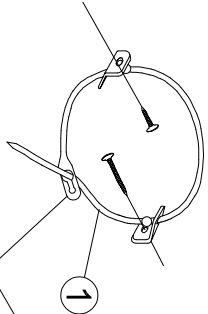

★ **REMARK:**There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

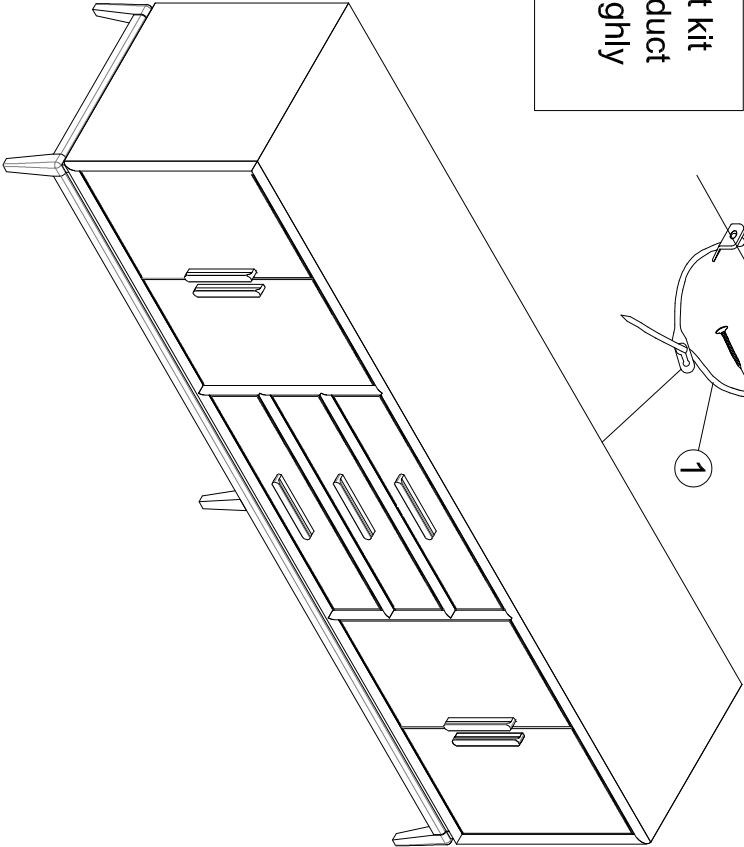

ASSEMBLY INSTRUCTION FOR MODEL: ROSENELL MEDIA CONSOLE

Adjusting Floor Levelers


Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Adjust the Floor Levelers

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

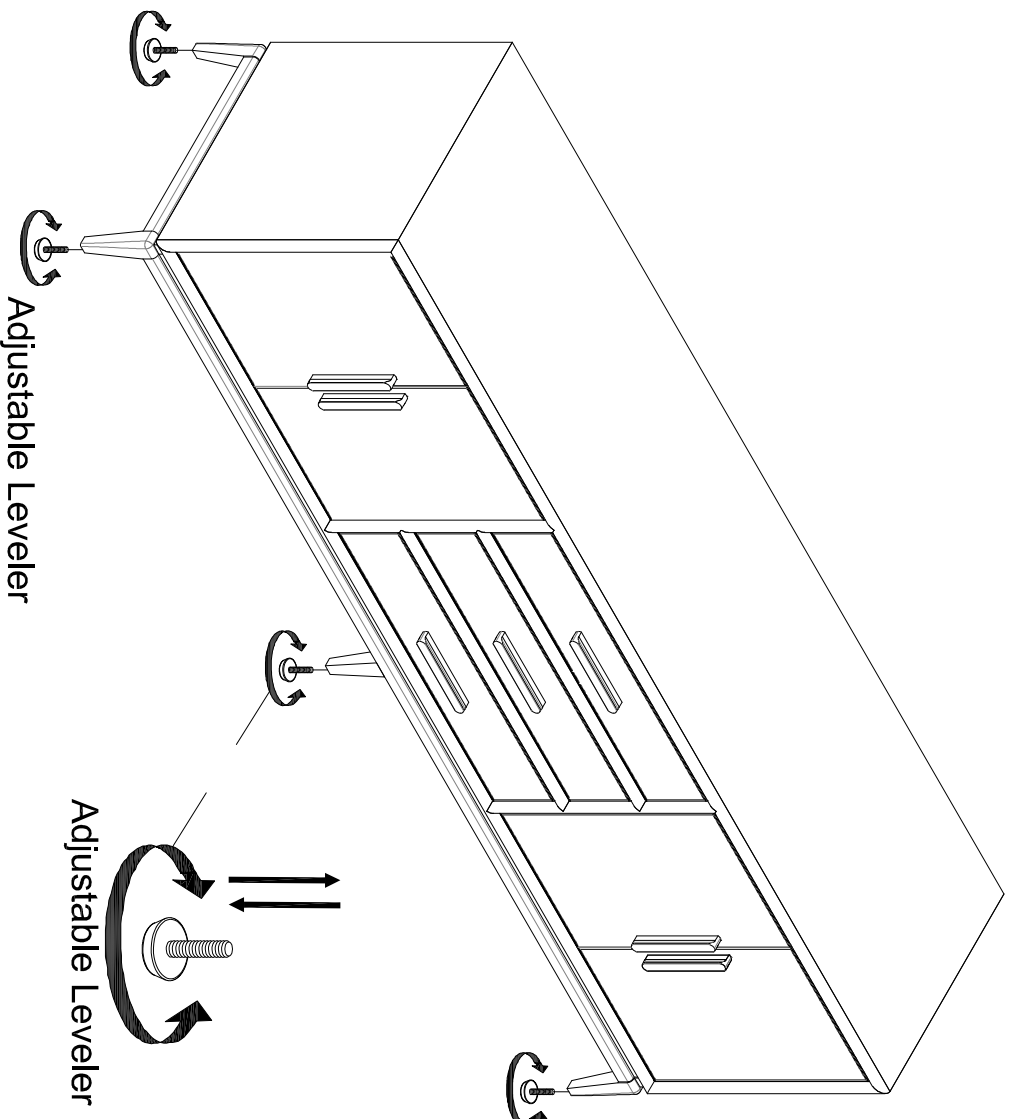

If you need further adjustments, repeat the process in small increments.

ASSEMBLY INSTRUCTION FOR MODEL: ROSENELL MEDIA CONSOLE

Adjusting door hinges


Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Adjust the Hinges (if Necessary)


Make sure that the furniture is level left to right and front to back before attempting to adjust the hinges

Identify the Hinges – The hinges have adjustment screws that control movement in different directions.


1. UP and Down Adjustment: To move the media door higher or lower

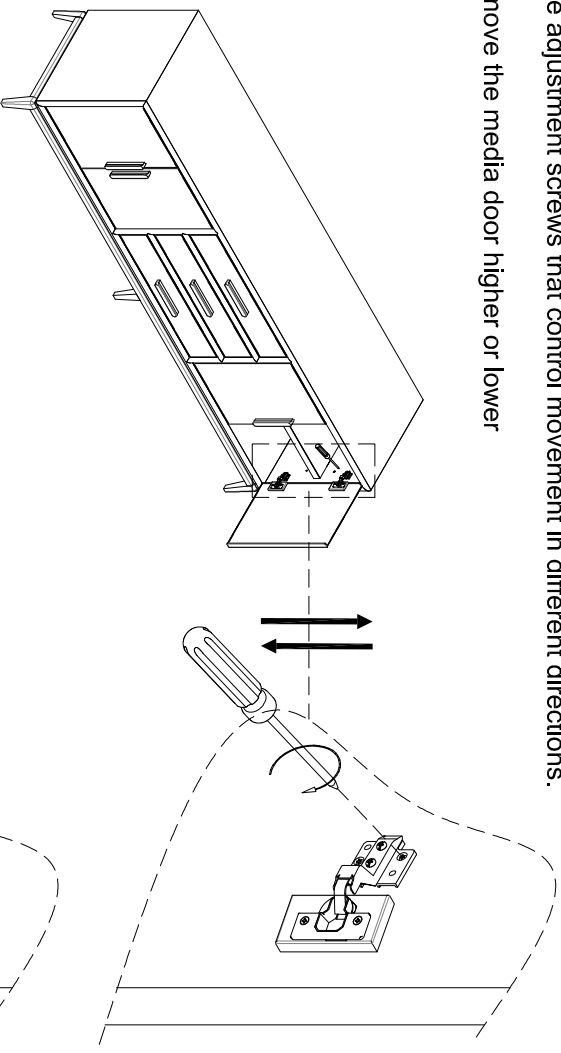

2. Left and Right Adjustment: To shift the media door sideways for alignment.

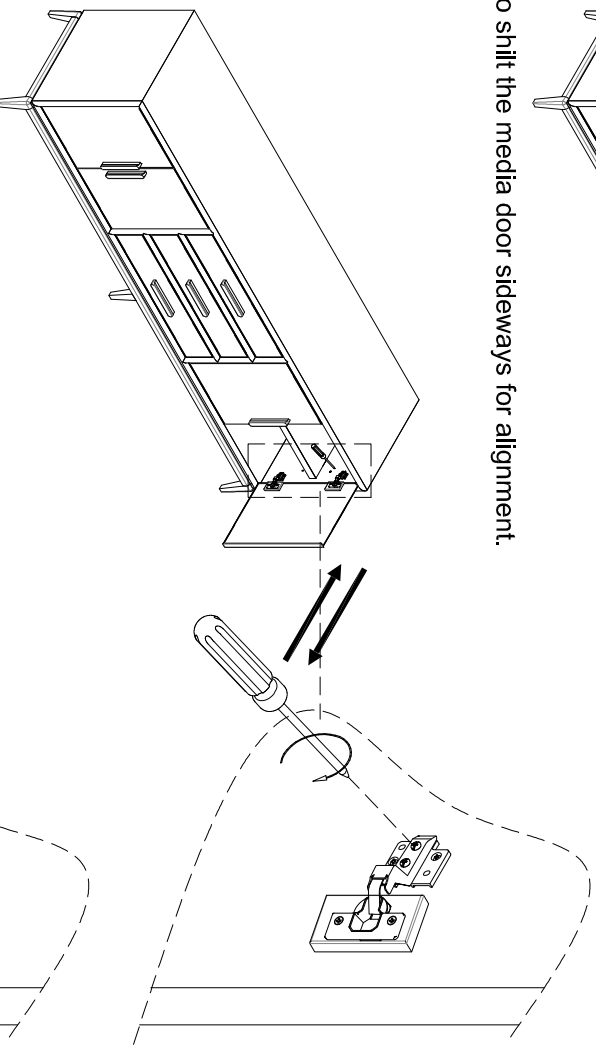

3. Back and forth adjustment: To move the media door closer to or farther from the media frame

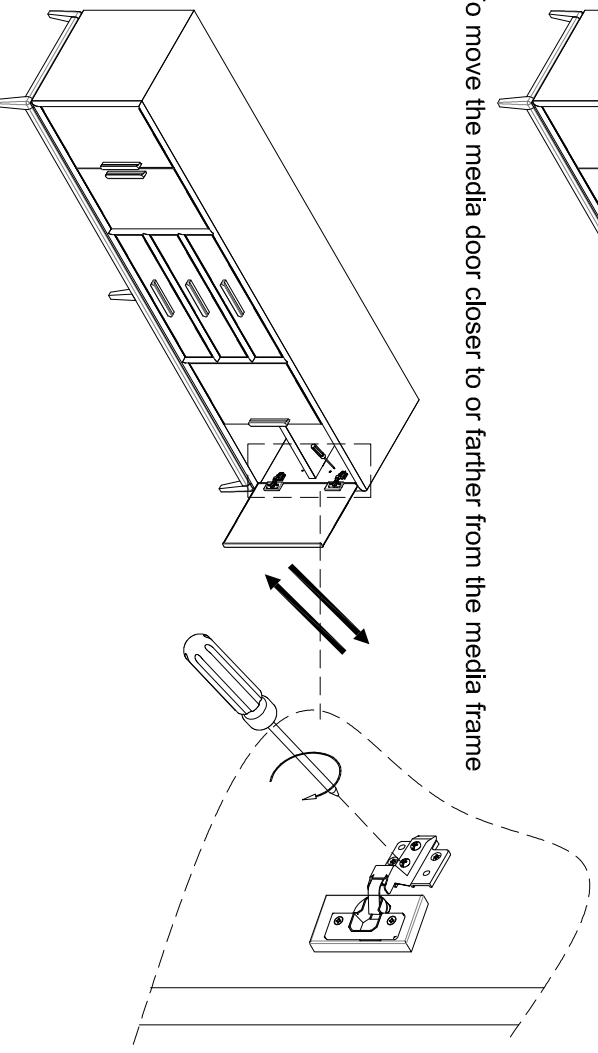

Important notes:

While adjusting the hinges, firmly hold the door in place to prevent it from falling and getting damaged.

Repeatedly tightening and loosening the hinge screws can cause the screw holes to widen. To avoid this, minimize adjustments and avoid overtightening.

ASSEMBLY INSTRUCTION FOR MODEL: ROSENELL MEDIA CONSOLE

I **WARNING**

For use with televisions weighing 175 lbs / 80 (Kg) or less.

Attention : this unit is not rated for use with a CRT type television.

I **WARNING**

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

I **WARNING**

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

All other support shelves should not be loaded more than 25 lbs. **DO NOT EXCEED RECOMMENDED LOAD.** Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.

Please use caution when using electrical equipment. Improper use could result in the risk of fire, electric shock or injury to persons associated with the use of this unit during operation, user-maintenance, loading, storage, and, as applicable, electrical issues including grounding or double-insulation.

Electronic components generate heat that may cause damage to the equipment. Please refer to the manufacturer's owner's manual for space and ventilations requirements
Do not allow children under 16 years to move cart.

