
ASSEMBLY INSTRUCTION FOR MODEL: ROSENELL MEDIA CONSOLE

	_		
C	В	\rightarrow	
SCREW DRIVER [NOT INCLUDE]	Shelf Pin	Wooden Shelves	Tipping Hardware
1 PCS	8 PCS	2 PCS	1 SET

ASSEMBLY INSTRUCTIONS

Insert Shelf Pins (B) into the holes inside the media and turn them to the right.

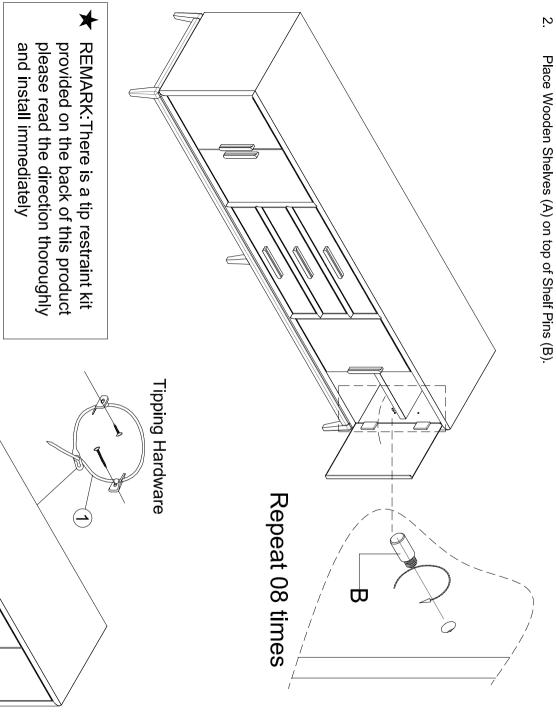

MADE IN VIET NAM

MODEL: ROSENELL MEDIA CONSOLE

Adjusting Floor Levelers


ensure stability and a seamless look. Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help

Adjust the Floor Levelers

levelers need adjusting. Check for Stability - Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

furniture. Make small adjustments and check stability after each turn. Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the

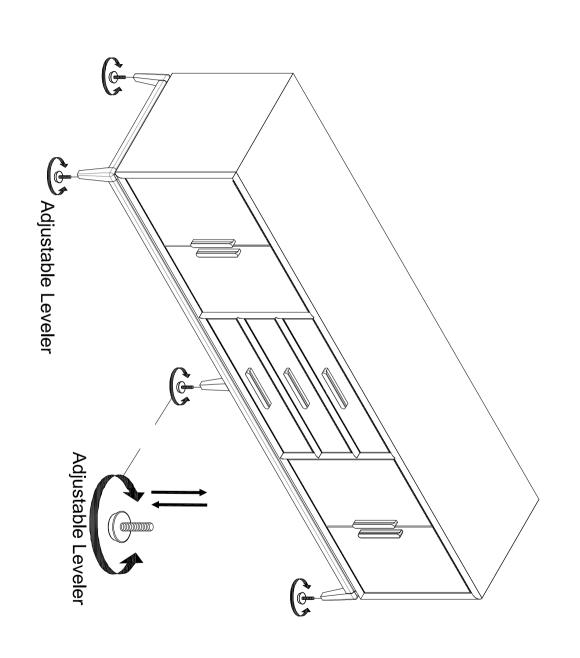

If you need further adjustments, repeat the process in small increments

MADE IN VIET NAM PAGE 2

ASSEMBLY INSTRUCTION FOR **MODEL: ROSENELL MEDIA CONSOLE**


Adjusting door hinges

ensure stability and a seamless look. transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during

Adjust the Hinges (If Necessary)

Make sure that the furniture is level left to right and front to back before attempting to adjust the hinges

Identify the Hinges —

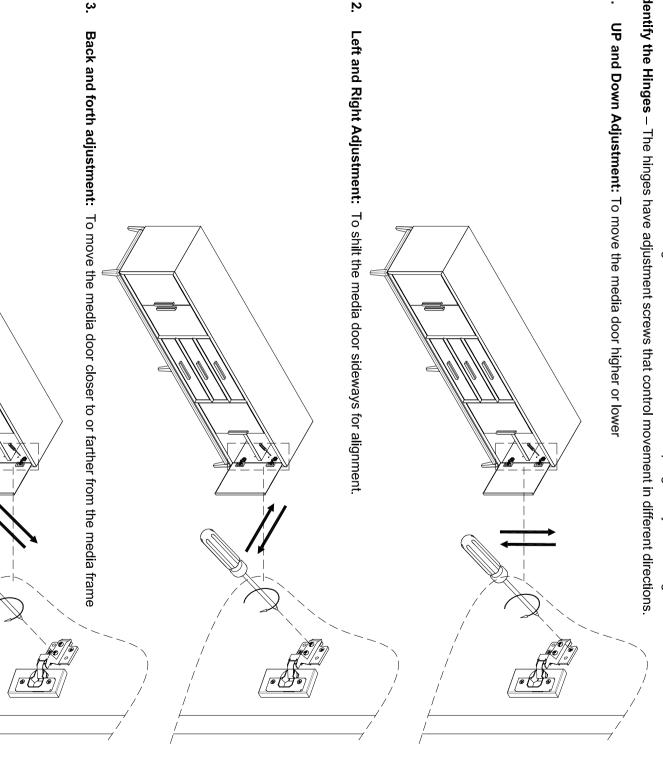

Important notes:

While adjusting the hinges, firmly hold the door in place to prevent it from falling and getting damaged.

adjustments and avoid overtightening. Repeatedly tightening and loosening the hinge screws can cause the screw holes to widen. To avoid this, minimize

MADE IN VIET NAM PAGE 3

ASSEMBLY INSTRUCTION FOR MODEL: ROSENELL MEDIA CONSOLE

! WARNING

For use with televisions weighing 175 lbs / 80 (Kg) or less

Attention: this unit is not rated for use with a CRT type television.

WARNING

over on to the child. toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or

WARNING

Relocating audio and/or video equipment to furniture not


specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

heavier televisions may result in instability causing tip over resulting in death or serious injury. All other support shelves should not be loaded more than 25 lbs. DO NOT EXCEED RECOMMENDED LOAD. Use with

Please use caution when using electrical equipment. Improper use could result in the risk of fire, electric shock or injury

electrical issues including grounding or double-insulation. persons associated with the use of this unit during operation, user-maintenance, loading, storage, and, as applicable

Electronic components generate heat that may cause damage to the equipment. Please refer to the manufacturer's owner's manual for space and ventilations requirements

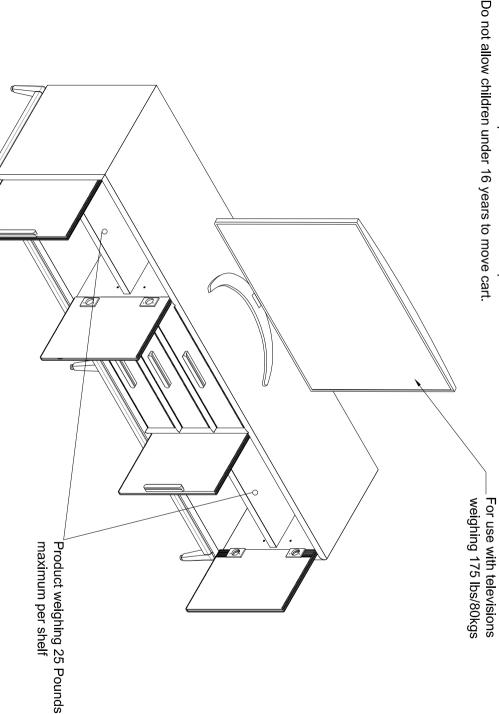

MADE IN VIET NAM PAGE 4