

BLAKE DOOR PULL ASSEMBLY INSTRUCTIONS

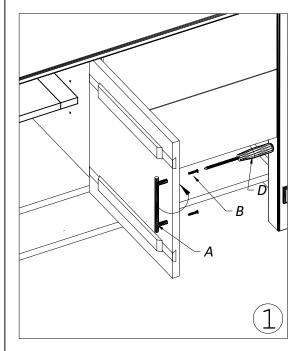


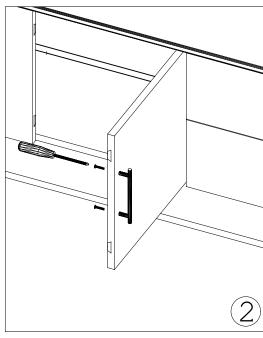



| PARTS LIST | |
|---------------|--|
| А | IRON PULL |
| В | SCREW 3/16"x1" |
| С | SCREW 3/16"x1.5" |
| TOOL REQUIRED | |
| D | PHILLIPS SCREW DRIVER NOT INCLUDED |

NOTE: IRON PULL IS PRE ASSEMBLED

BLAKE DRAWER PULL ASSEMBLY INSTRUCTIONS

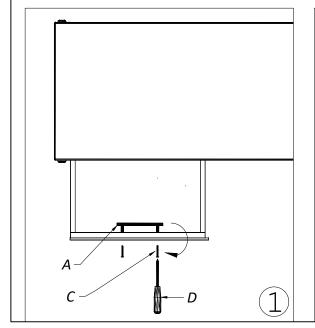

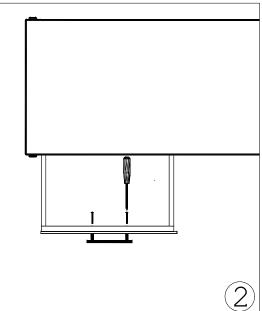

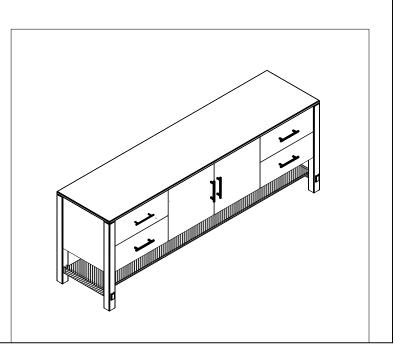

Adjusting Floor Levelers

Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

Step 1: Adjust the Floor Levelers

- Check for Stability- Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.
- Locate the Levelers These are small adjustable feet found at the bottom corners of your furniture.
- Adjust as Needed- Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

