 
 


ASSEMBLY INSTRUCTION

PELLMAN CHANDELIER

PARTS ENCLOSED

ITEMS	DIAGRAM	DESCRIPTION	QTY.
(A)		Junction Box (Not included) 100LB. MIN. FIXTURE RATED	1
(B)		Mounting Screws (Not included)	2 Sets
(C1)		Wire Nut	3
(D1)		Ceiling Plate	1
(D2)		Canopy	1
(D3)		Screw Cap	2
(E)		Body	1
(F 1)		Small Glass Cover	6
(F 2)		Large Glass Cover	12
(G)		Hanging Rods	3
(H)		Bulbs	18(Not included)
(I)		Allen Screwdriver	1

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation.
2. This fixture has been rated for: 18x7.5-watt maximum E12 standard bulbs (Not included).
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The ceiling must have at least the capacity of 5 times the weight of the ceiling light.
For this light at least a ceiling capacity of 45kg (99.20lbs) is required.
5. The manufacturer and distributor accepts no liability for incorrect installation.
6. For indoor use only.
7. Keep away from children.

WARNINGS:

1. Turn-off electricity supply at main circuit panel before installing. Do not connect electricity supply until your lighting fixture is fully assembled and installed.
2. All wires are connected. Do not remove the lighting fixture from its packaging by pulling on the power cord, as a bad connection may result.
3. To reduce the risk of fire, electrical shock, or personal injury, always turn off the lighting fixture and allow it to cool prior to replacing light bulbs. Do not touch bulbs when fixture is turned on or look directly at light bulbs. Keep flammable materials away from light bulbs.
4. Deviation from instructions may result in a risk of fire or electric shock.

PRODUCT DESCRIPTION:

Height: 34cm(13.38in)
Diameter: 120cm(47.25in)
Weight: 9.0kg (19.84lbs)
Grounded / Hardwired

ASSEMBLY INSTRUCTIONS:

1. Carefully remove all parts from the box and remove all plastic covering.
2. Turn OFF power to the junction box where the lighting fixture will be installed.
3. Loosen the screw cap (D3) and remove the ceiling plate (D1) from the canopy (D2).
4. Attach the ceiling plate (D1) to ceiling with mounting screws (B).
5. Fasten 3 hanging rods (G) to one long hanging rod.
6. Insert the main cable into hanging rod (G) and through the canopy (D2).
7. Attach hanging rod to chandelier body (E) and fasten bolt by allen screwdriver.
8. Fasten canopy (D2) to hanging rod (G)
9. Carefully inspect the fixture wires. One is the ground wire (marked with ⊕). The second is the neutral wire (marked with N). The third wire is the live/hot wire (marked with L)
10. For US Market: Connect the fixture ground wire (marked with ⊕) to the power supply ground wire, connect the fixture neutral wire (marked with N) to the power supply neutral wire, and connect the fixture live/hot wire (marked with L) to the power supply live/hot wire with wire nuts (C1).
11. Move the canopy (D2) up to the ceiling, then fasten the screw cap (D3).
12. Fasten light bulbs (H) to the lampholders.
13. Fasten the glass cover (F1 & F2) to lamp holder according to drawing showed as left.
14. Restore power to the junction box and test lighting fixture.

CARE INSTRUCTIONS:

1. Make sure that the power is turned off and bulb has cooled before handling.
2. Wipe clean with a dry cloth / mild soapy solution. Do not use corrosive cleaners.
3. The cable/cord of this lighting fixture cannot be replaced: If the cable is damaged, do not use the lighting fixture.

WEEE STATEMENT:



Disposal of waste equipment by users.

This symbol means do not dispose of your product with your other household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment. For more information, please contact your household waste disposal service.

