




ASSEMBLY INSTRUCTION FOR
MODEL: VAN 7D DRESSER

★ **REMARK:** There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

1		Bolts M6x35	7
2		Handles	7
3		Allen Key K4	1
4		Tipping Hardware	2

Step 1

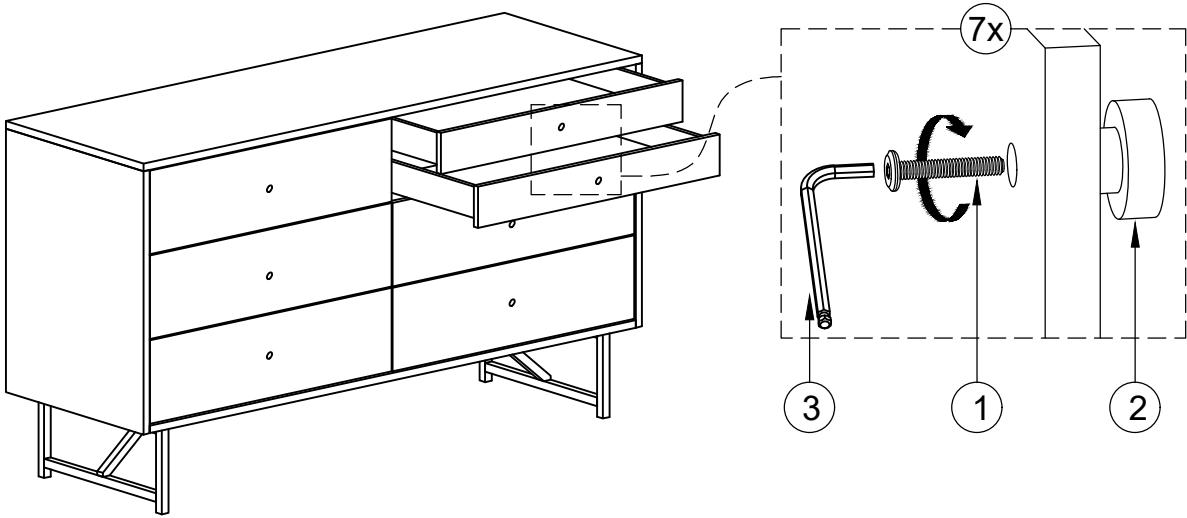

Step 2

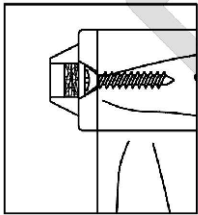


Figure 1

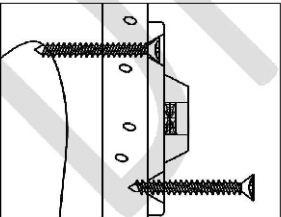


Figure 2

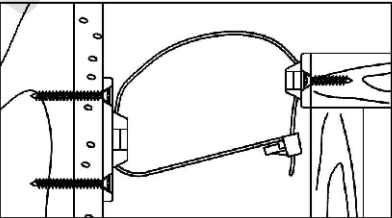


Figure 3

