


Wood Screws #8x3"



6

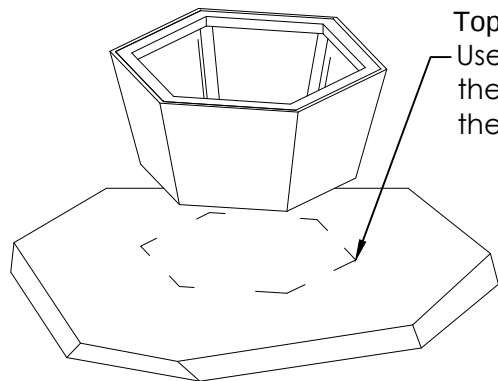

Top doesn't have pre-drilled holes.
Use grey marks underneath
the cover to align the base on
the top before install the screws

1

2

3

4

