


ASSEMBLY INSTRUCTION FOR MODEL: NAVI TRUNK


HARDWARE LIST				
Α	0	Flat washer	6mm x 16mm	8
В	•	Spring washer	6mm	8
С	9	Bolts M6x45	M6x45mm	8
D		Allen Wrench	4mm	1

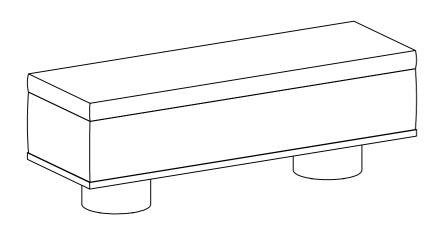

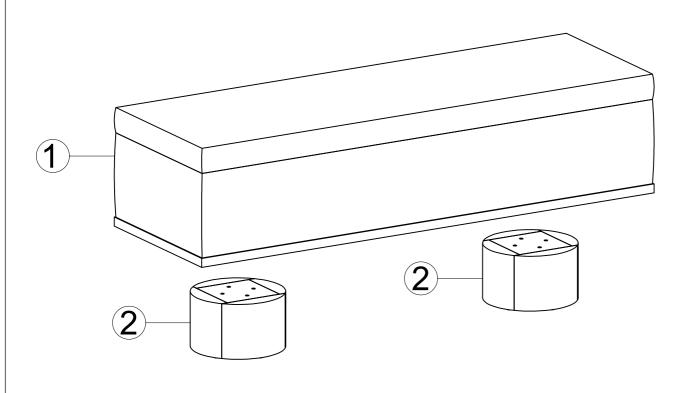

MADE IN VIET NAM PAGE 1

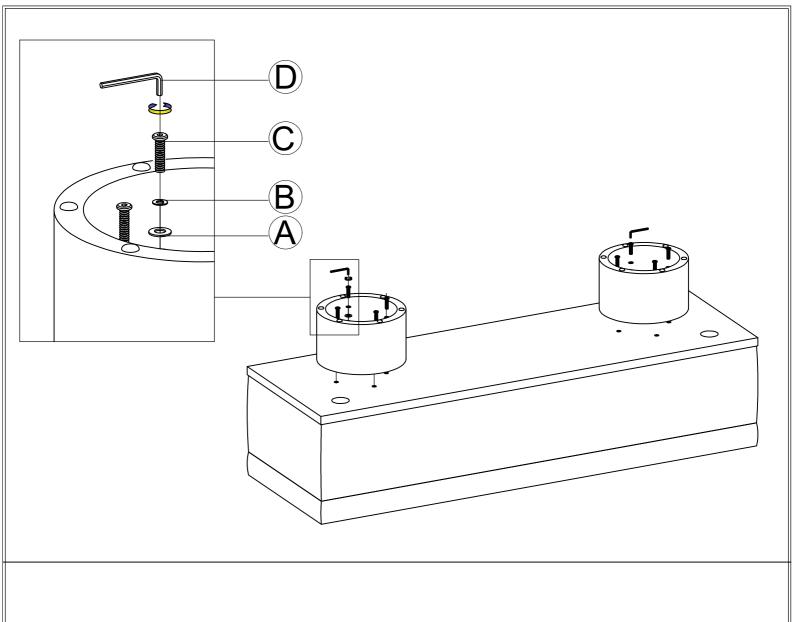

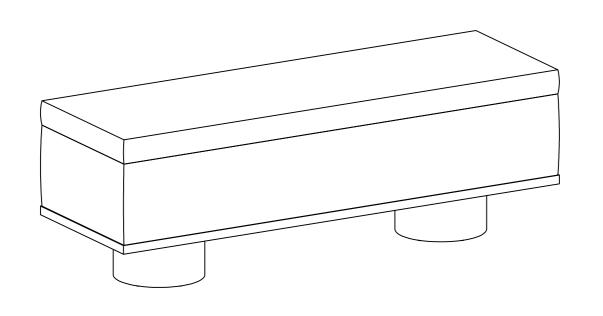

MADE IN VIET NAM