



ASSEMBLY INSTRUCTION FOR
MODEL: Van Sideboard

1		Bolts M6x25	4
2		Handles	4
3		Key K4	1
4		Tipping Hardware	2

★ REMARK: There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

Step 1

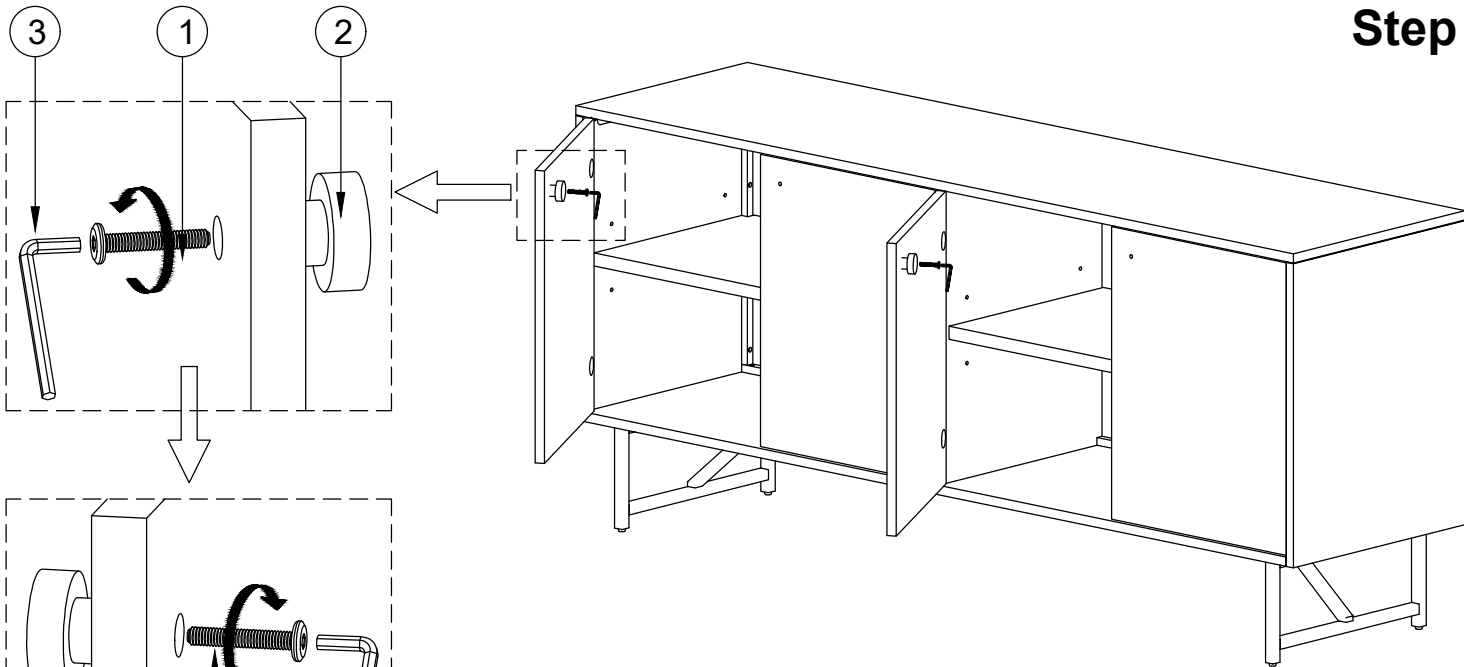

Step 2

Tipping Hardware



4



4

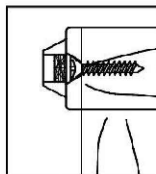


Figure 1

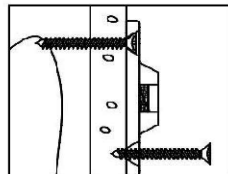


Figure 2



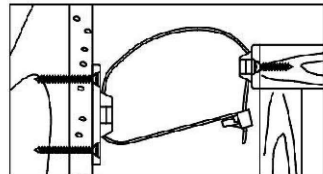


Figure 3

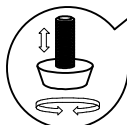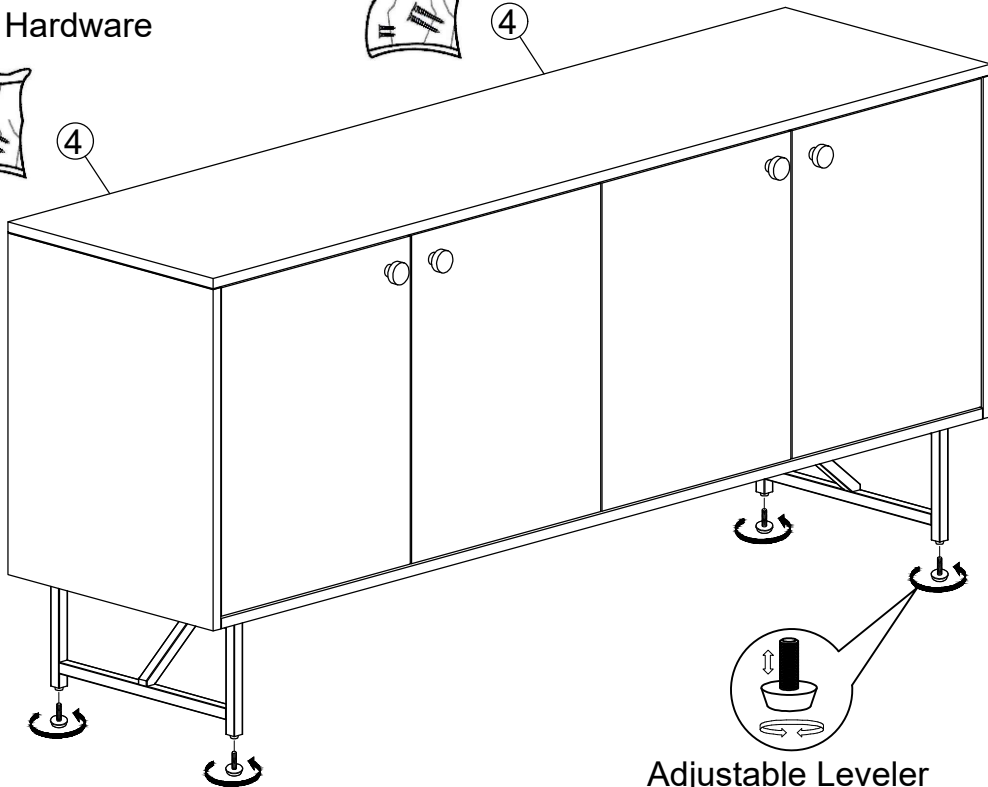

Adjustable Leveler