


ASSEMBLY INSTRUCTION FOR

MODEL: PICKFORD DINNING TABLE




HARDWARE LIST				
Α	\bigcirc	Vood dowels	8mm x 30mm	4
В		Allen Wrench	M4	1
С	000 -	Bolt	8mm x 698mm	4
D	000 -	Bolt	8mm x 680mm	2

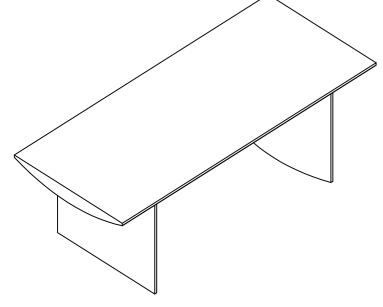


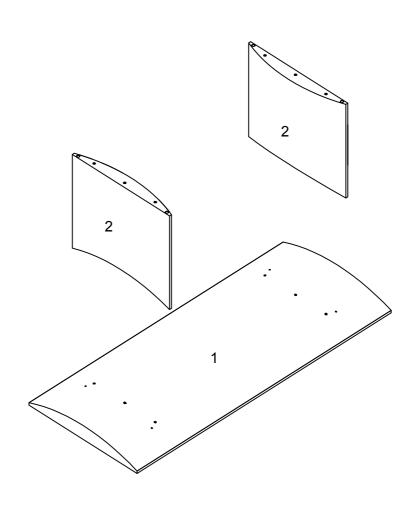

MADE IN VIET NAM PAGE 1/3


ASSEMBLY INSTRUCTION FOR MODEL: PICKFORD DINNING TABLE

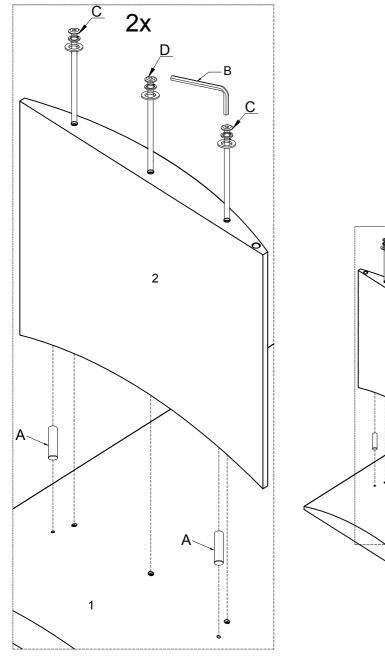

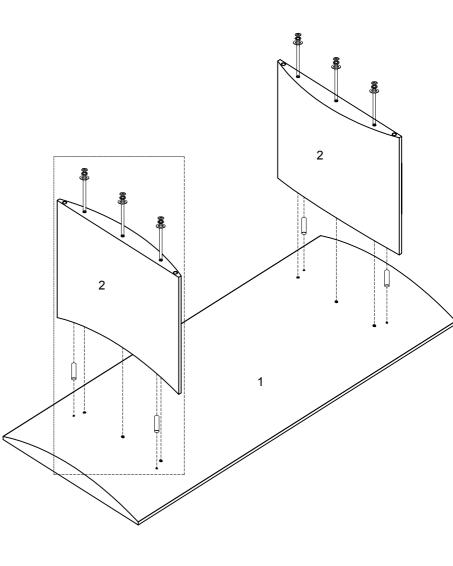

MADE IN VIET NAM PAGE 2/3

ASSEMBLY INSTRUCTION FOR MODEL: PICKFORD DINNING TABLE

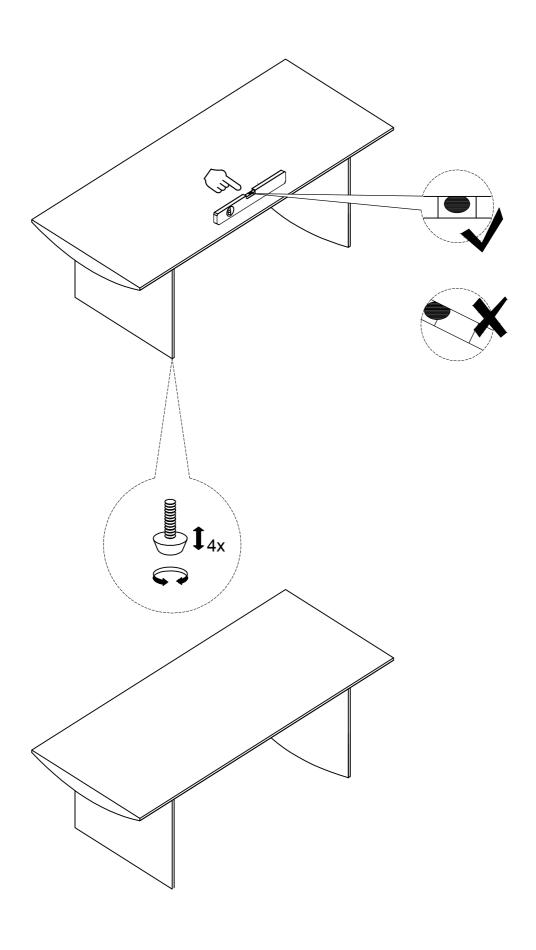

MADE IN VIET NAM PAGE 3/3