





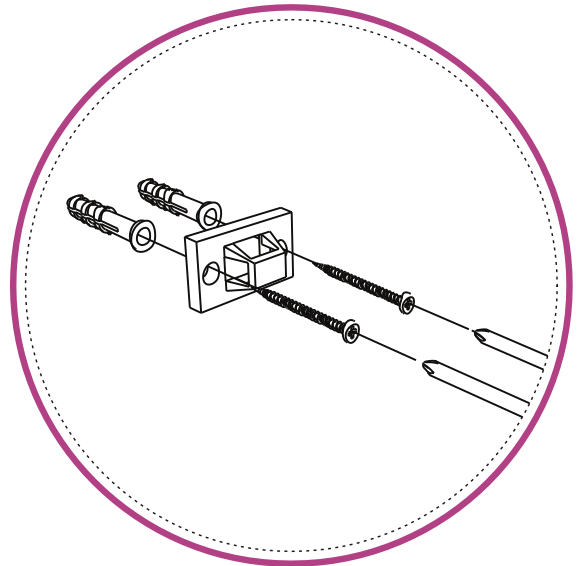
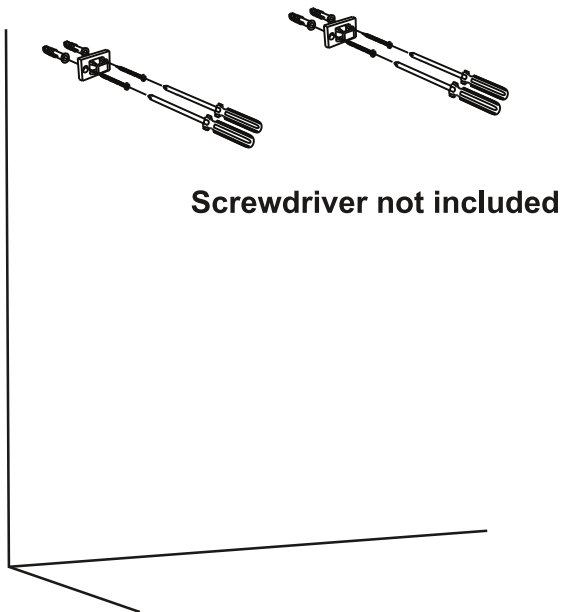
1

GULLIVER FLOOR MIRROR
ANTI TIP KIT INSTRUCTIONS

	X04 WALL CLIP		X08 SCREW
	X02 ZIP TIE		X08 PLASTIC WALL ANCHORS

2

Wall



3

Wall

