


ASSEMBLY INSTRUCTION FOR HENRY BED - QUEEN

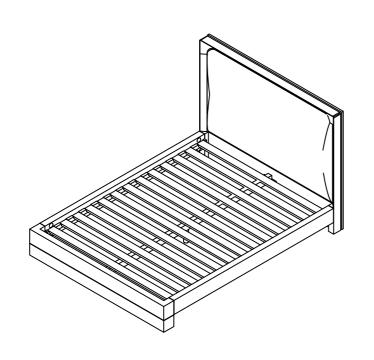


HARDWARE LIST				
Α		Threaded Rod	M8 x 100mm	8
В	C	Curved Washer	Ø9 x T2mm	8
С	©	Lock Washer	Ø14 x Ø9 x T2mm	8
D	6	Hex Nut	M8 x H5 x D14mm	8
Е	25	Wrench	14.5mm	2

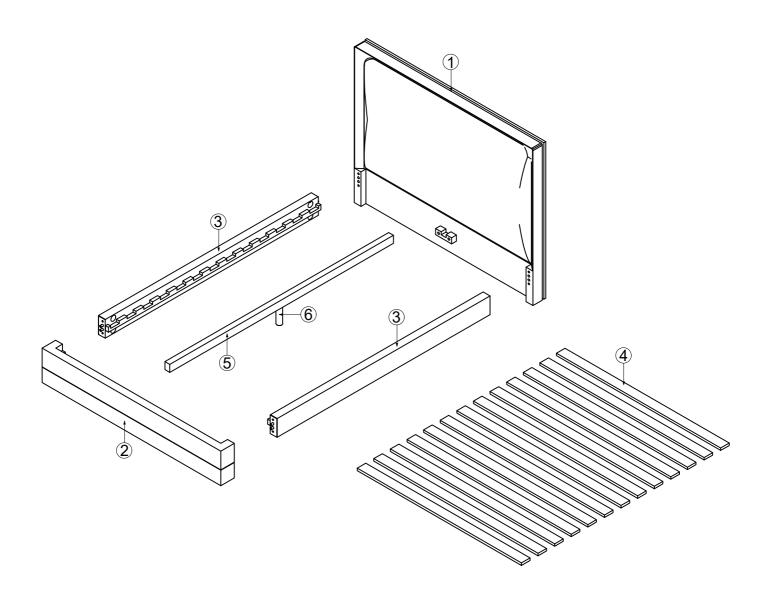

MADE IN VIET NAM PAGE 1/3

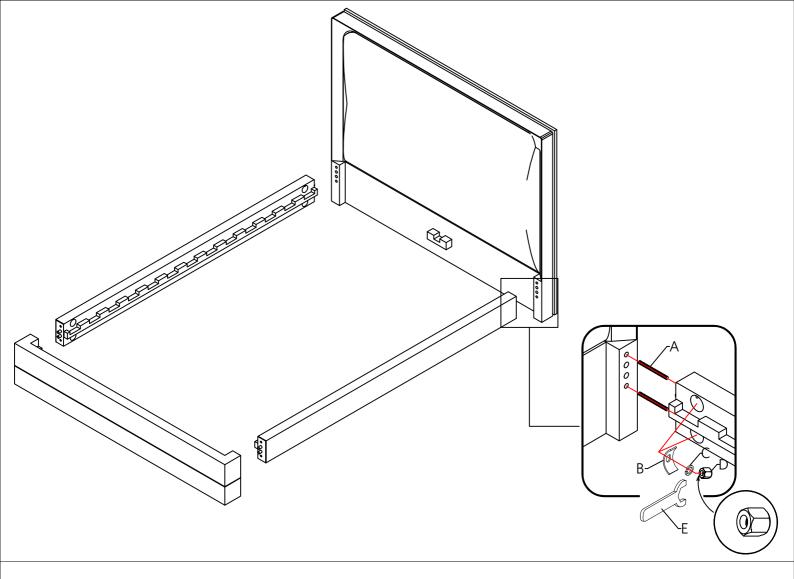

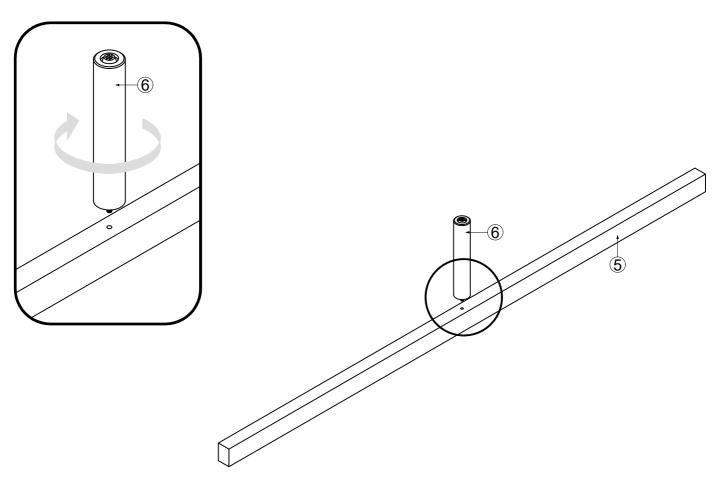

MADE IN VIET NAM PAGE 2/3

