

ASSEMBLY INSTRUCTION

Thurston Sofa

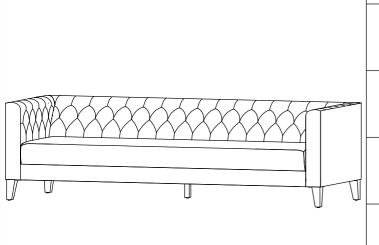

HARDWARE LIST			
Α		Bolt Ø8 x 30mm	8
В	©	Lock Washer Ø8 x 13mm	8
С	©	Flat Washer Ø8 x 19mm	8
D		Allen Key M5	1

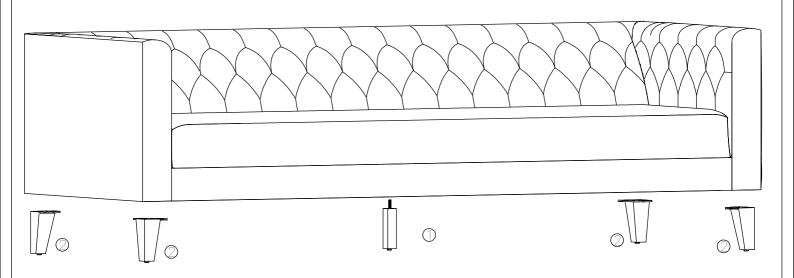

MADE IN VIETNAM

PAGE 1

