
THE 'PLEASE NO MORE DOORS' CABINET

ASSEMBLY INSTRUCTIONS

* REMARK: There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

	HARDWARE LIST		
1		[1] Anti-tip Kit Set	

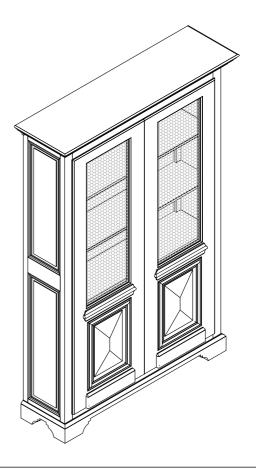

STEP: 1

ADJUST FLOOR LEVELERS


Your furniture has been expertly crafted and pre-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.


ADJUST FLOOR LEVELERS

Check for Stability – Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the Levelers – These are small adjustable feet found at the bottom corners of your furniture.

Adjust as Needed – Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

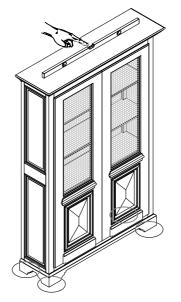

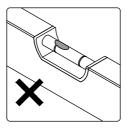







MADE IN VIETNAM PAGE 1 OF 2

THE 'PLEASE NO MORE DOORS' CABINET


ASSEMBLY INSTRUCTIONS

STEP: 2

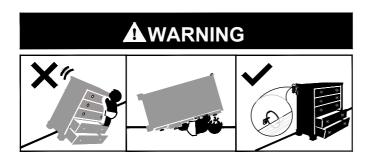


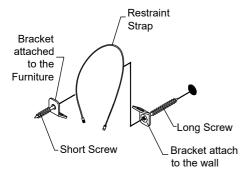


NOTE: Refer the instructions on the antitip kit bag.

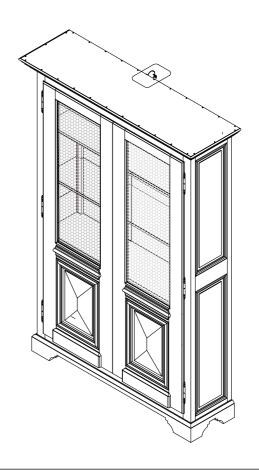

STEP: 3

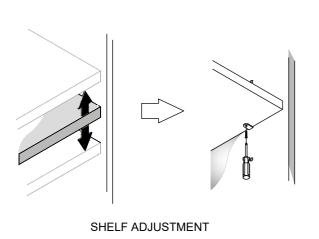

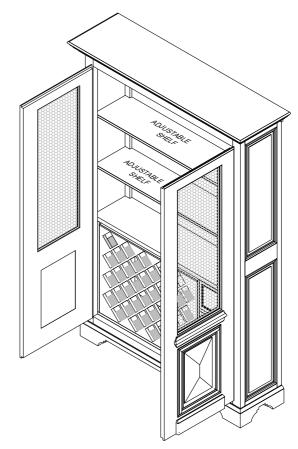

MADE IN VIETNAM PAGE 2 OF 2