
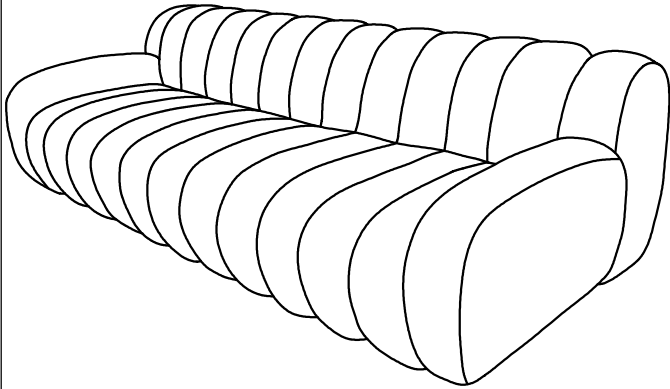



ASSEMBLY INSTRUCTION

CARINA SOFA




HARDWARE LIST

A		Bolt M6x40	x8
B		#4	x1
C		Felt pads Ø50	x4

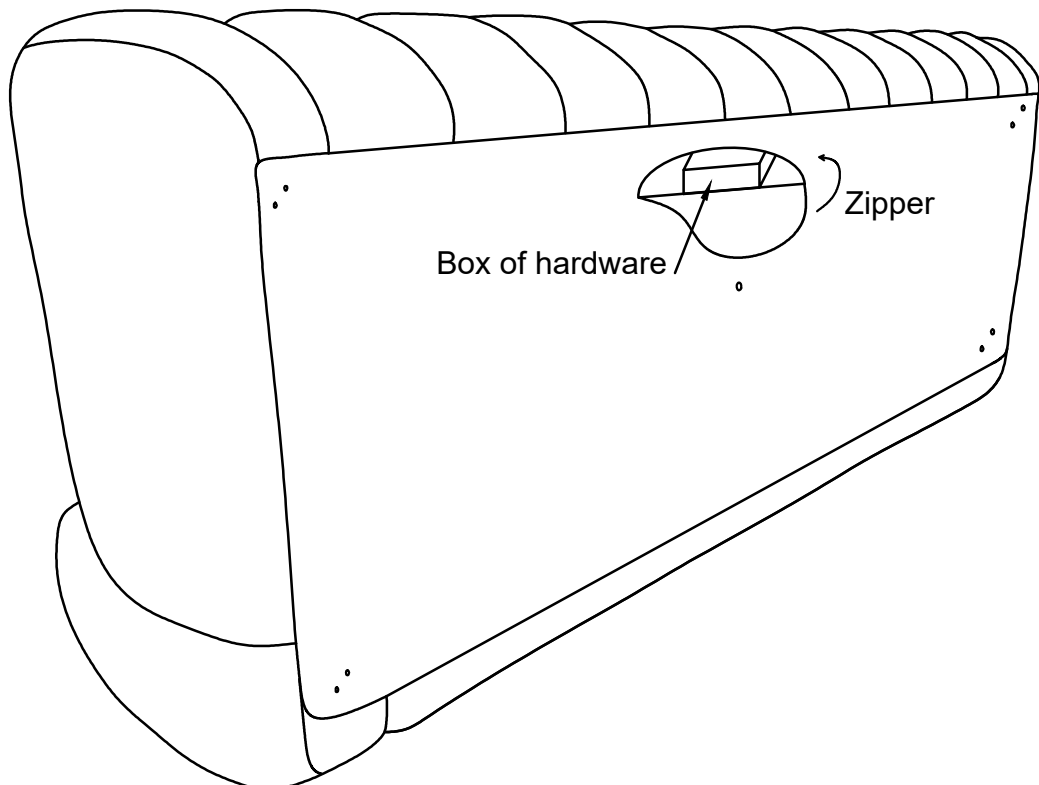

1

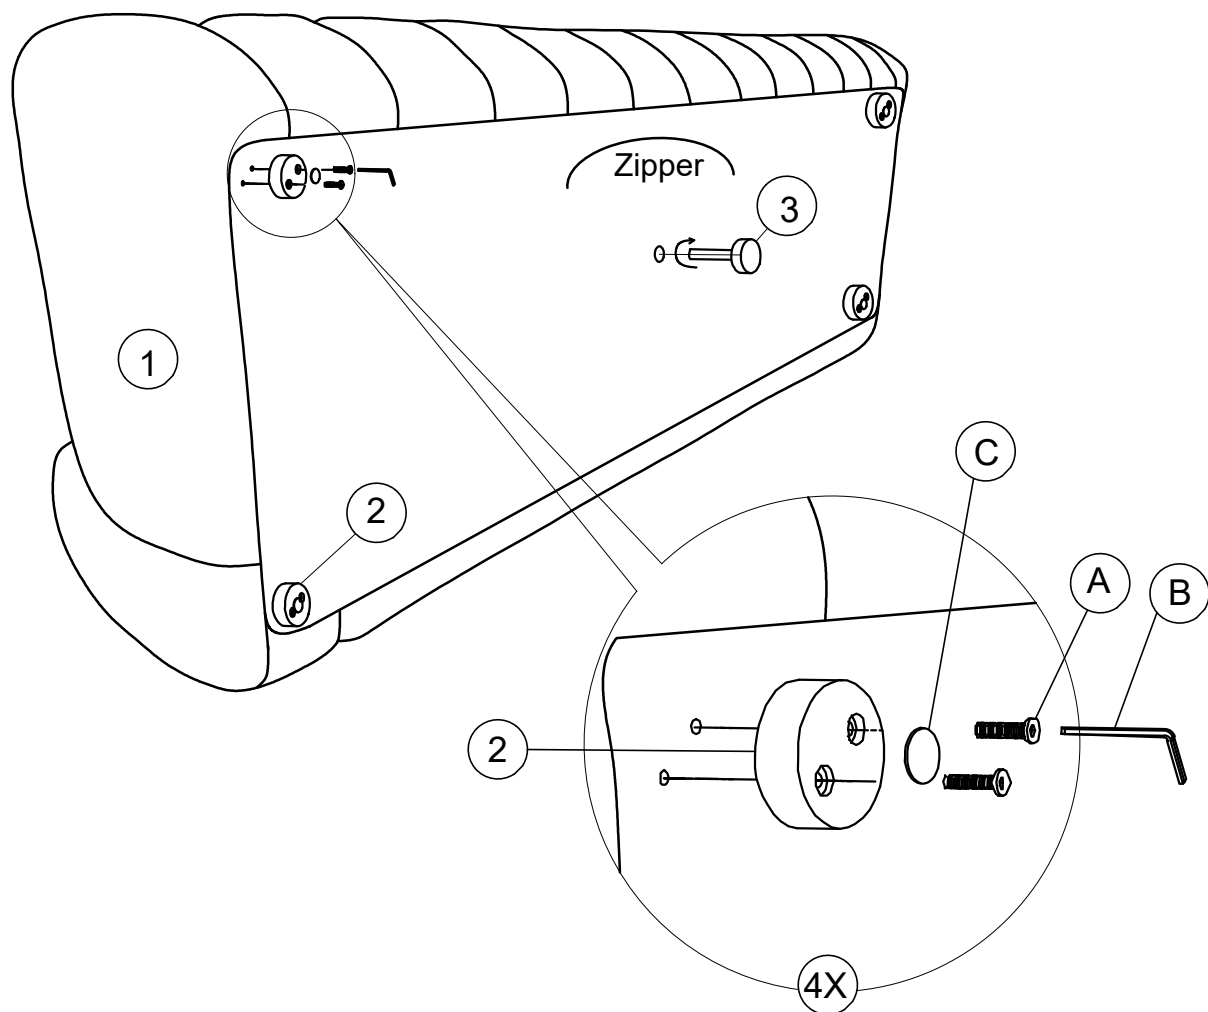

2

