


240943-001 DODIE DOUBLE SCONCE-MATTE WHITE PLASTER

PARTS ENCLOSED:

ITEM	DESCRIPTION	QTY.
(A)	Wire Connector	2
(B)	Canopy Screw	1
(C)	Mounting Screw	2
(D)	Mounting Plate	1
(E)	Sconce	1
(F)	Bulb (not included)	2
(G)	Shade	2
(H)	Metal Shade Ring	2

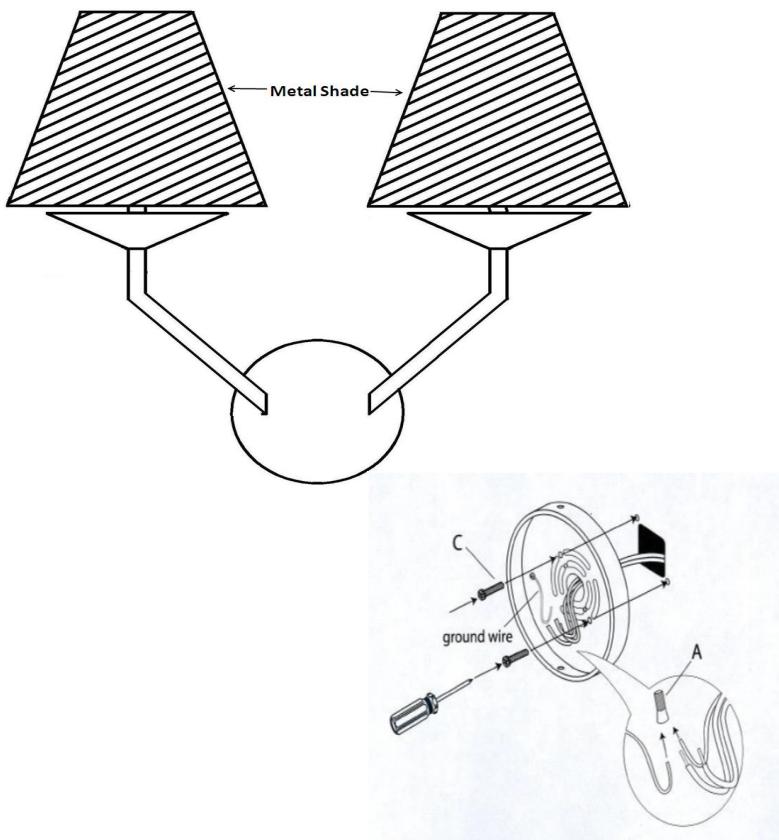

IMPORTANT SAFETY INSTRUCTIONS:

1. Use an authorized and certified electrician for consultation and installation. Electrician must be familiar with Wall Sconce Assembly.
2. It is recommended to use 2 x 25 - Watt maximum Type B standard bulb.
3. To avoid the risk of fire, do not exceed the recommended wattage.
4. The manufacturer and distributor accept no liability for incorrect installation.
5. For indoor use only.
6. Keep away from children.

WARNINGS:

1. Turn - off electricity supply at main circuit panel before installing. Do not connect electricity supply until your wall light is fully assembled and installed.
- 2 To reduce the risk of fire, electrical shock, or personal injury, always turn off the Wall light and allow it to cool prior to replacing light bulb. Do not touch bulb when fixture is turned on or look directly at light bulb. Keep flammable materials away from light bulb.
3. Deviation from instruction may result in a risk of fire or electric shock. Please read all instructions completely before installation.

TO ASSEMBLE:

1. Carefully unpack the sconce. Do not discard any material till assembly is complete.
2. Turn OFF power to the Outlet box where the wall light will be installed.
3. Remove the Mounting plate (D) from the Sconce by unscrewing canopy screw (B)
4. Attach mounting plate to wall or junction box using mounting screws (C).
5. Connect ground wire from wall to ground wire from sconce using wire connector (A).
6. Attach house wire to sconce wires as shown. Fasten the pairs together with a wire connectors (A). **DO NOT REVERSE THE HOT & NEUTRAL CONNECTION OR SAFETY WILL BE COMPROMISED.**
7. Attach front face of light to back plate by inserting canopy screw (B) through predrilled hole in front face and into back plate as shown. Tighten using screwdriver.
8. Fix the Shades on the Socket by tightening with the Metal Shade Ring.
9. Insert (2) TYPE B 25W BULB (not included) into the socket.

CARE INSTRUCTIONS:

To clean, use a soft dry cloth only. Do not use any chemical or abrasive cleaners.