
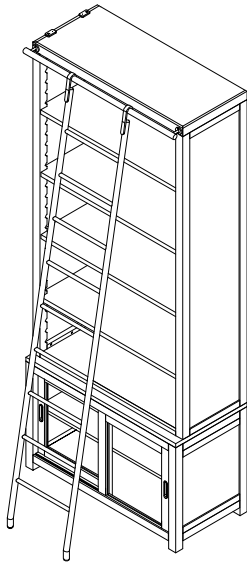









ASSEMBLY INSTRUCTION FOR

ADMONT BOOKCASE




Hardware List


A		Bolt	6x20mm	12
B		Allen Key	4mm	1
C		Screw	4x30mm	2
D		Tipping Hardware		1 set

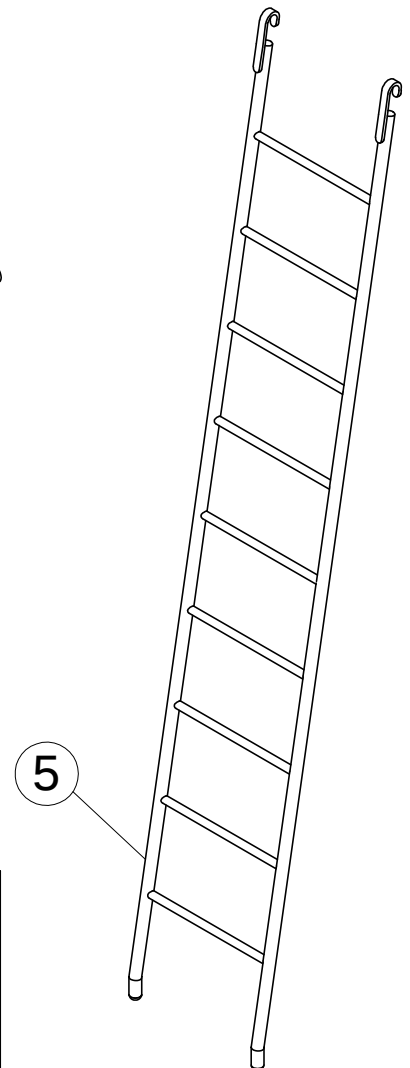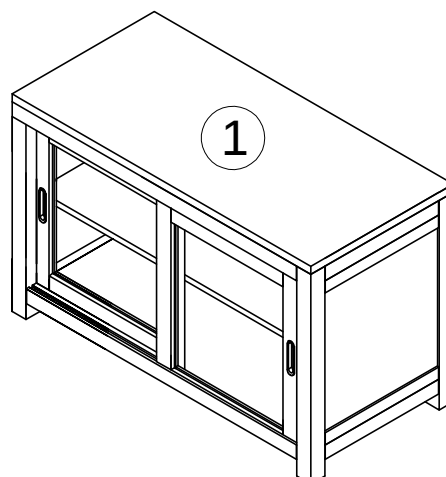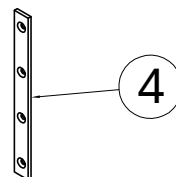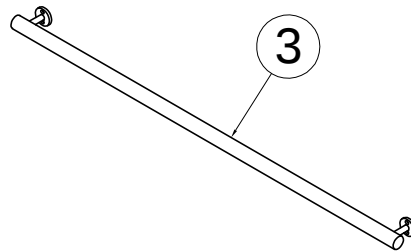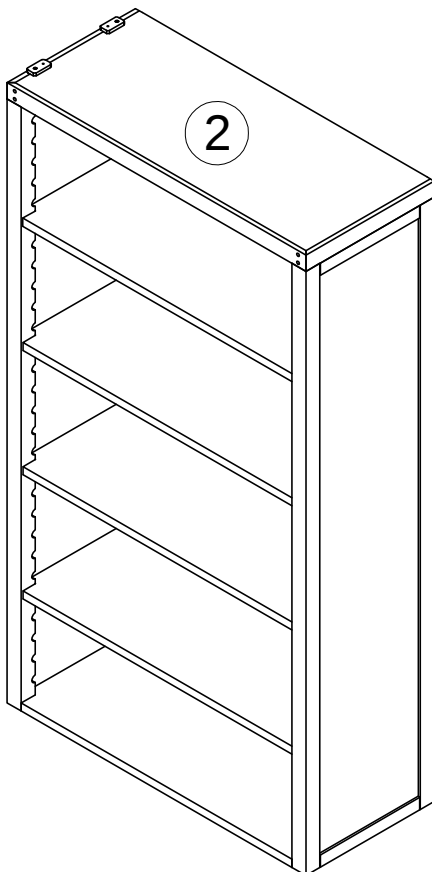


Step 1

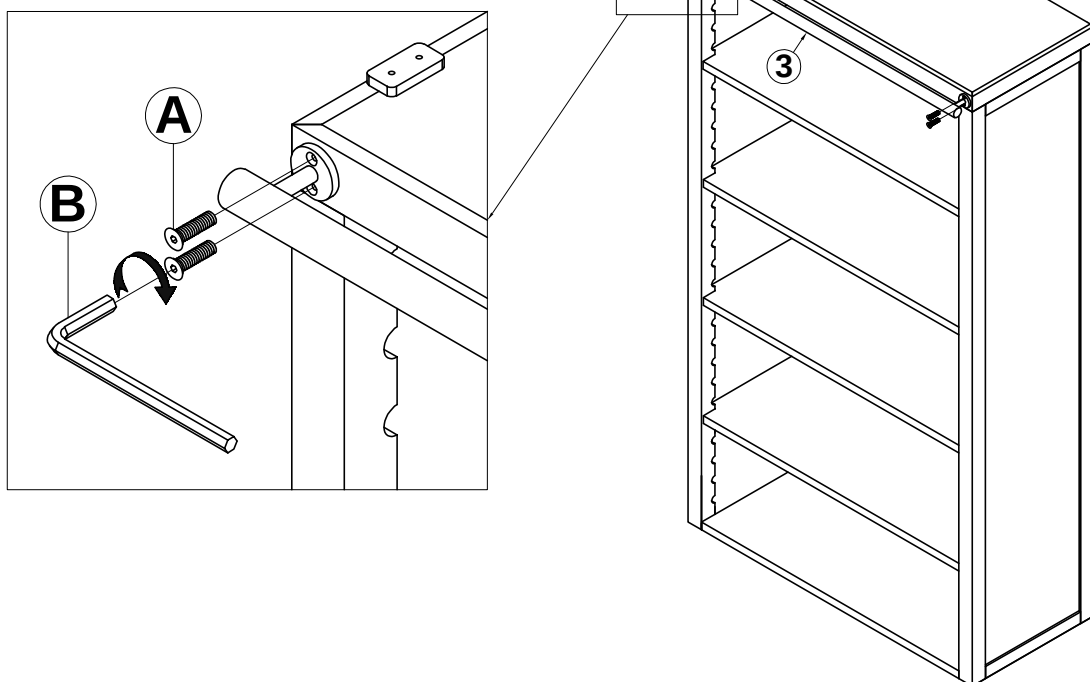

Step 2

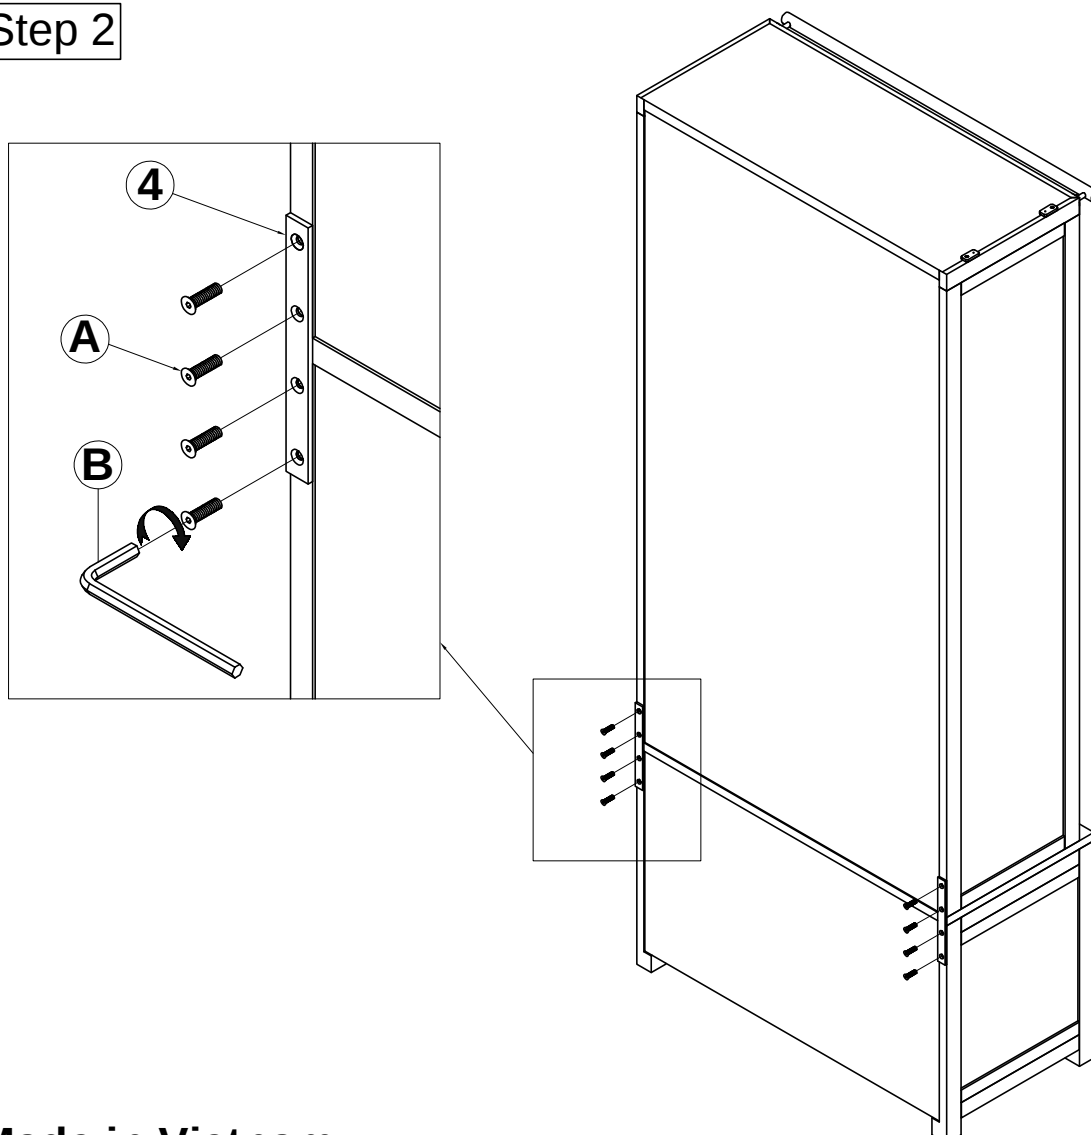

Step 3

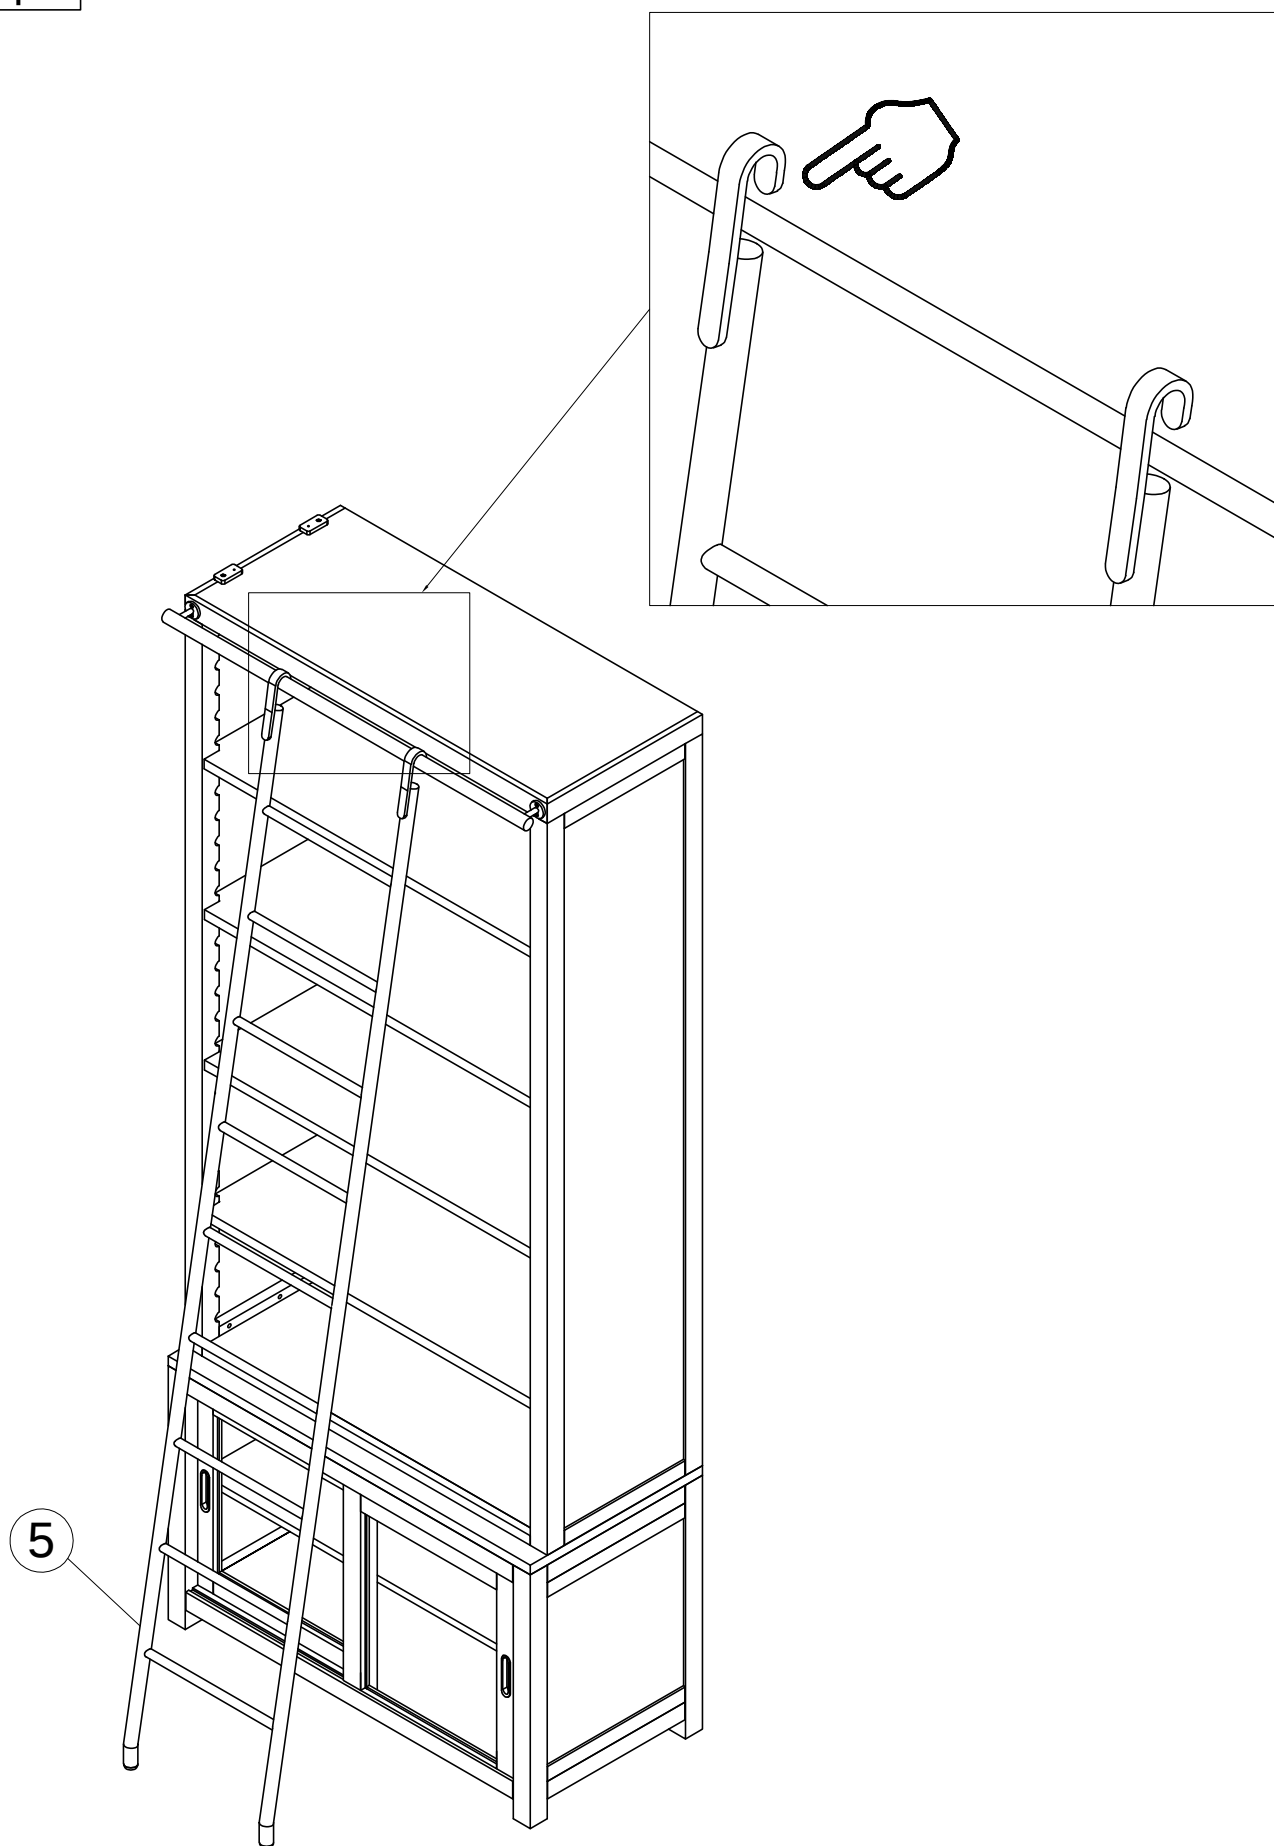

5

Step 4

★ **REMARK:** There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

Tipping Hardware



Made in Vietnam

Leveler can be adjusted as necessary for the dresser balance

Page 4 of 5

Step 5

