



ASSEMBLY INSTRUCTION FOR
JIMI CABINET


HARDWARE LIST				
A		Bolt	M6 x 15mm	9
B		Washer	6 x 16mm	9
C		Lock Washer	60 x 70 mm	2
D		Allen Key	4mm	1
E		Tipping Hardware		1 SET
F		Screwdrivers (Not included)		1



COMPONENTS

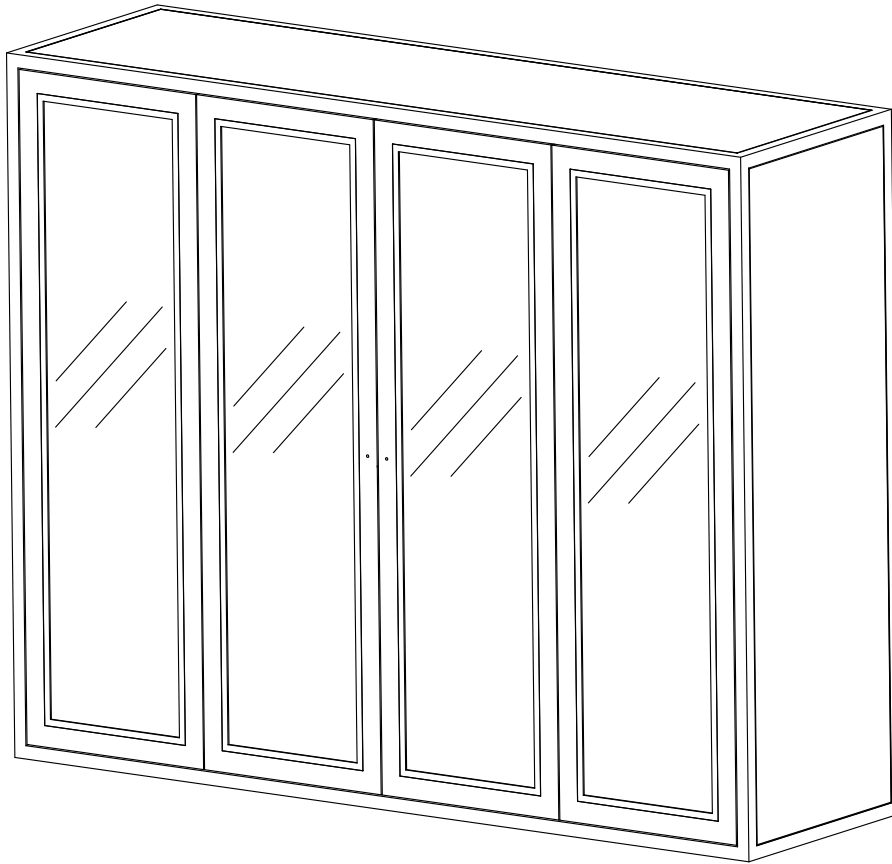




2

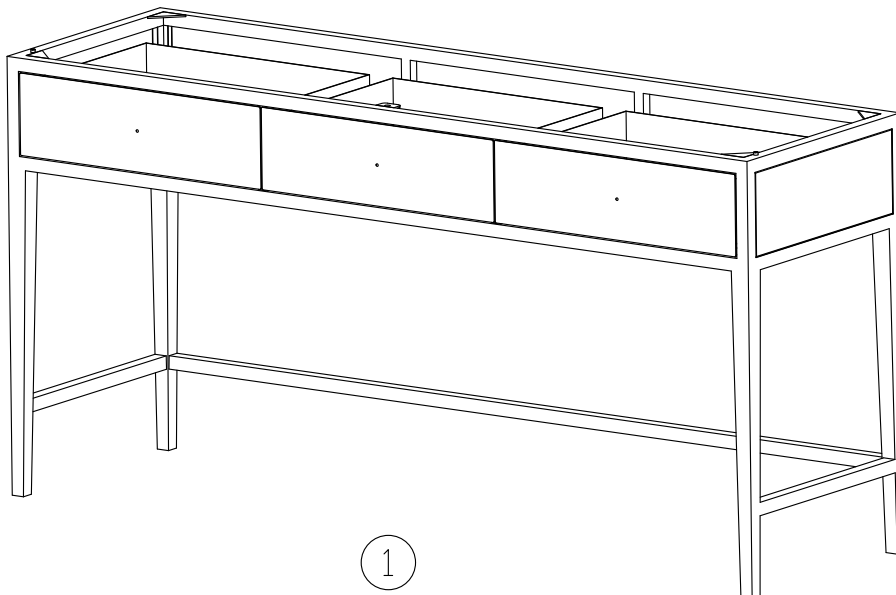





1

1


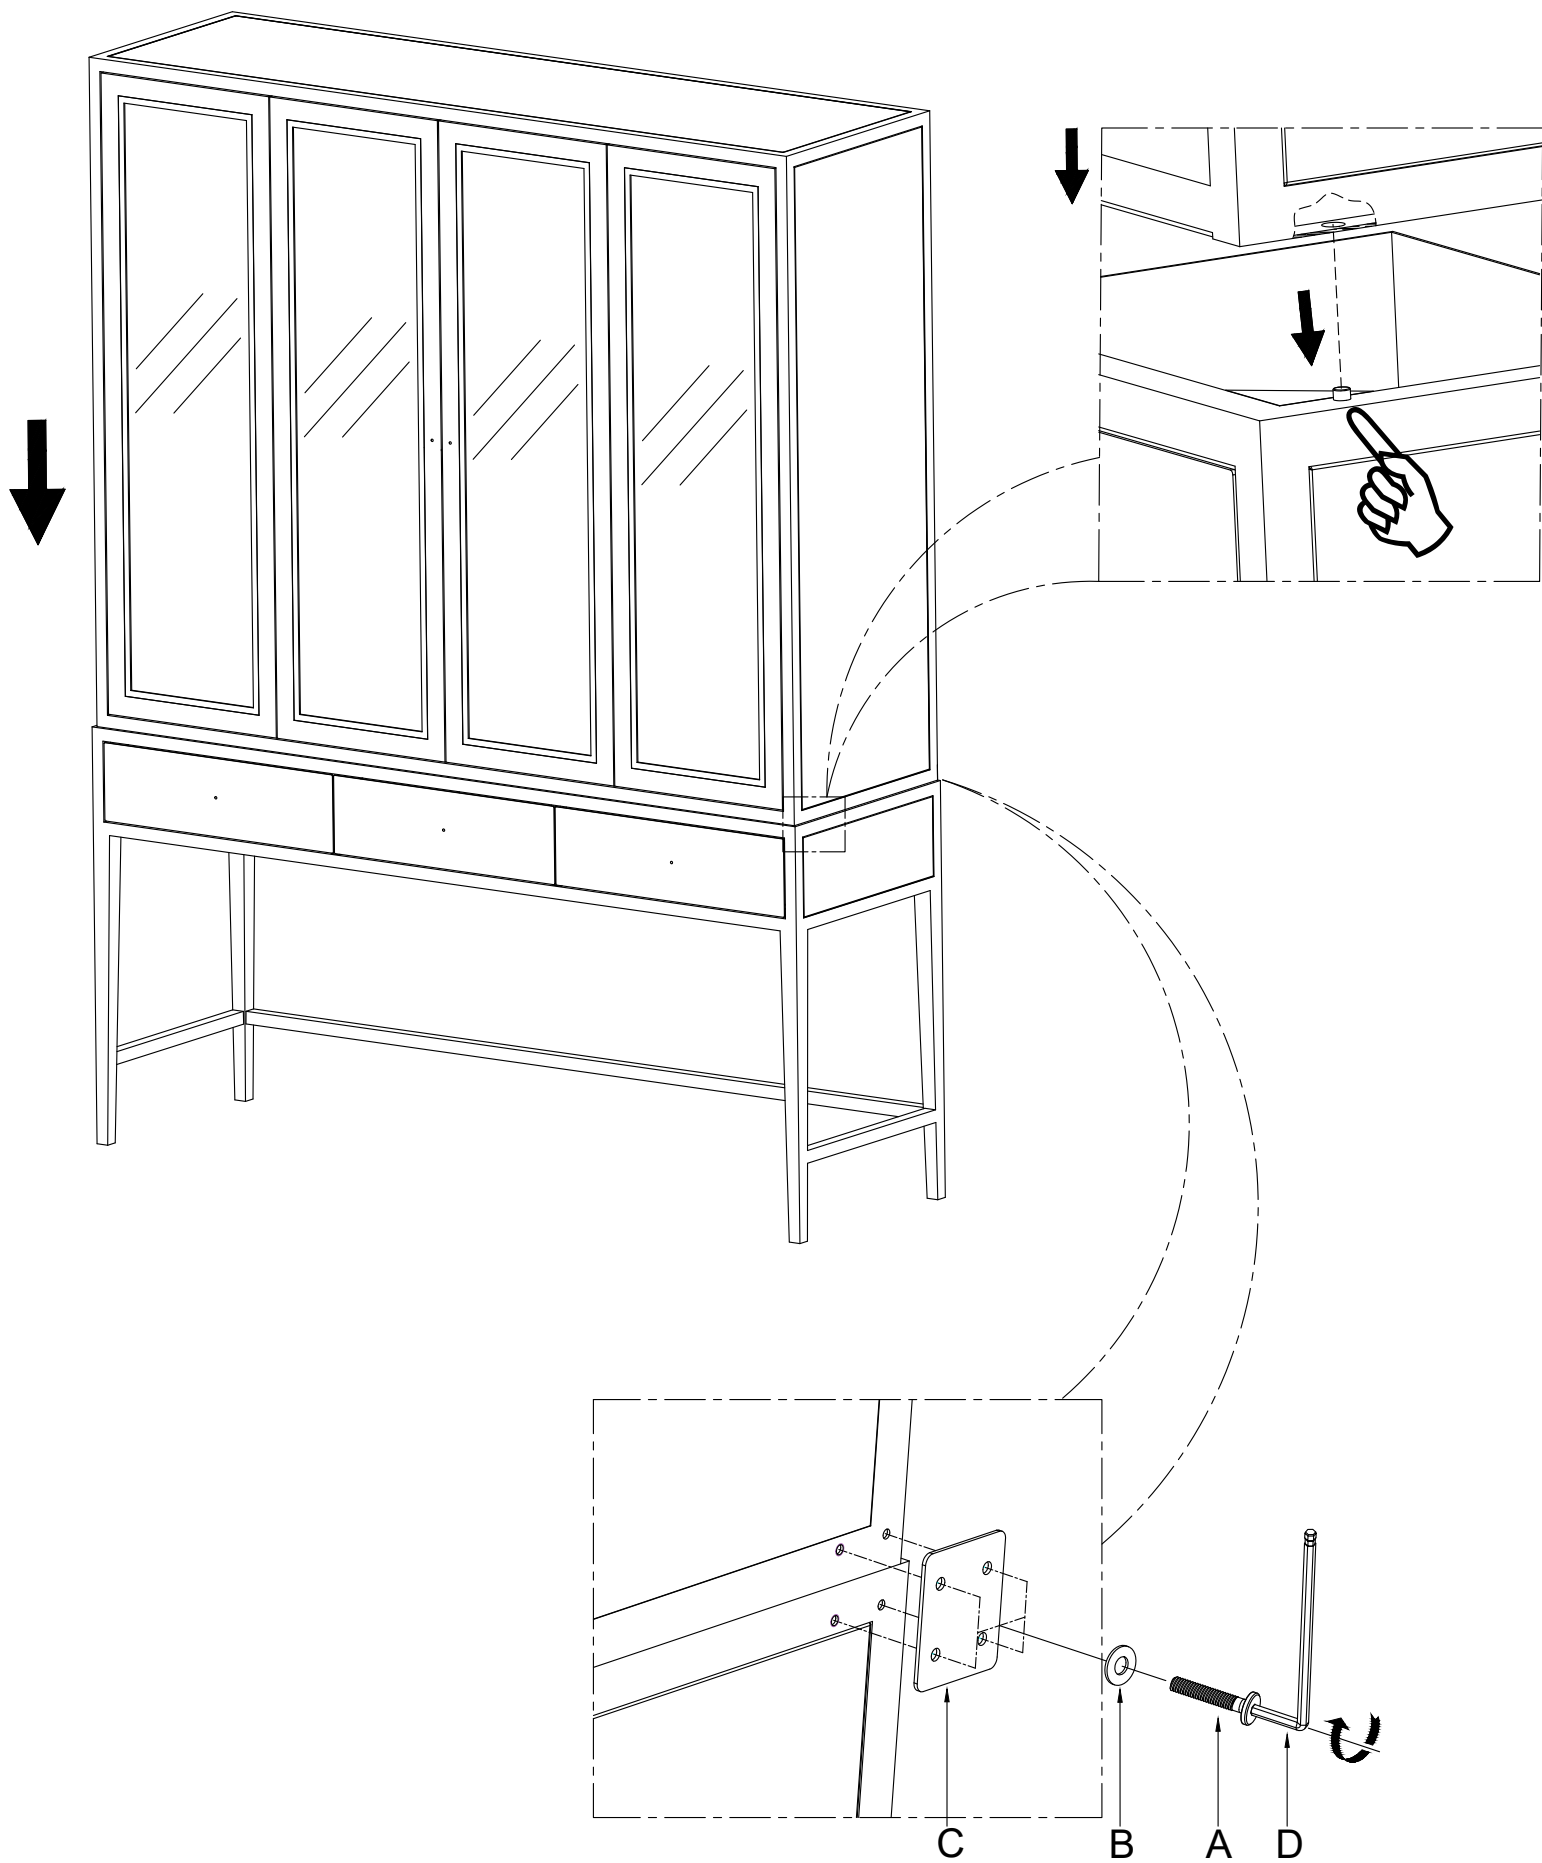


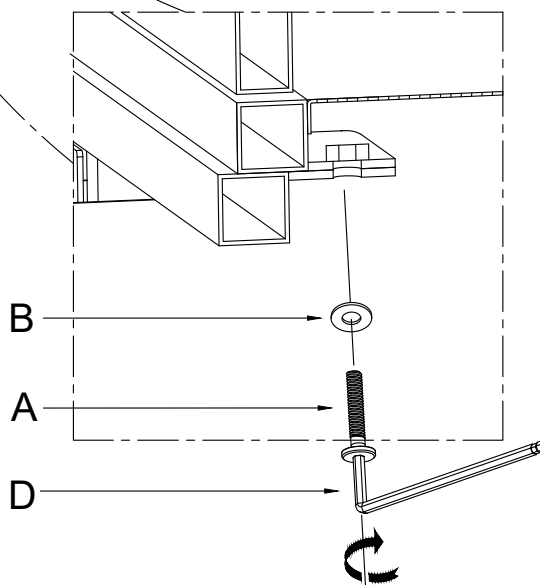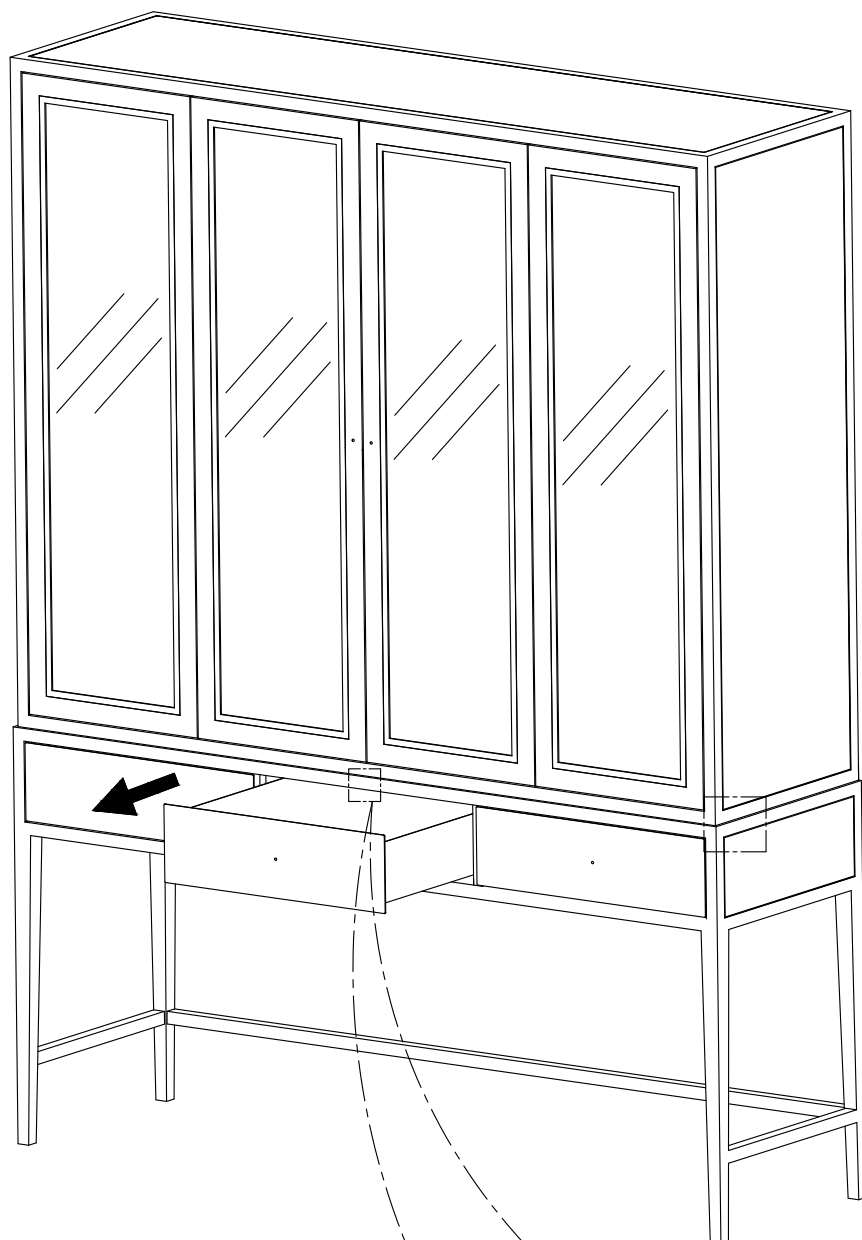



3

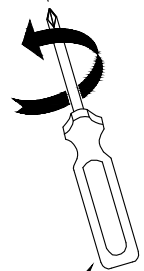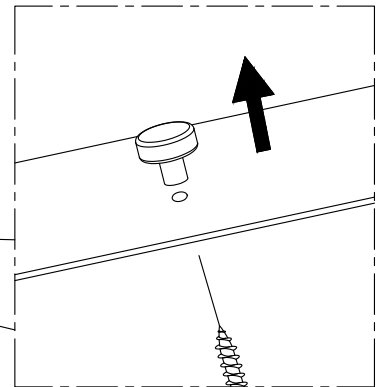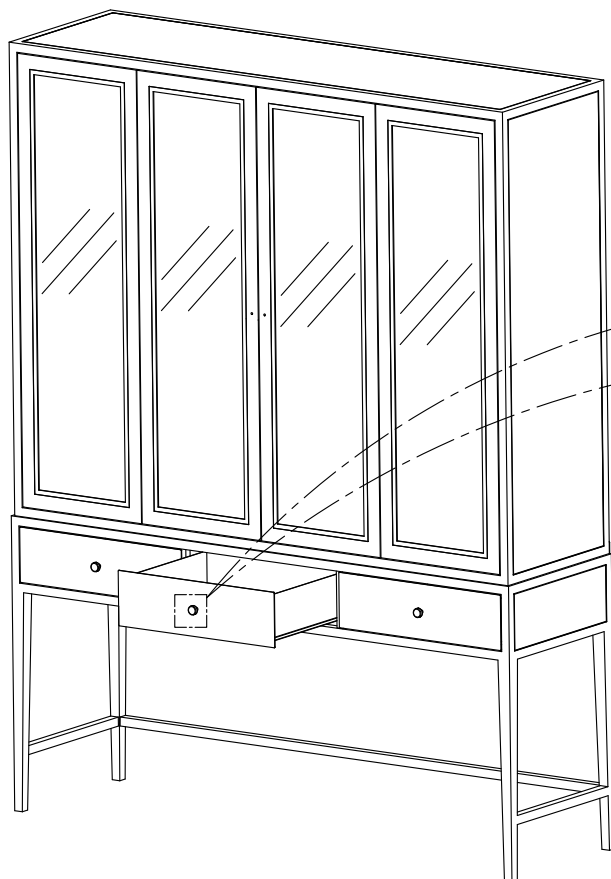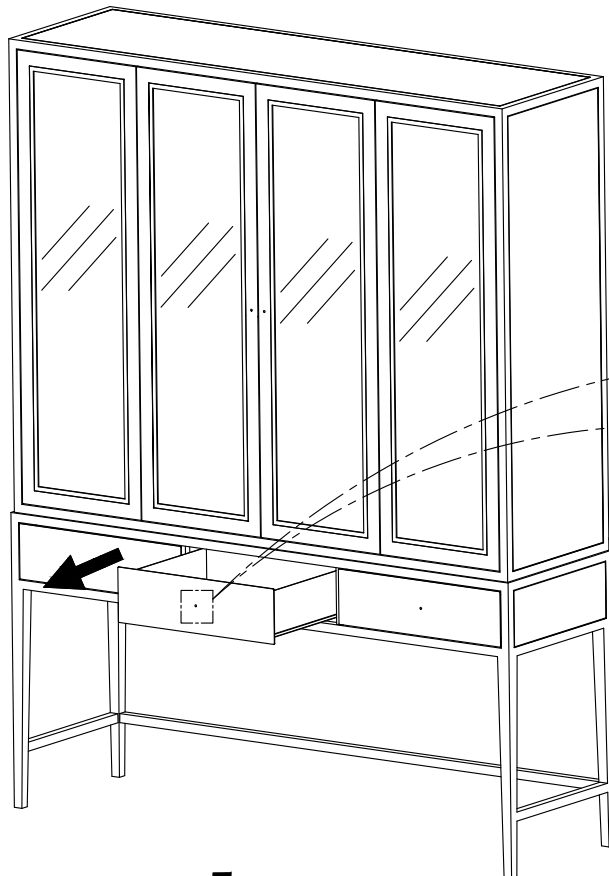

F

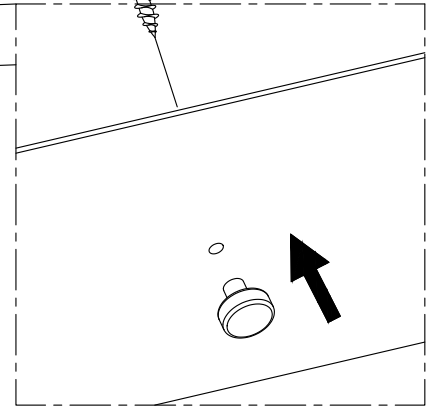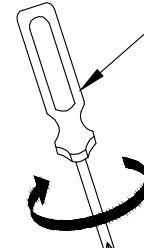

4

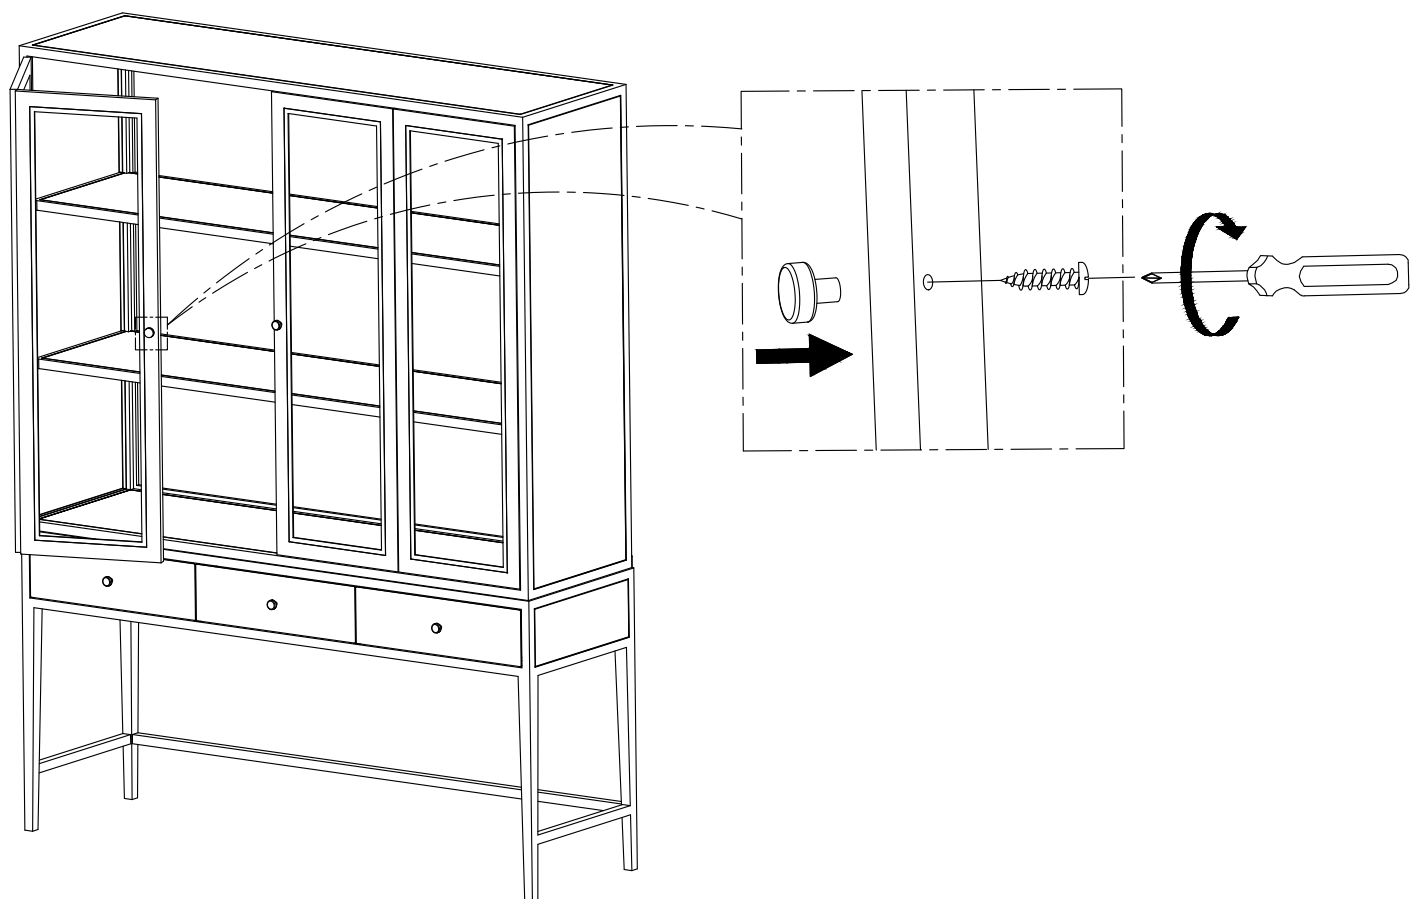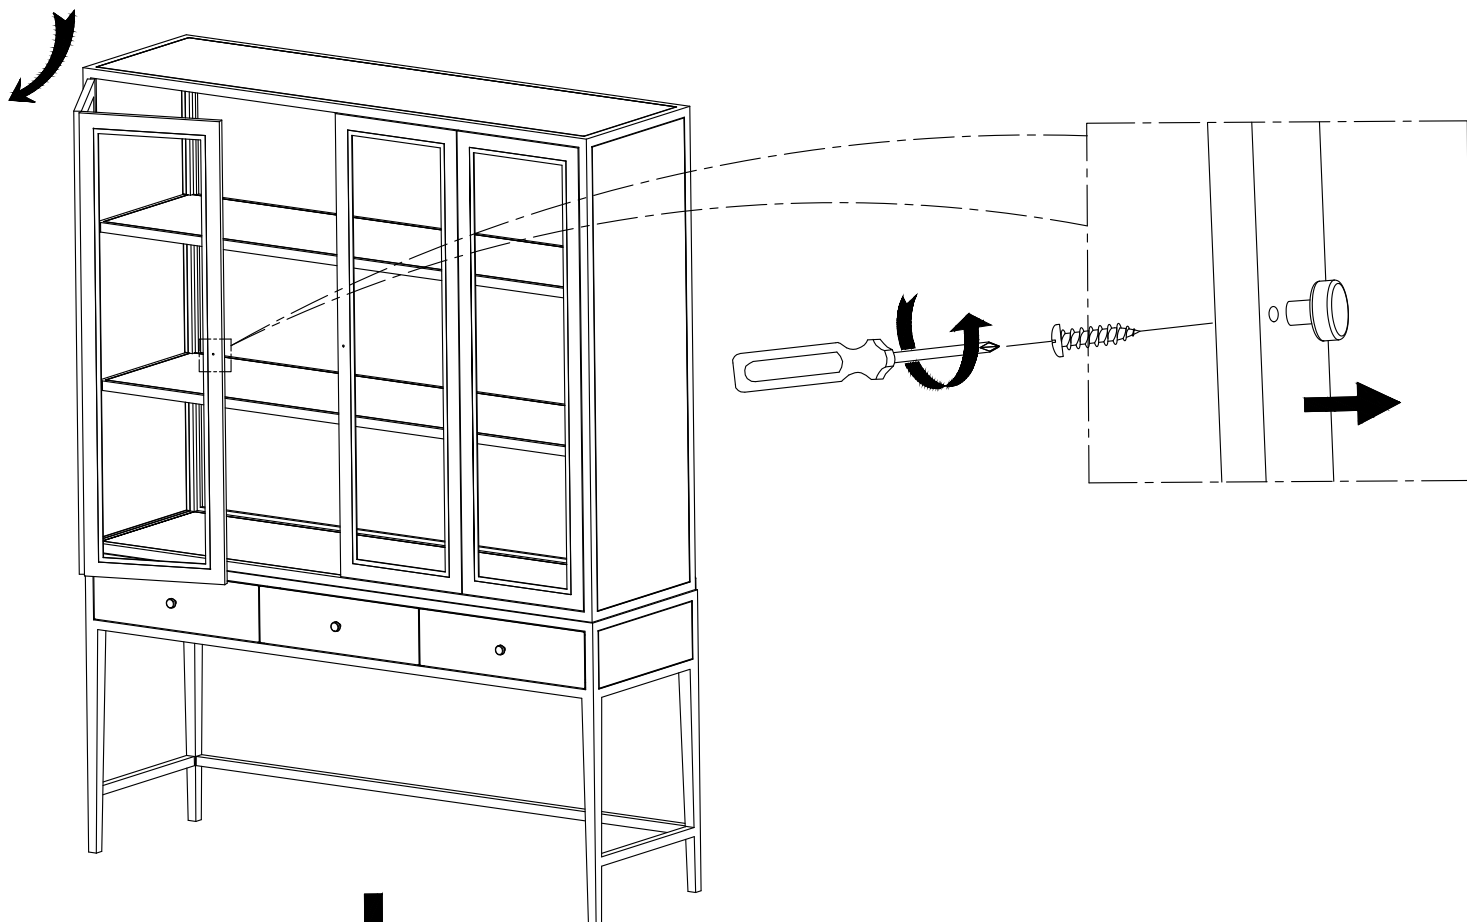

Tipping Hardware

