
ASSEMBLY INSTRUCTION FOR


NOELINE WIDE BOOKCASE

HARDWARE LIST				
Α	9	Tipping Hardware		2
В		Screwdrivers (Not included)		1
С	(<u>o o o o</u>	Metal plate connected		2
D	0	Bolt	M8 x 25mm	8
Е	0	washer	M8	8
F	@	Lock washer	M8	8
G		Allen Wrench	4mm	1

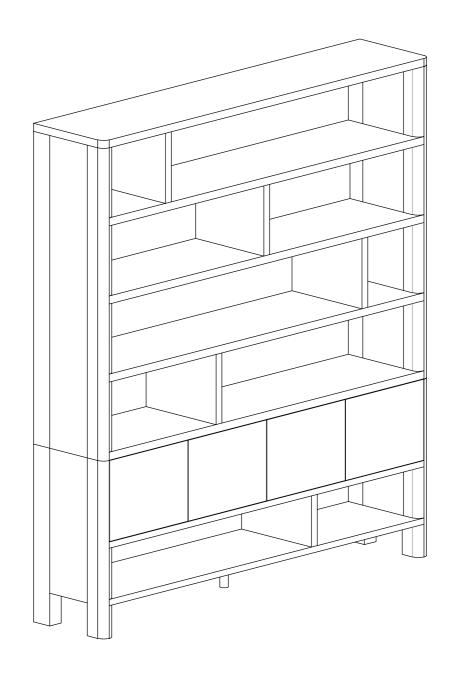


MADE IN VIET NAM PAGE 1

COMPONENTS

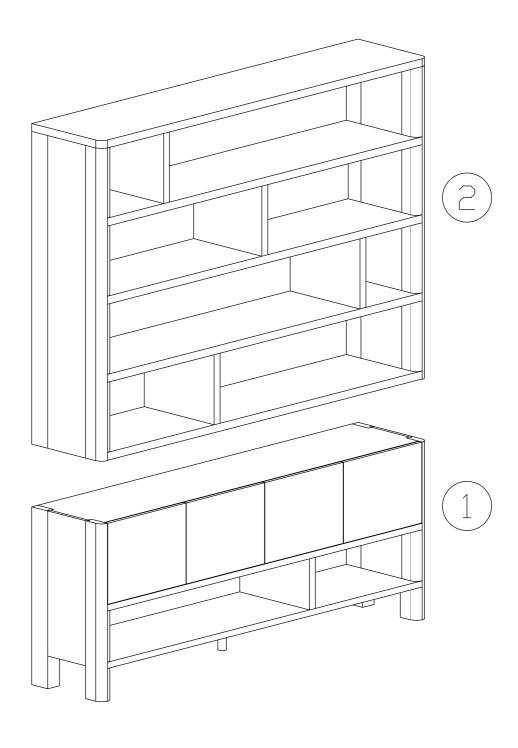

MADE IN VIET NAM PAGE 2

1

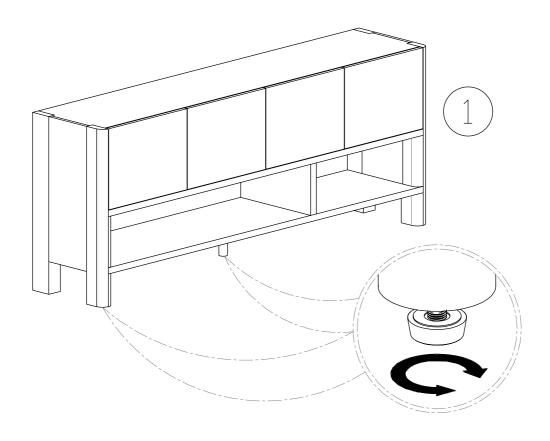

2

