ASSEMBLY INSTRUCTION FOR


GRAND CABINET

HARDWARE LIST				
Α		Bolt	M6 x 20 mm	8
В		Washer	6 x 13mm	8
С	6 0	Lock Washer	46 x 60 mm	2
D		Allen Key	4mm	1
Е	9	Tipping Hardware		2 SET
F		Screwdrivers (Not included)		1




MADE IN VIET NAM PAGE 1




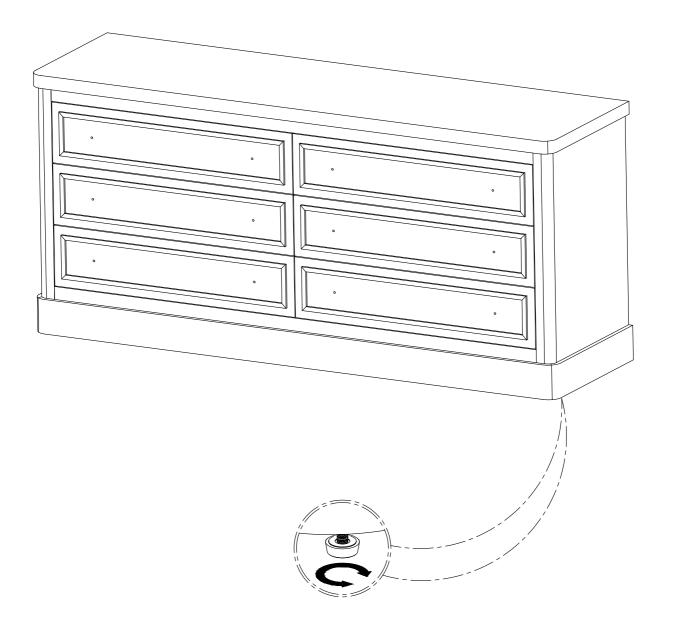



MADE IN VIET NAM PAGE 3

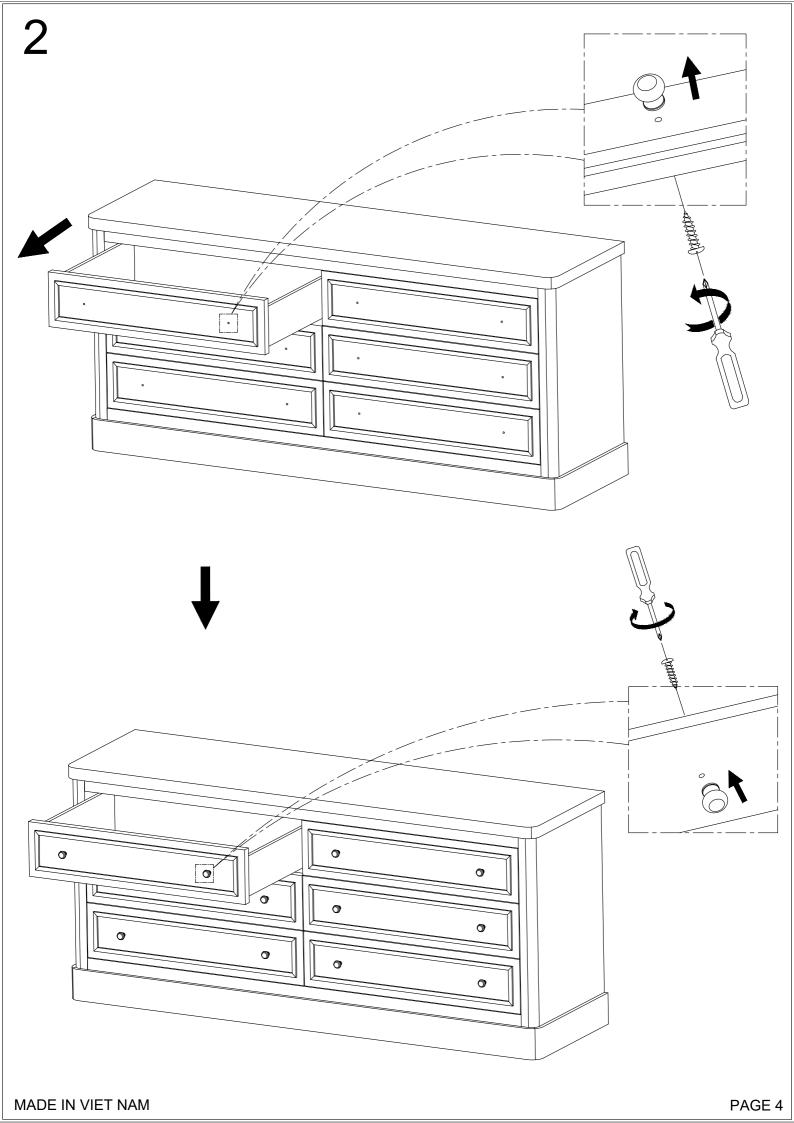

3

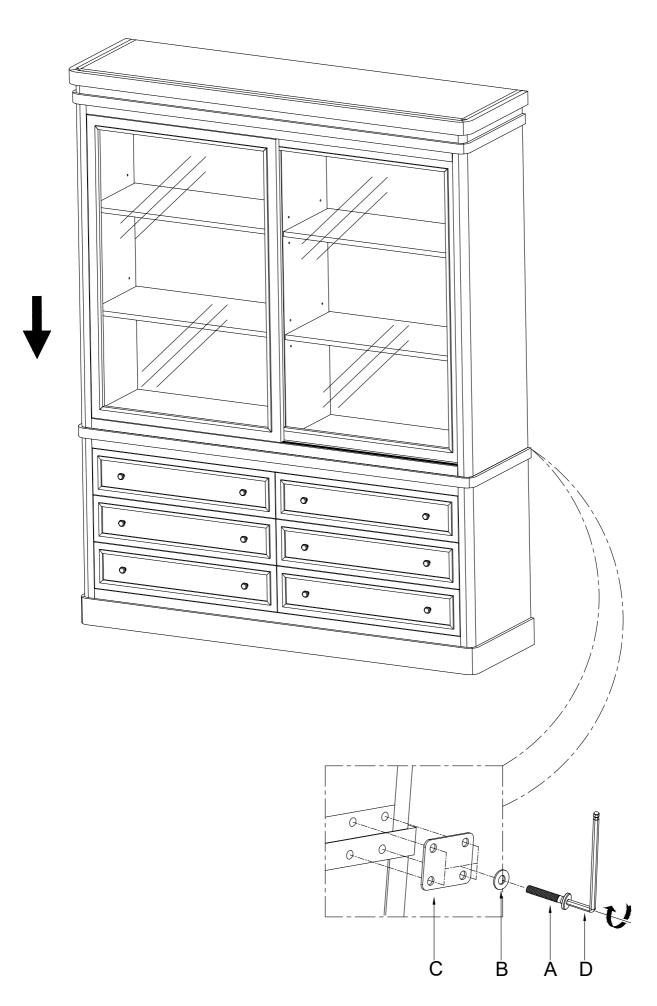

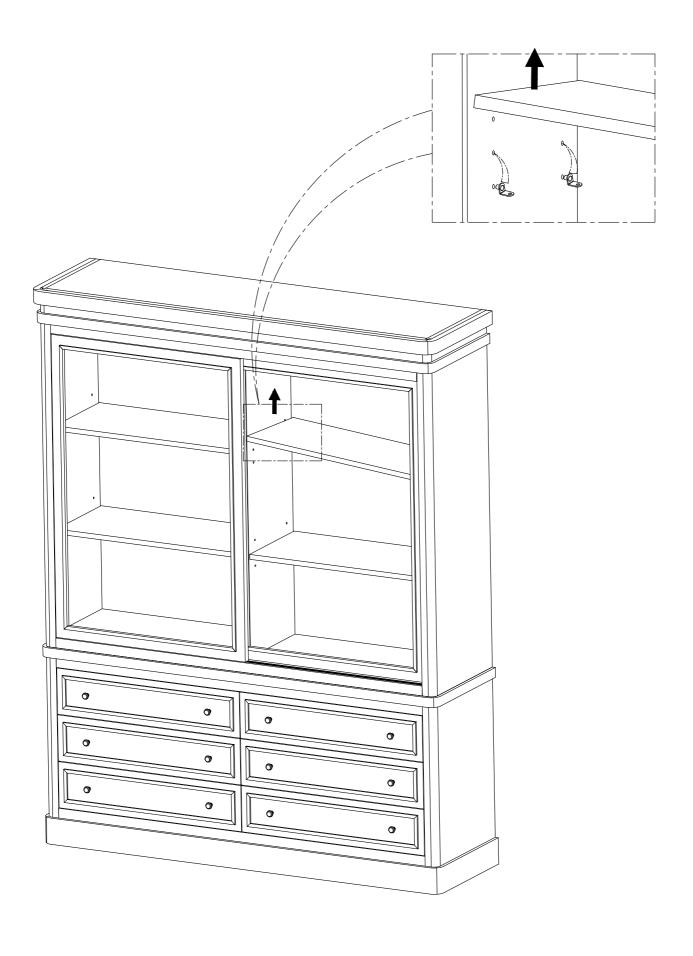

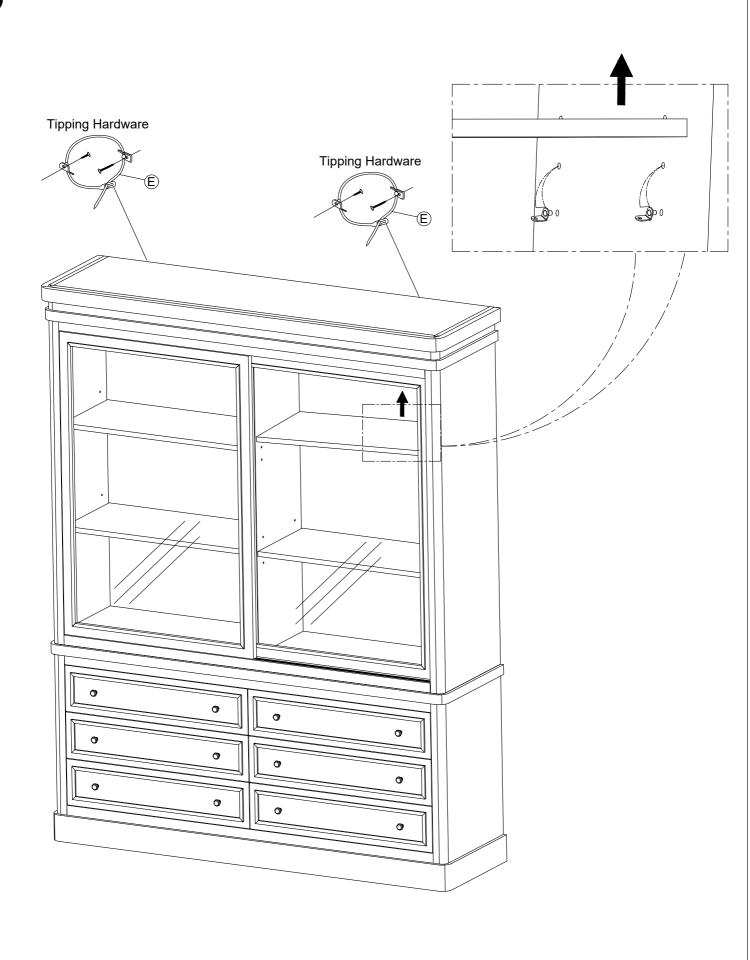

MADE IN VIET NAM PAGE 7