





1

FOUR HANDS
FURNISHING STYLEPATZ FLOOR MIRROR
ANTI TIP KIT INSTRUCTIONS

	X02 WALL CLIP		X05 SCREW
	X02 ZIP TIE		X05 PLASTIC WALL ANCHORS

2

Wall

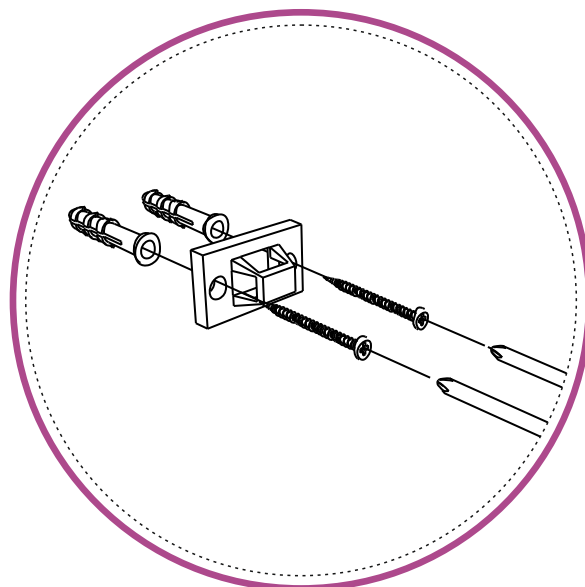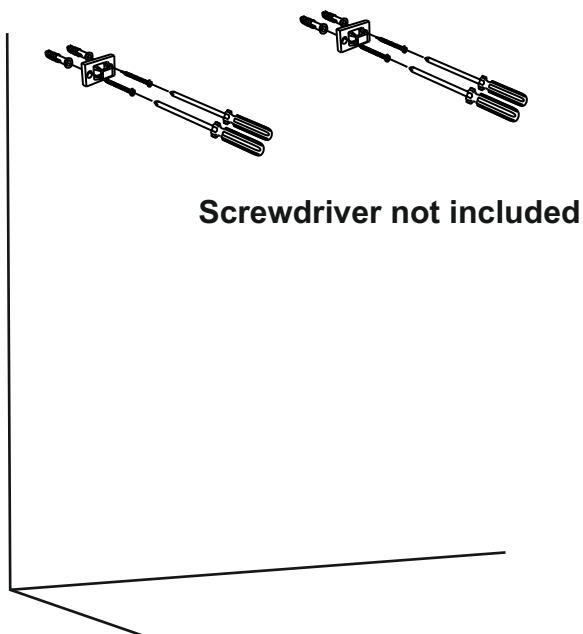

3

Wall

