



ASSEMBLY INSTRUCTION

Crawford Power Recliner LAF PC

Step 1

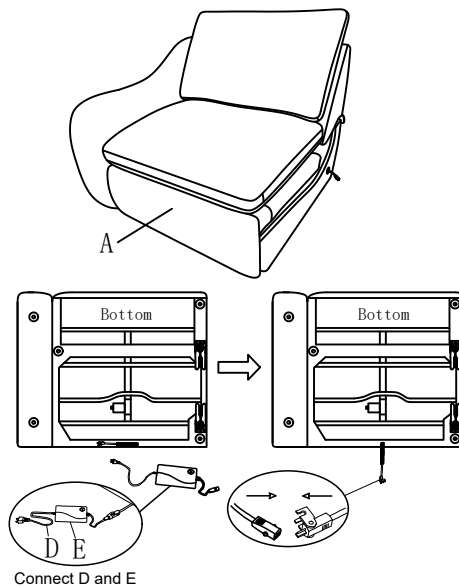


Step 2

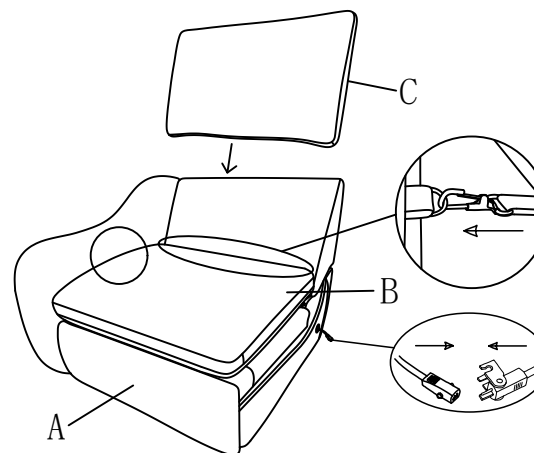


A		1Pc	Body	
B		1Pc	Seat cushion	
C		1Pc	Back cushion	
D		1Pc	Charger	3M
E		1Pc	Transformer	29Vdc/1.8A

Step 3

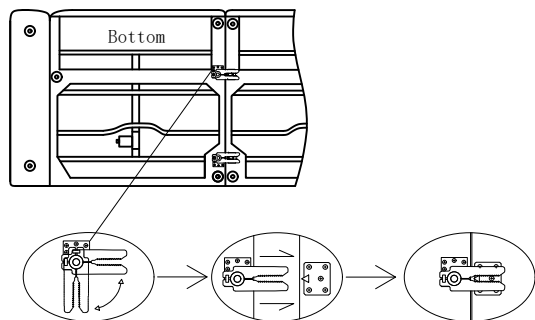


Step 4

Seat closed Seat open

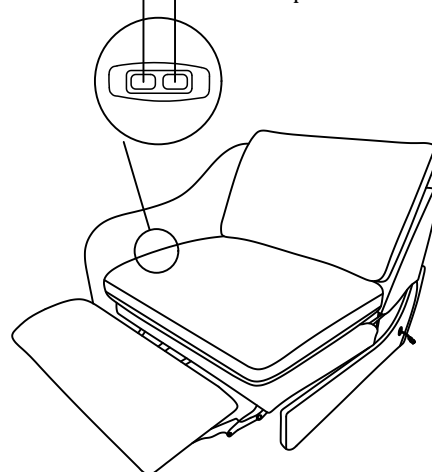


Step 5

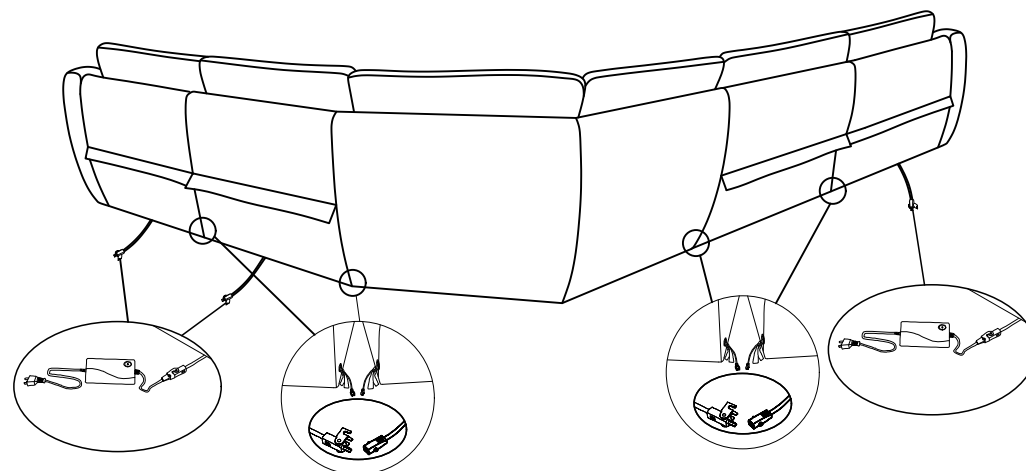


ASSEMBLY INSTRUCTION

Crawford Power Recliner RAF PC

Step 1

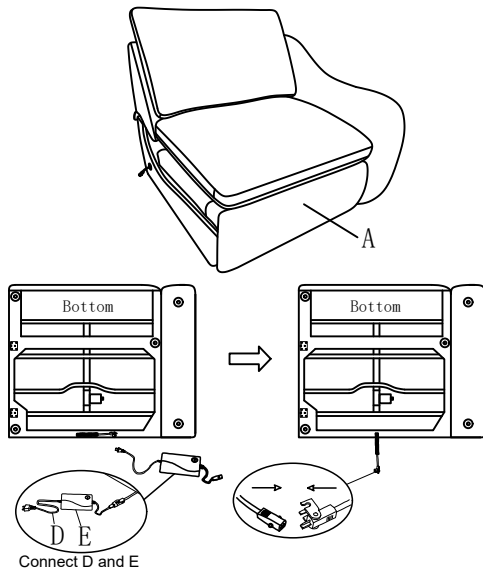


Step 2

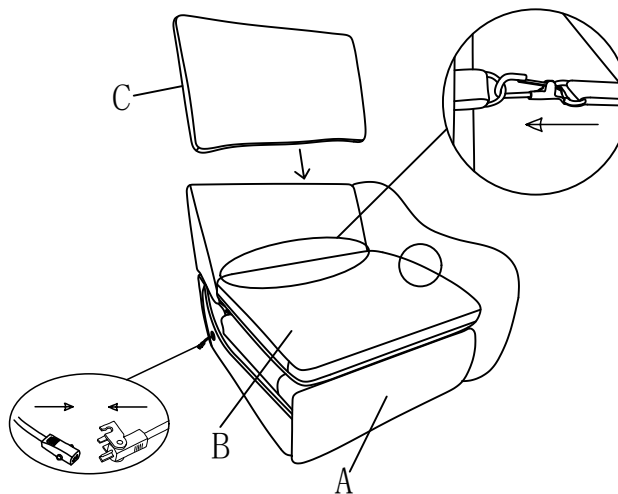


A		1Pc	Body	
B		1Pc	Seat cushion	
C		1Pc	Back cushion	
D		1Pc	Charger	3M
E		1Pc	Transformer	29Vdc/1.8A


Step 3

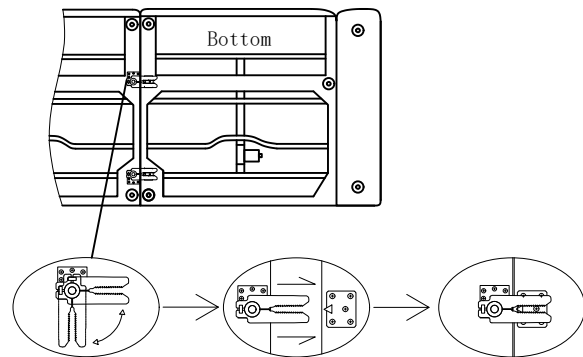

Step 4

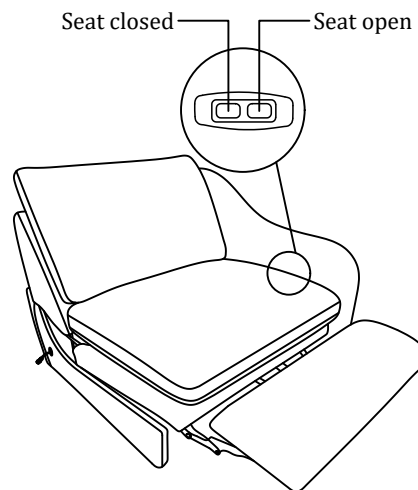


Step 5

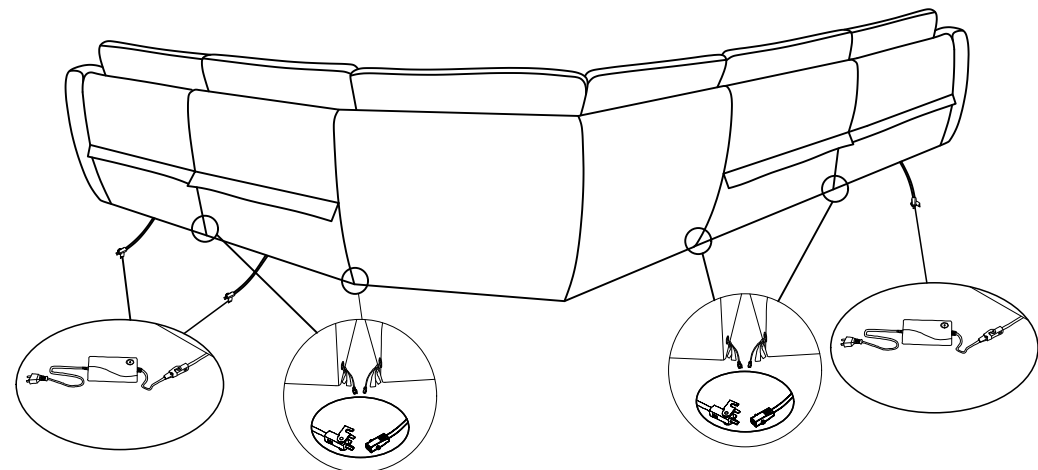


ASSEMBLY INSTRUCTION

Crawford Power Recliner Armless PC

Step 1

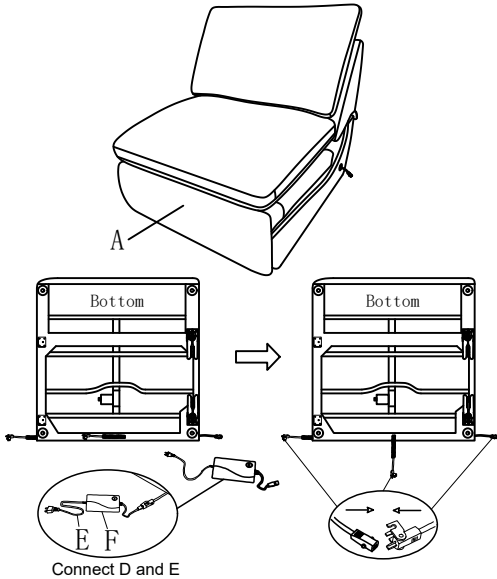


Step 2

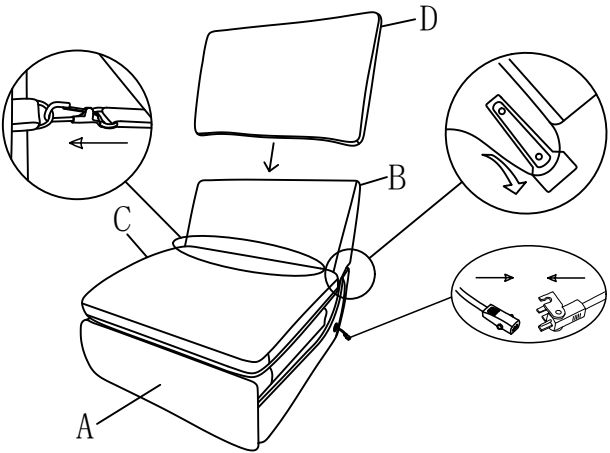


A		1Pc	Body	
B		1Pc	Wedge back	
C		1Pc	Seat cushion	
D		1Pc	Back cushion	
E		1Pc	Charger	3M
F		1Pc	Transformer	29Vdc/1.8A

Step 3

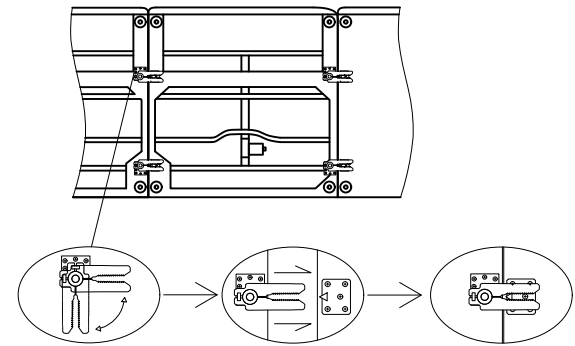


Step 4

Seat closed Seat open

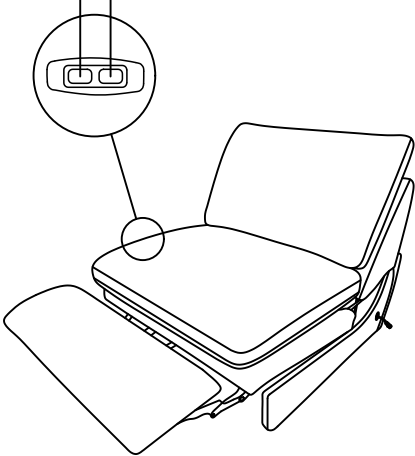


Step 5

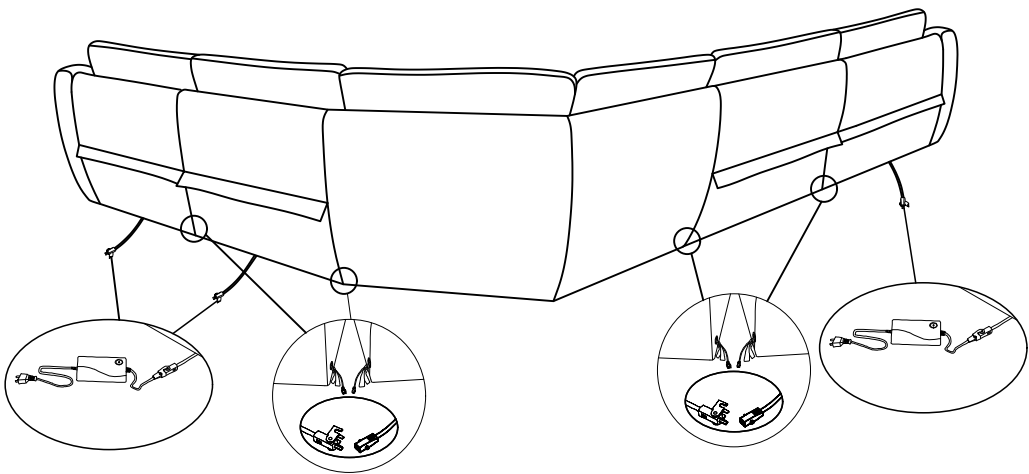


ASSEMBLY INSTRUCTION


Crawford Corner PC

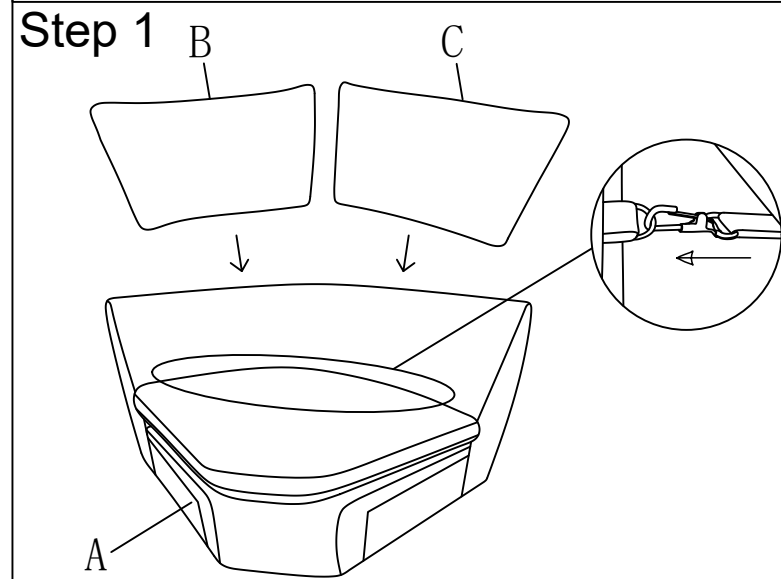


Step 2

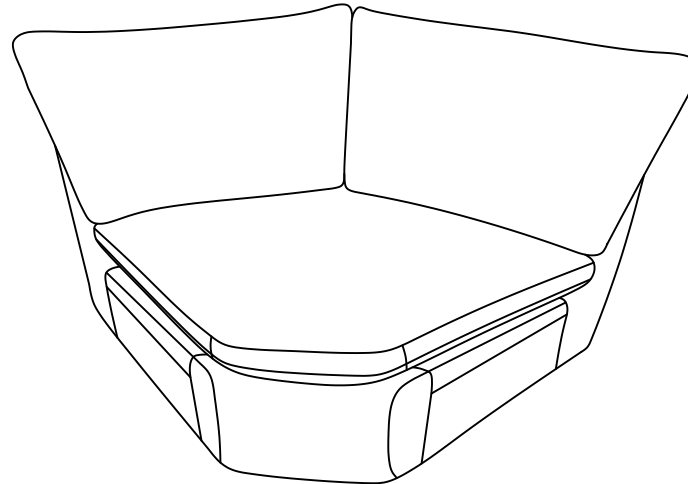

A		1Pc	Body	
B		1Pc	Back cushion	
C		1Pc	Back cushion	

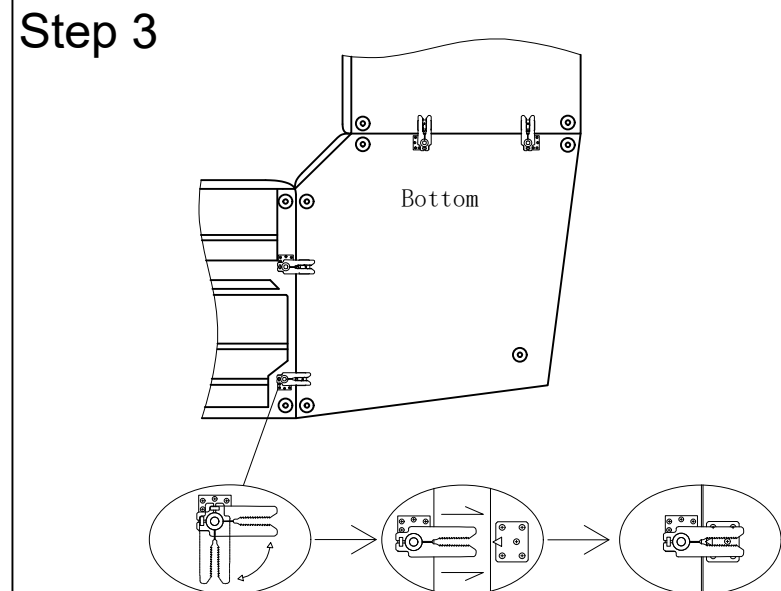


Step 4

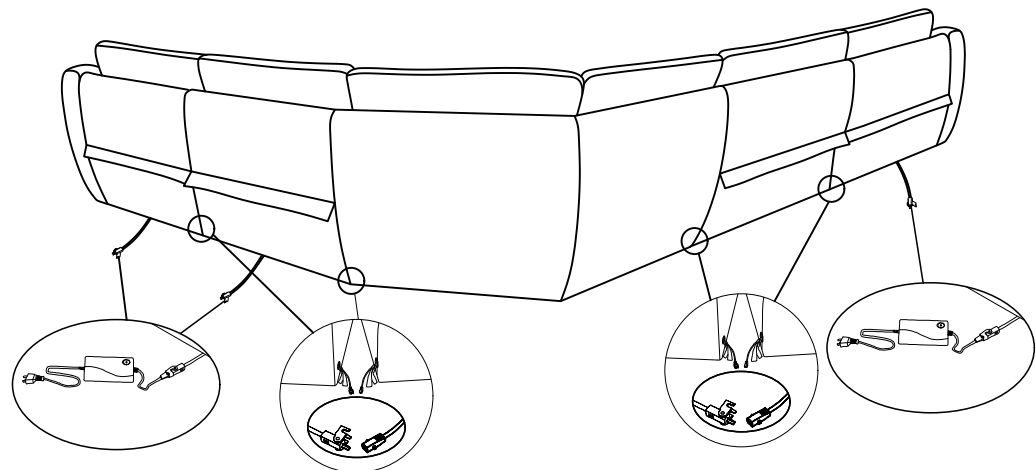


ASSEMBLY INSTRUCTION

Crawford Armless PC

Step 1

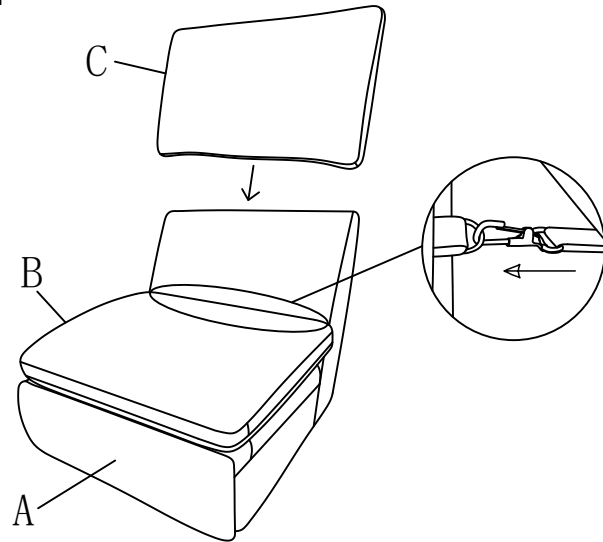


Step 2

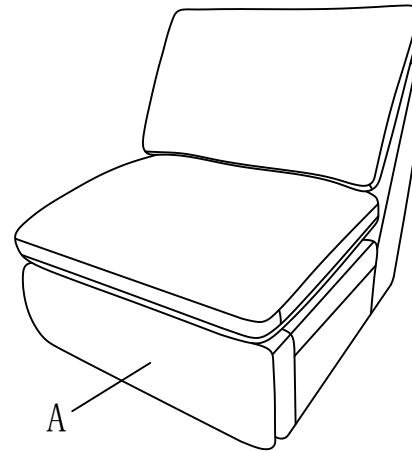

A		1Pc	Body	
B		1Pc	Seat cushion	
C		1Pc	Back cushion	

Step 3

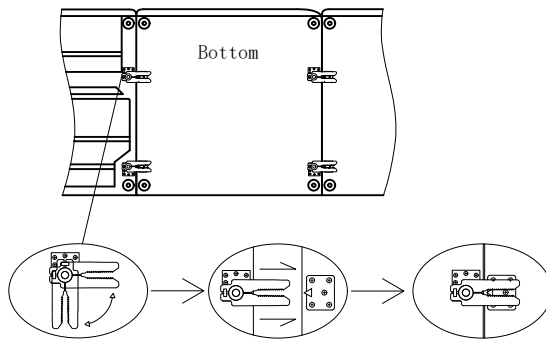

Step 4

