
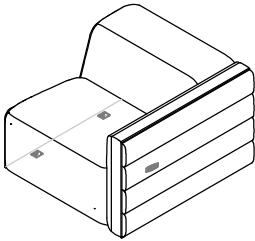
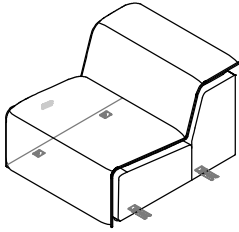
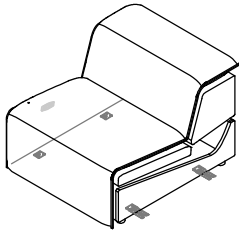
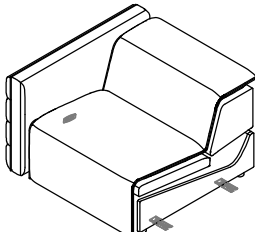
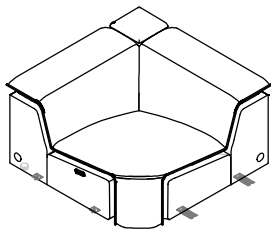



ASSEMBLY INSTRUCTION






- Kenlee Power Recliner RAF PC
- Kenlee Power Recliner Armless PC
- Kenlee Corner PC
- Kenlee Armless PC
- Kenlee Power Recliner LAF PC

PARTS LIST


A		Kenlee Power Recliner RAF PC	1	D		Kenlee Armless PC	1
B		Kenlee Power Recliner Armless PC	1	E		Kenlee Power Recliner LAF PC	1
C		Kenlee Corner PC	1	F		Transformer	4

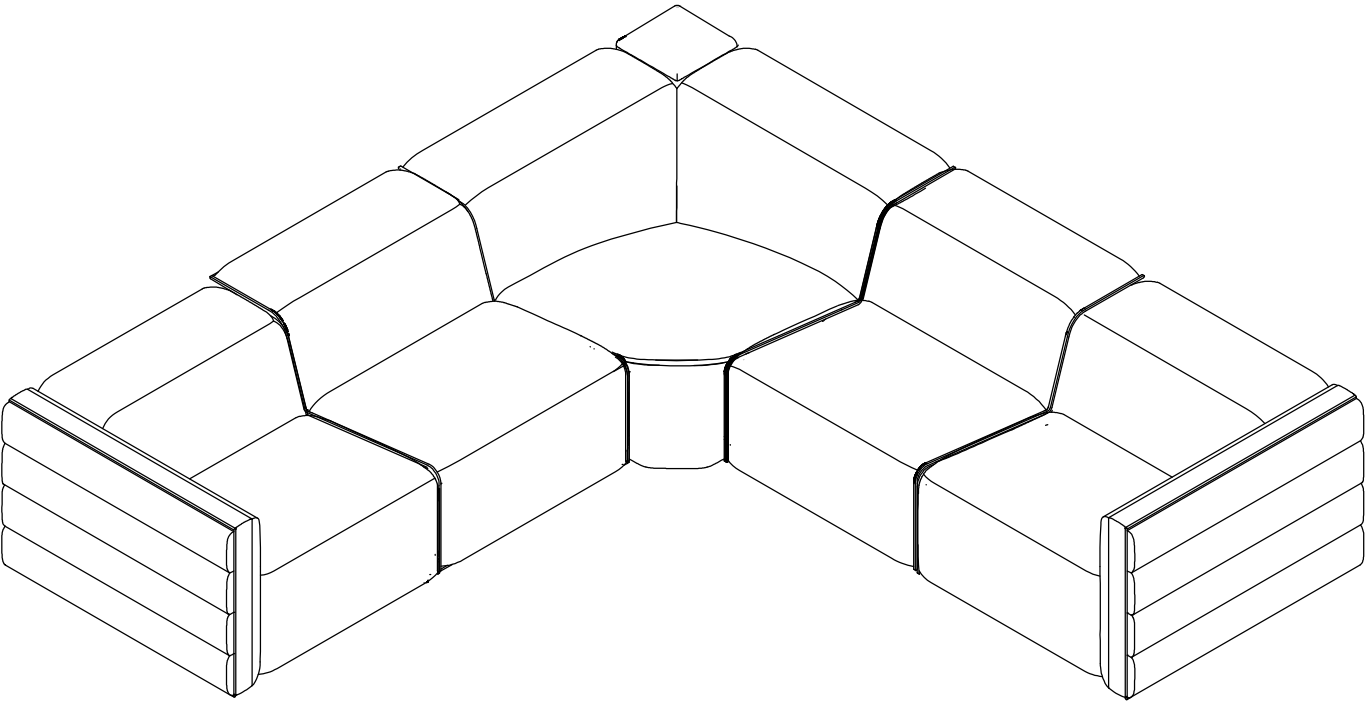


- ① Pull the power input wire from the side of the body, connect with the transformer and charger.

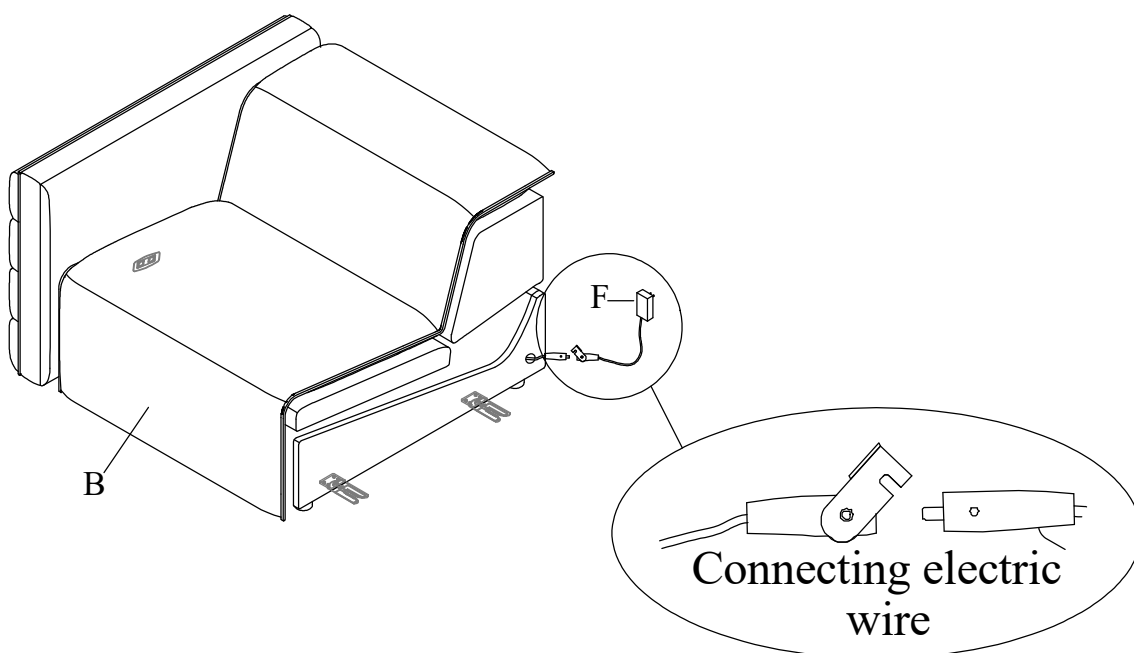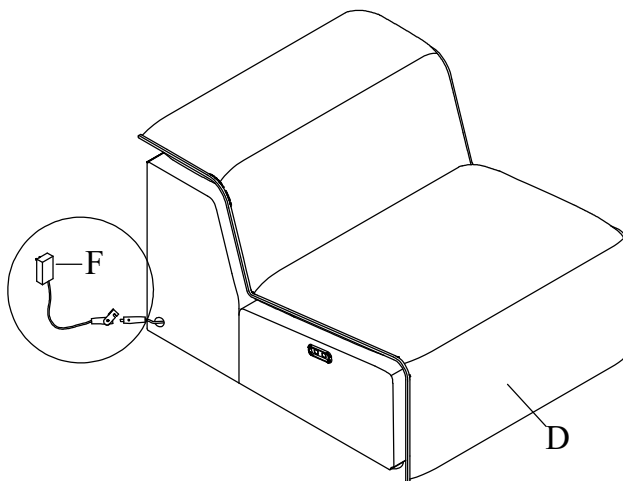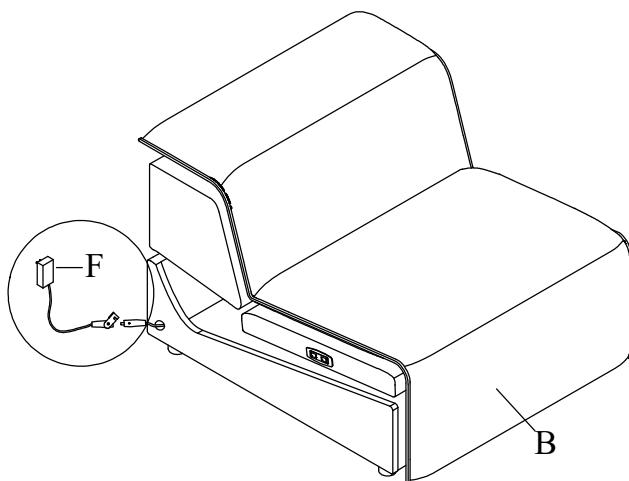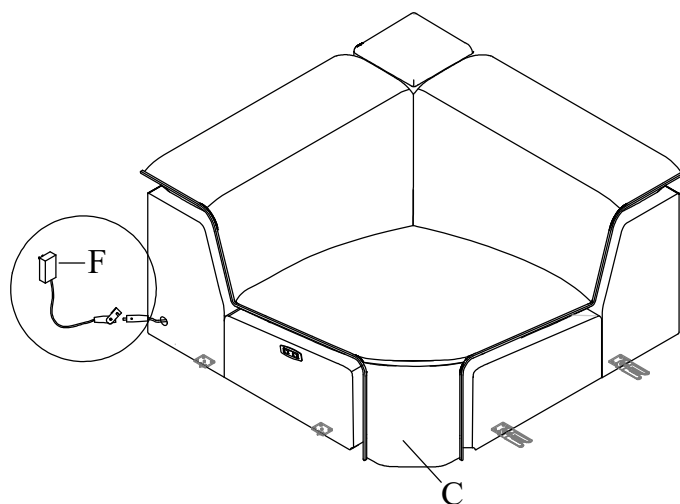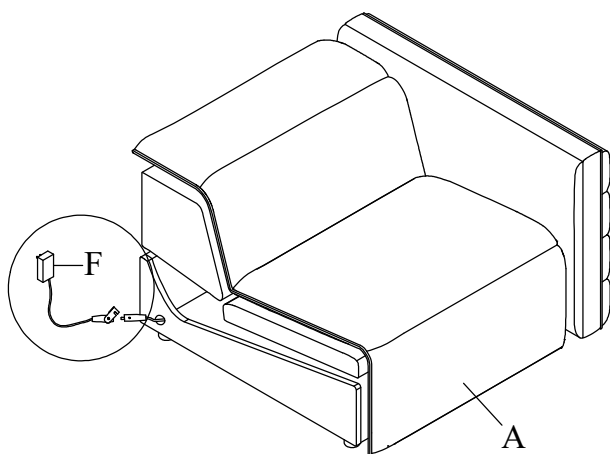

② Assemble the seat connection hardware.

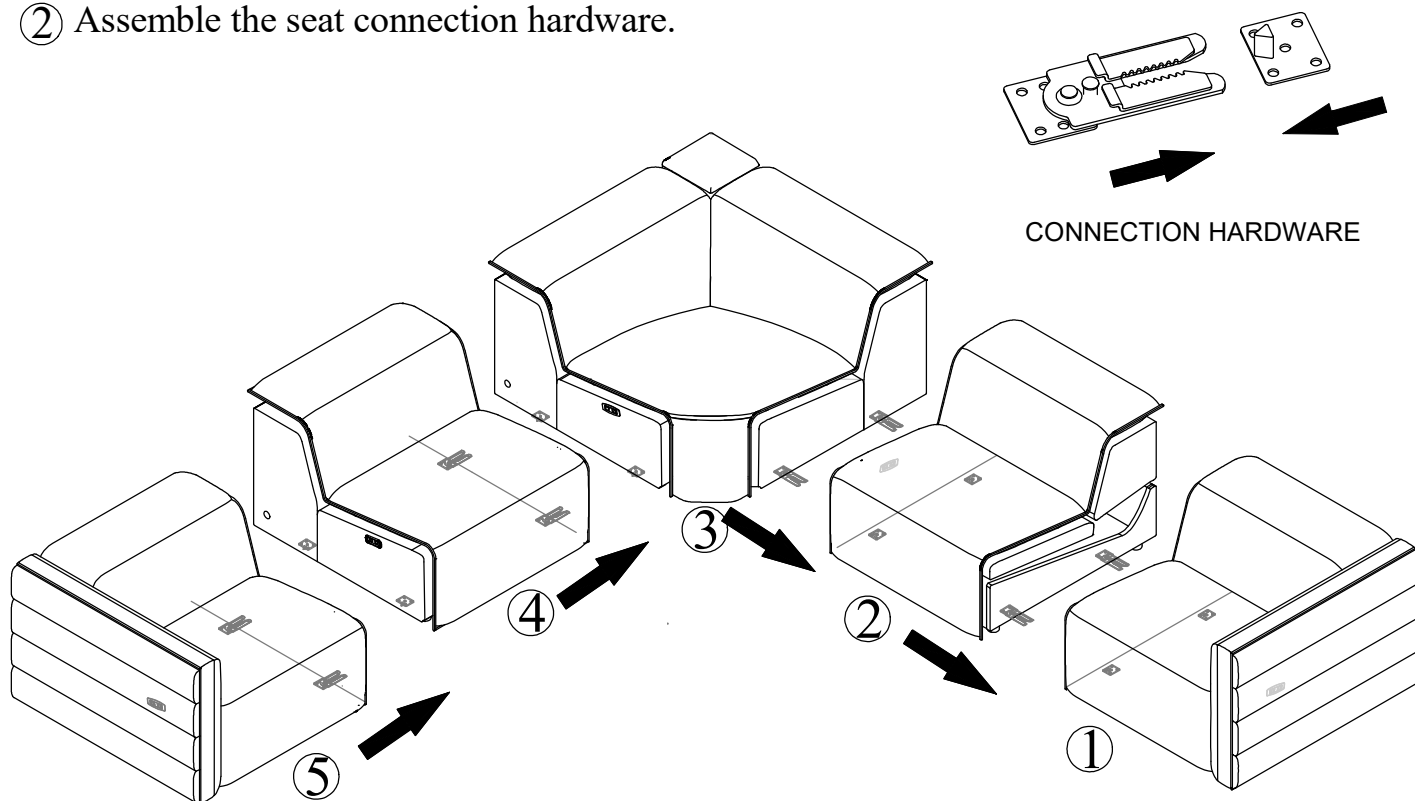

③ Find switch panel on the side of the seat cushion .

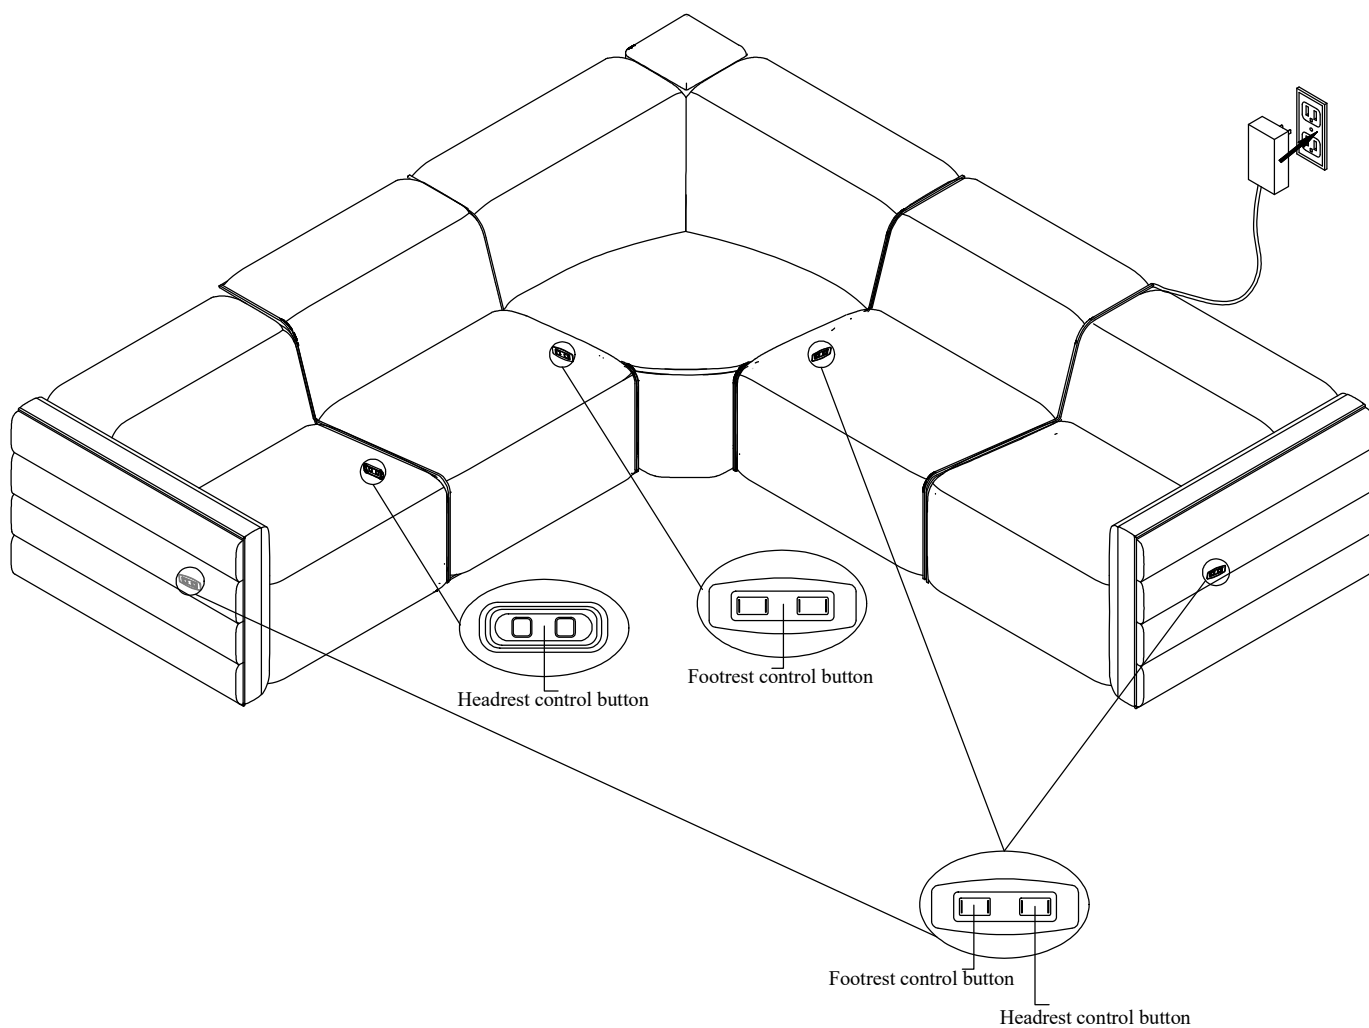

FINISHED