




Name of Hardwere			
Α		Stud Bolts M8 x 80	8
В	<b>6</b>	Nuts M8	8
С	0	Lock Washer M8	8
D		Curved Washers	8
E	<b>O</b> MMANAGEMENT	Long Screw M4x60	4
F	<b>Emm</b>	Short Screw M4x30	8
G	2	Wrench K13	1

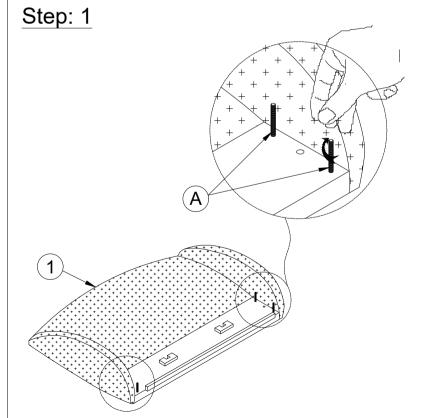

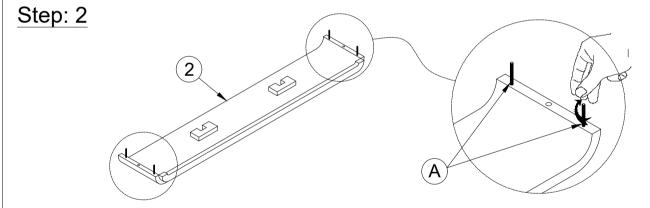

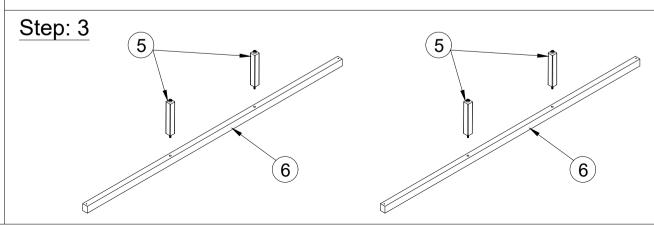

## **ASSEMBLY INSTRUCTION** MAEVE KING BED Step: 5 Step: 4 E (B) (D)6 2 Step: 6 Step: 7 F **FINISH** MADE IN VIETNAM