
ASSEMBLY INSTRUCTION FOR

GLENVIEW BAR CABINET


Α	9	Tipping Hardware	1 PC
		Screwdrivers (Not included)	1 PC
В		Shelves	2 pcs
С	~mm }	Screw 4 x 15mm	8 pcs
D		Shelf Support	8 pcs





MADE IN VIET NAM PAGE 1

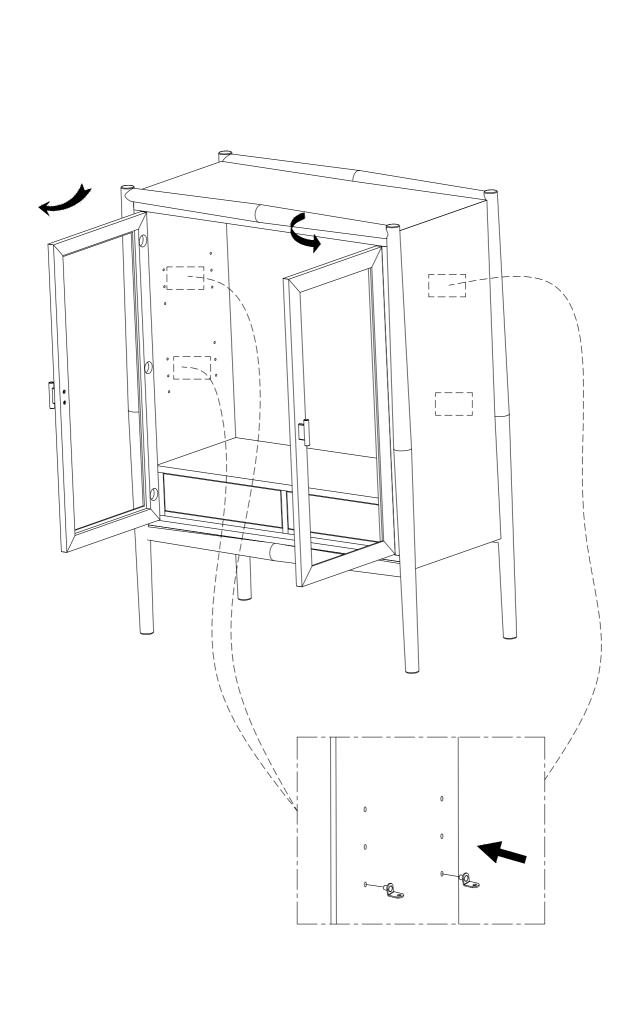


MADE IN VIET NAM PAGE 2

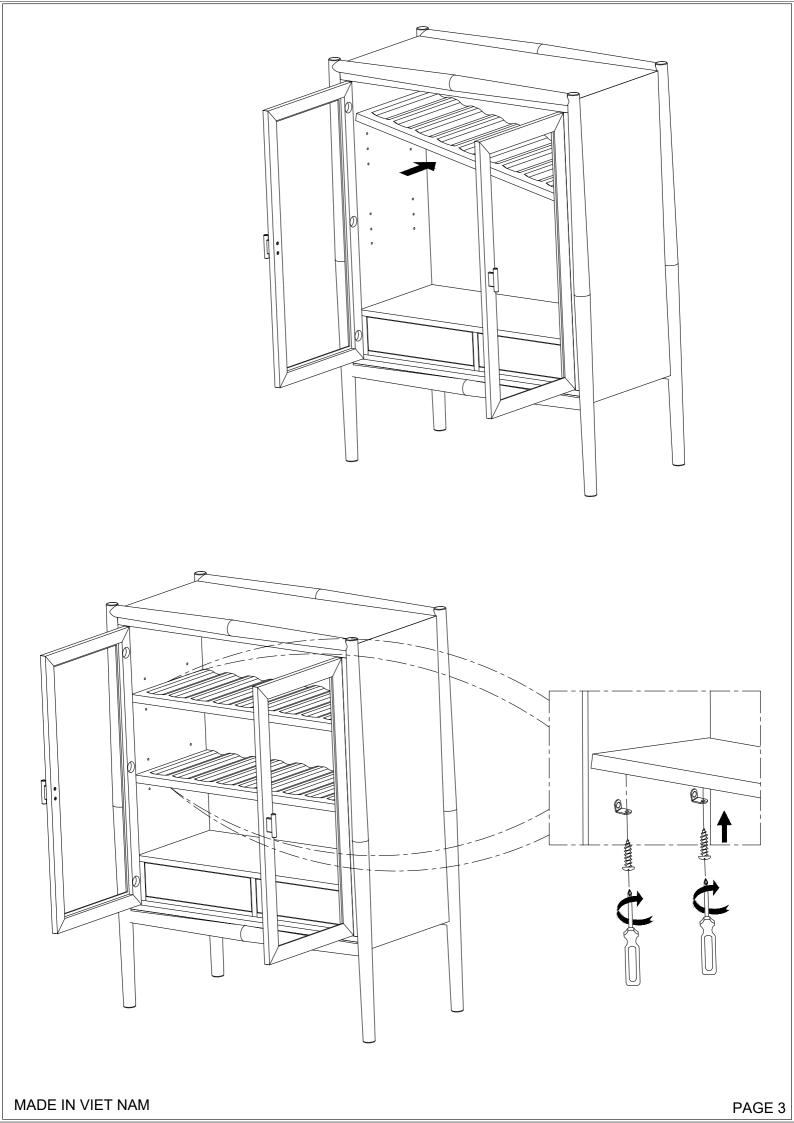

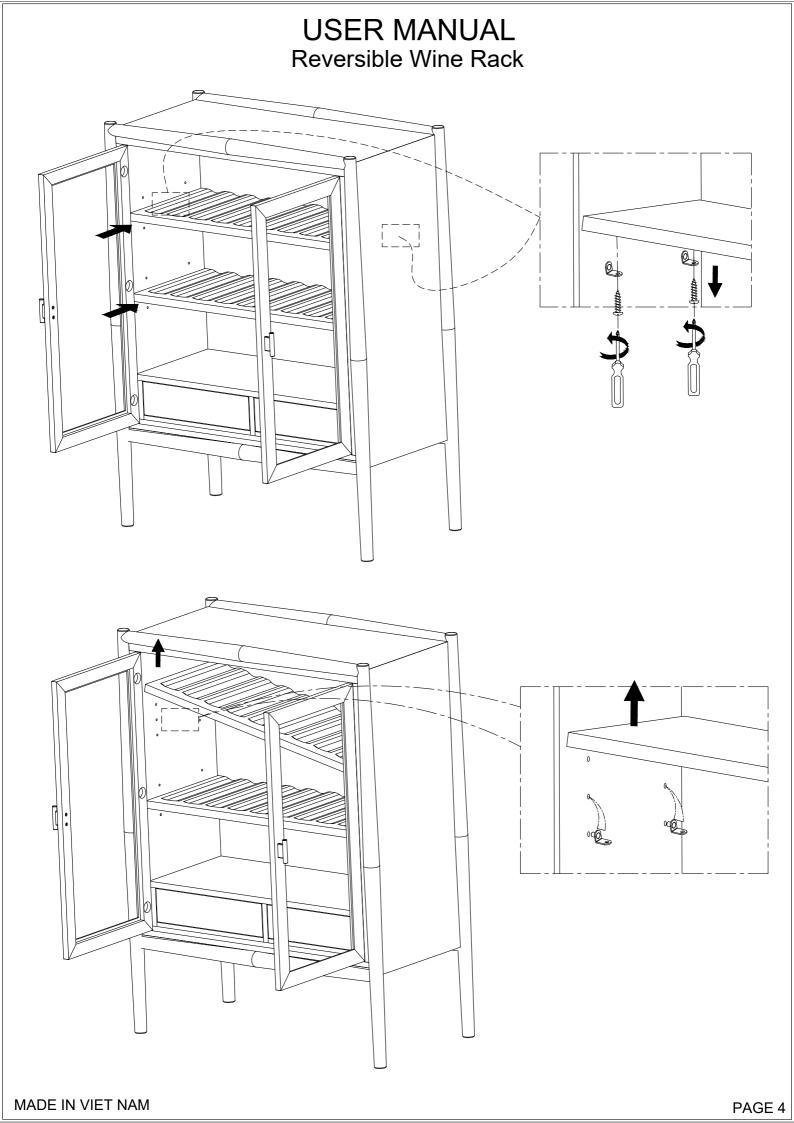

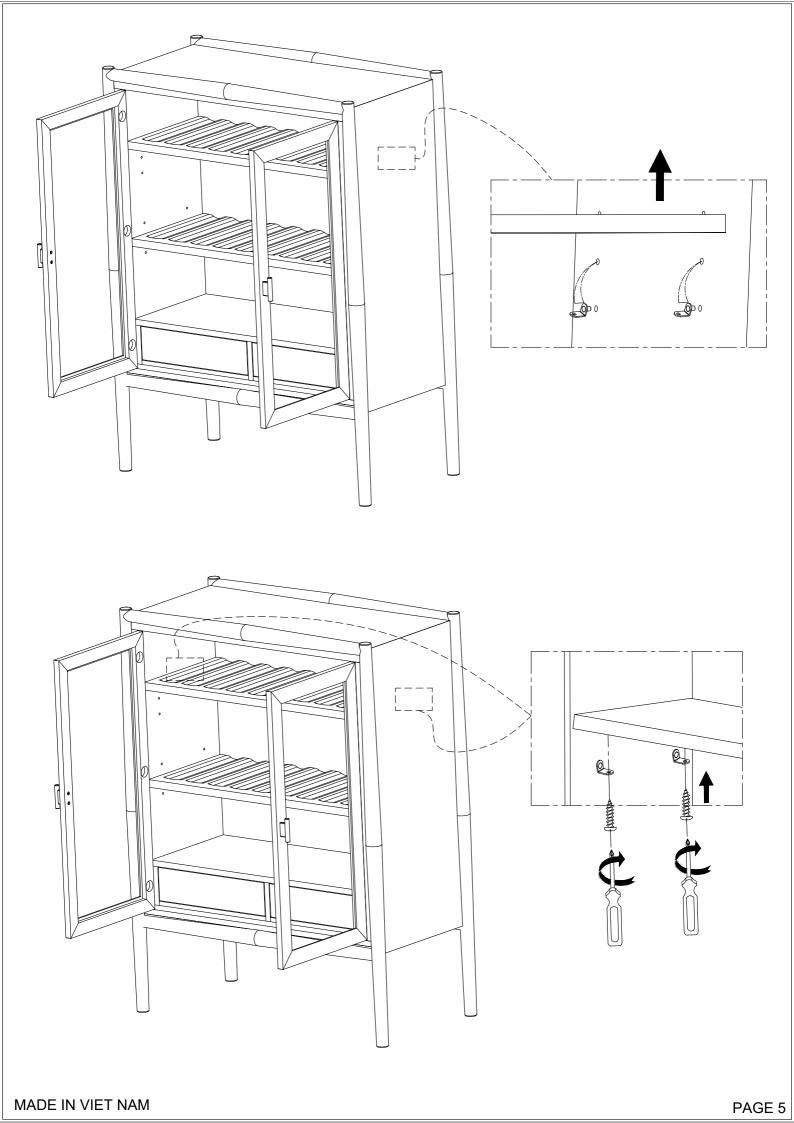

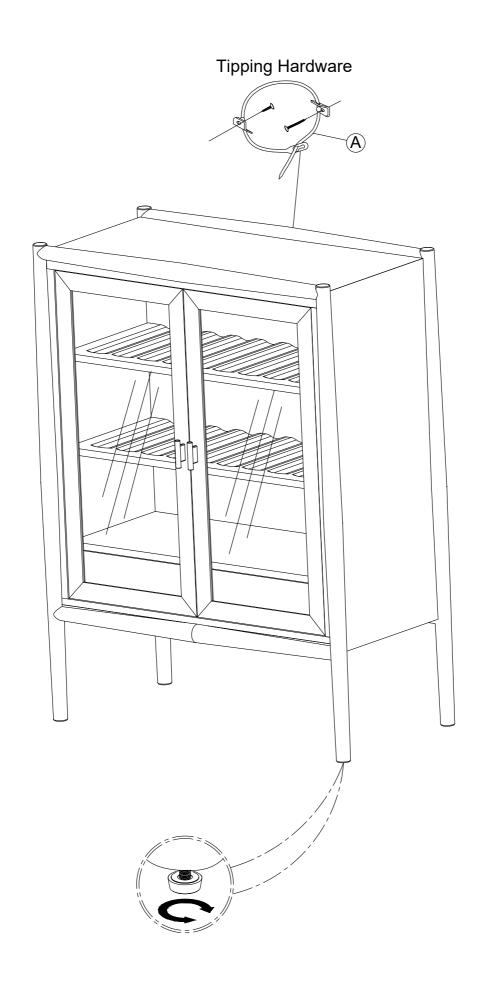

MADE IN VIET NAM PAGE 6