
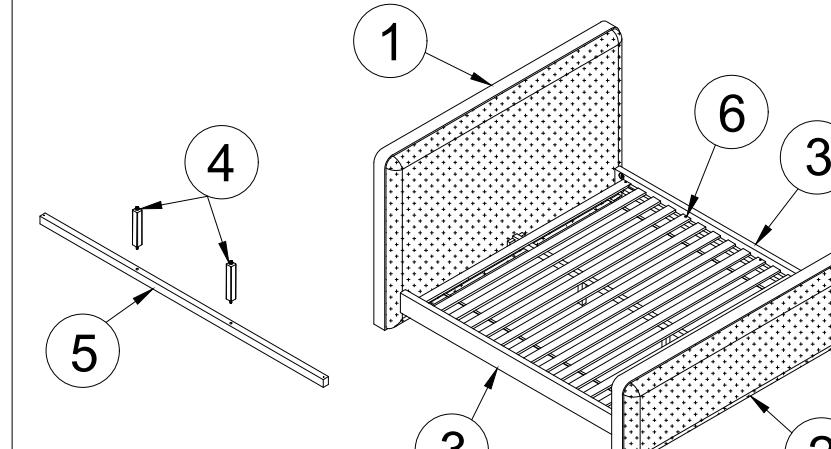




ASSEMBLY INSTRUCTION

PIERCE BED QUEEN

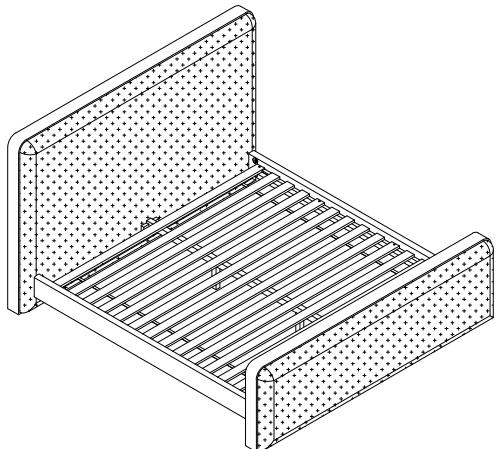


Name of Hardware			
A		Stud Bolts M8 x 80	8
B		Nuts M8	8
C		Lock Washer M8	8
D		Curved Washers	8
E		Long Screw M4x60	2
F		Short Screw M4x30	8
G		Wrench K13	1


Step: 1

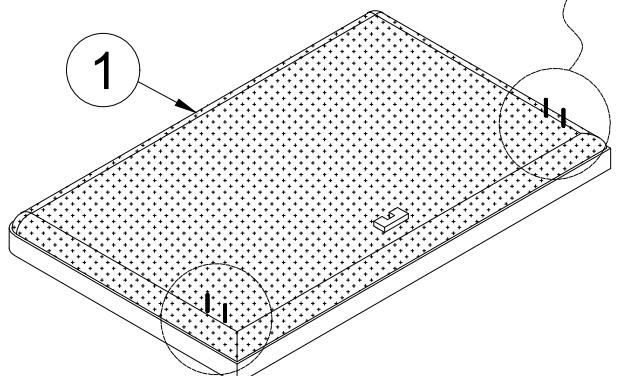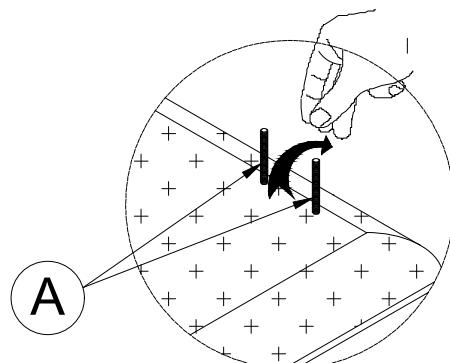

Step: 2

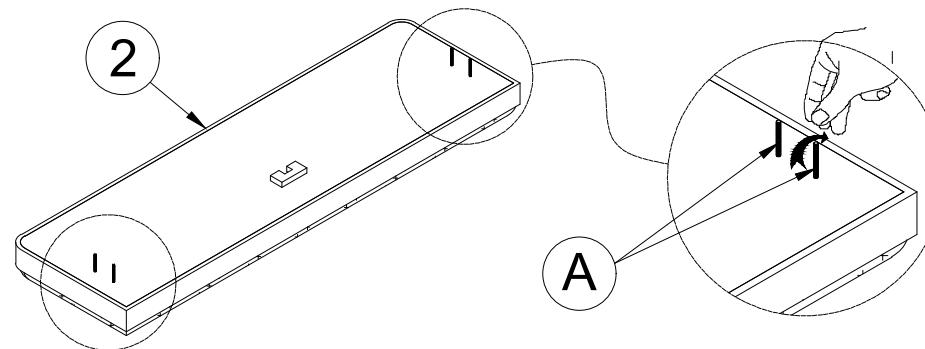


Step: 3

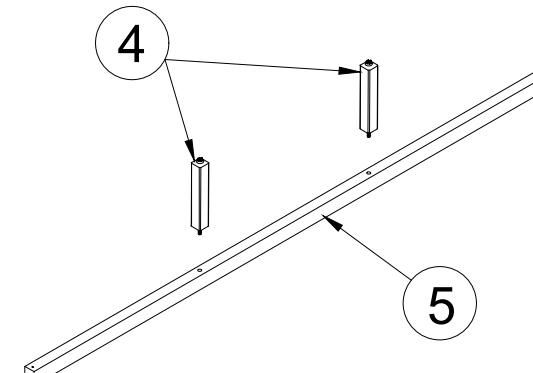


ASSEMBLY INSTRUCTION

PIERCE BED QUEEN


Step: 4

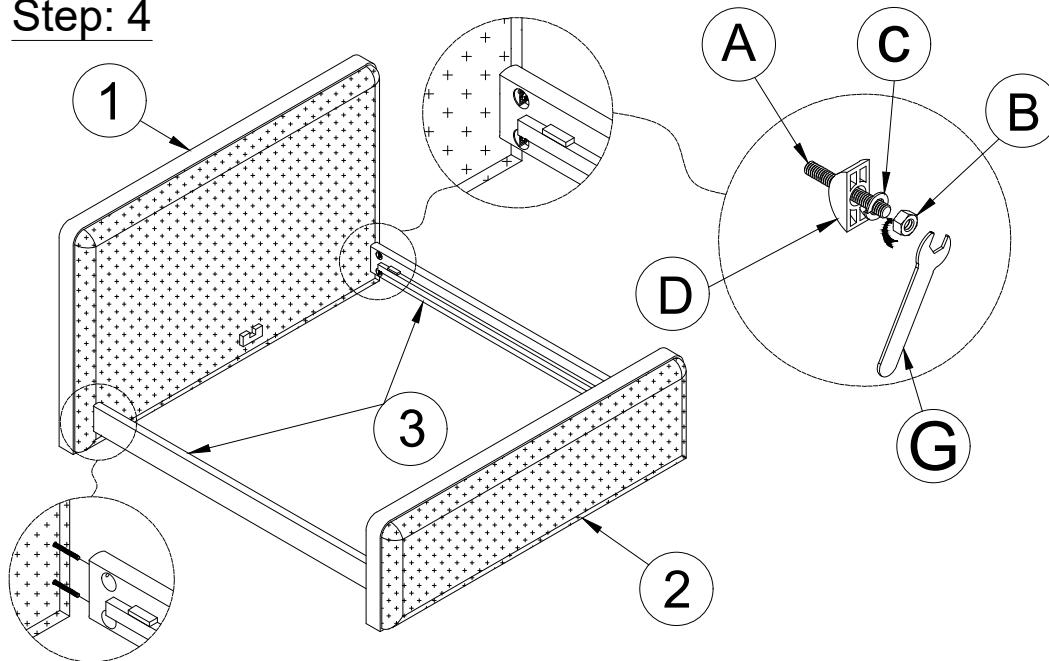

Step: 5

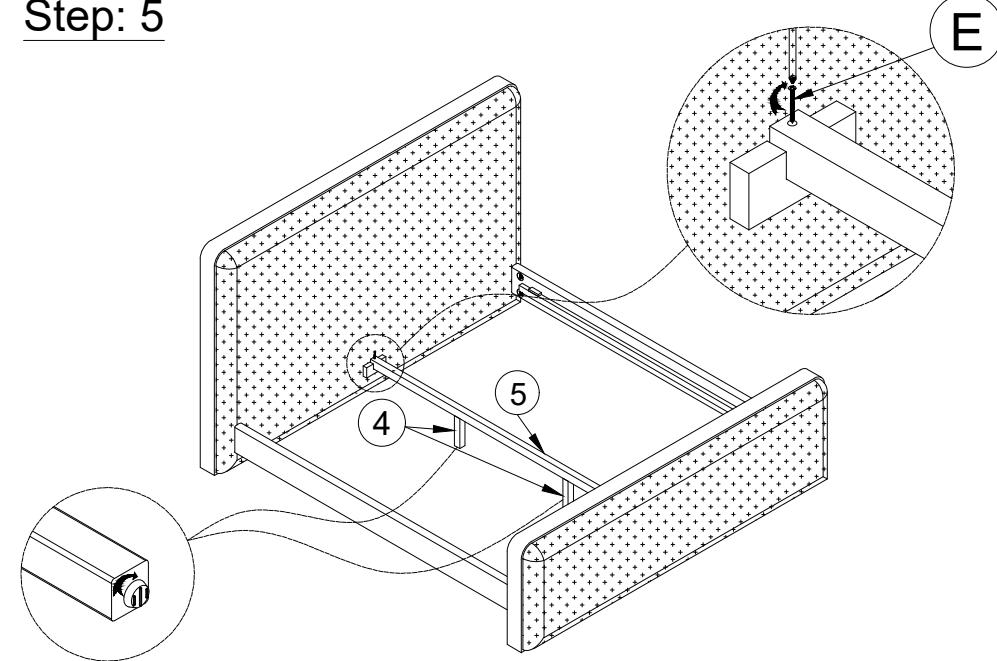


Step: 6

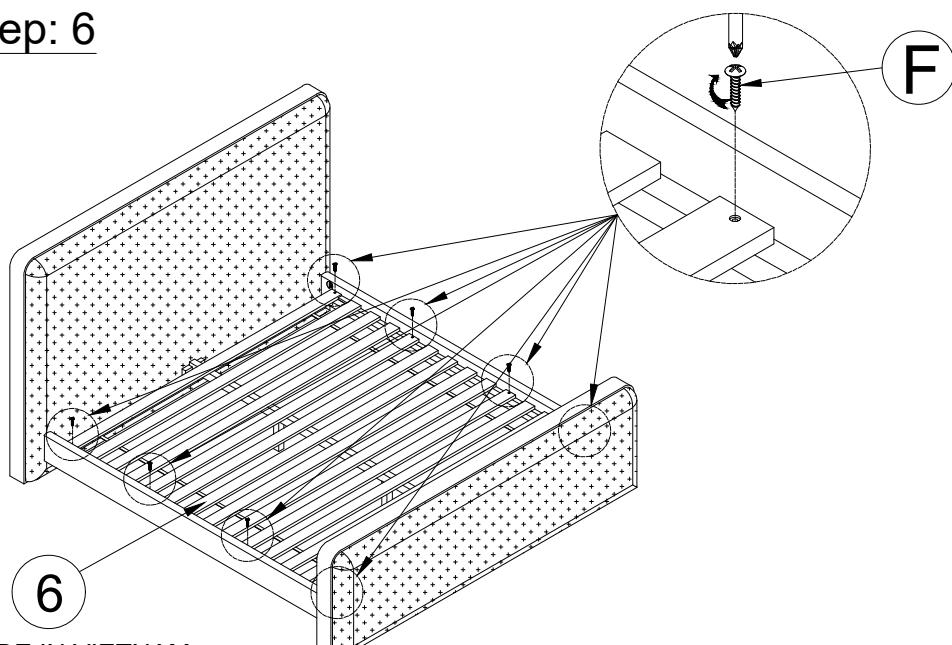

MADE IN VIETNAM

Step: 7

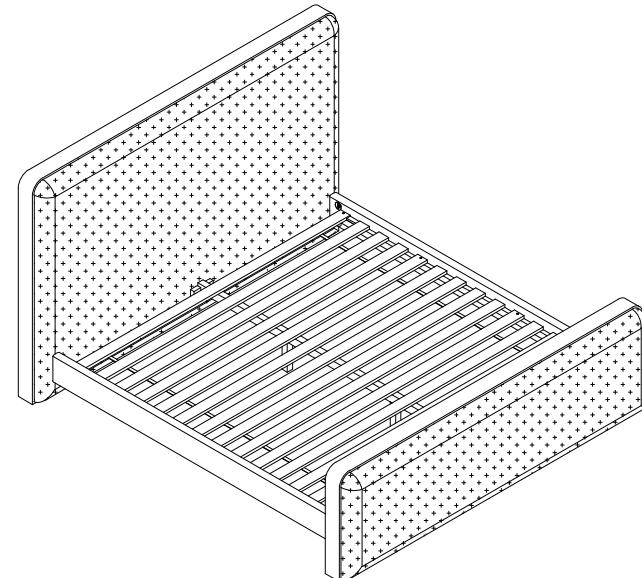

FINISH