ASSEMBLY INSTRUCTION FOR

ALDEN CABINET

HARDWARE LIST				
Α	9	Bolt	8mm x 20mm	8
В		Lock washer	8mm	8
С	0	Flat washer	8mm x 16mm	8
D		Allen Wrench	4mm	1
Е	Ø	Tipping Hardware		1 Set
F		Screwdrivers (Not included)		1





MADE IN VIET NAM PAGE 1


COMPONENTS



MADE IN VIET NAM PAGE 2

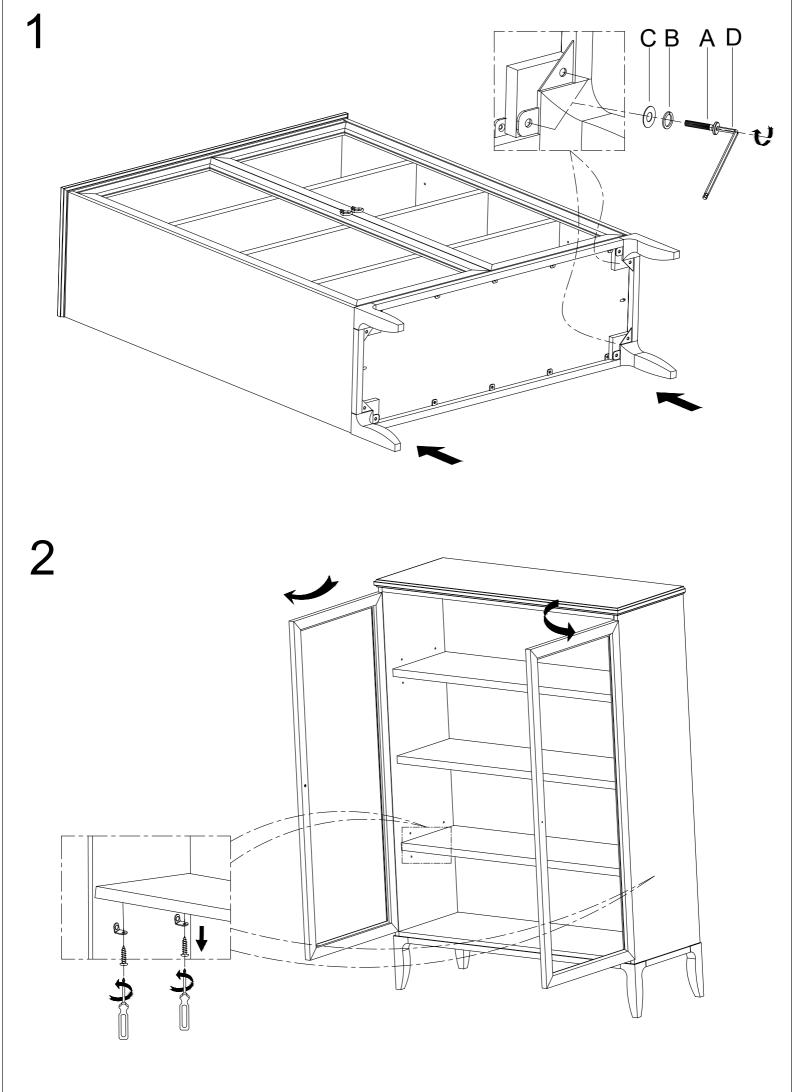

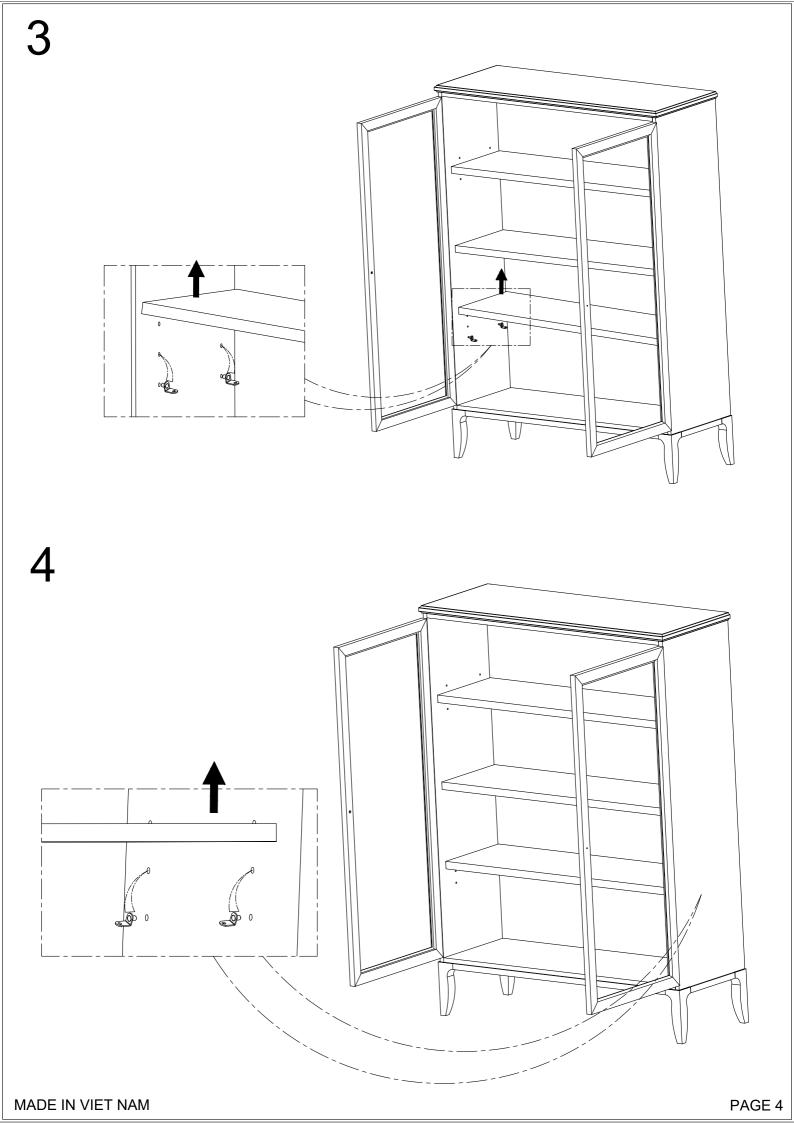

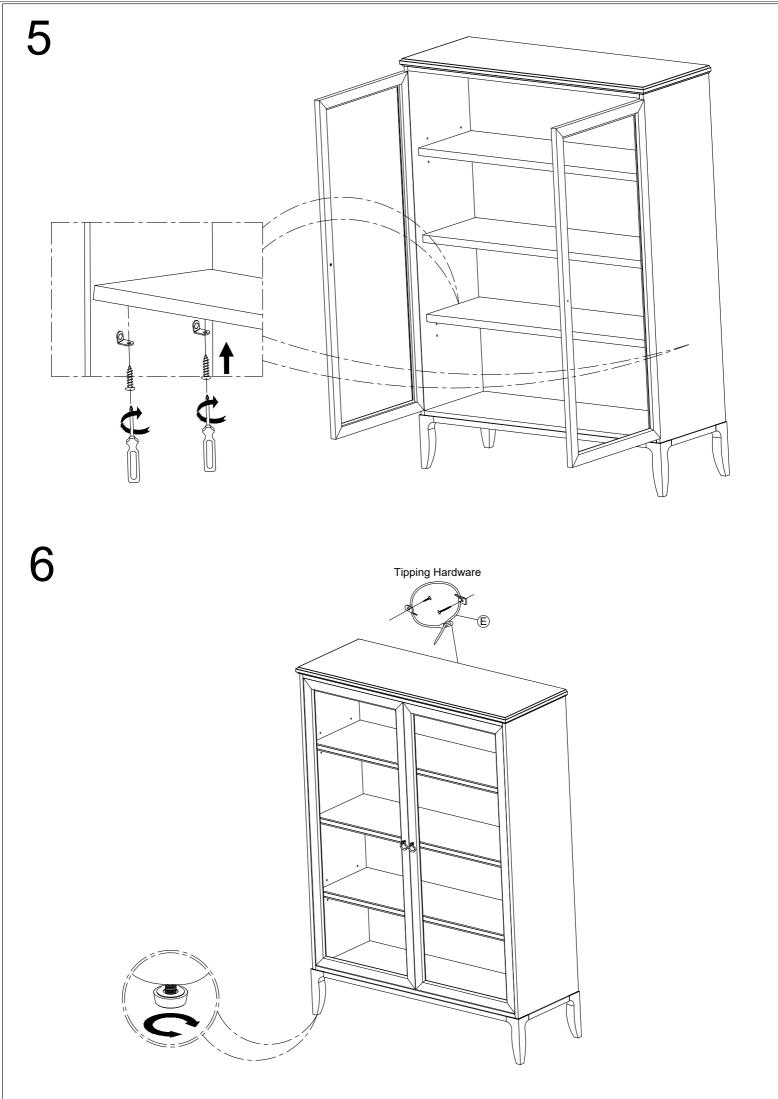

MADE IN VIET NAM