
VISCOUNT WILLIAM ASSEMBLY INSTRUCTION

PARTS INCLUDED

A FOOT

B SOFA

Tools needed

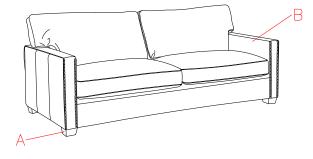

TOOLS NEEDED

NO.	Description		Size	QTY.
1	Quanto	Bolt	M10*70 mm	4 or 5 pcs
2		Allen Key	8MM	1 pcs
3		Foot pad		4 pcs


NOTE

- —Sofa must be assembled by at least two people.
- -Please read instructions carefully before assembling sofa.
- -Use the above parts and fittings list to identify each component.
- -Keep all packing materials until assembly is completed to avoid loss of smaller parts.

ASSEMBLY INSTRUCTIONS


STEP 1

- 1.Lay down the SOFA(B) on a protective surface to prevent damage. Under the sofa facing.
- 2.Please find the feet & hard ware at the bottom of sofa (B)

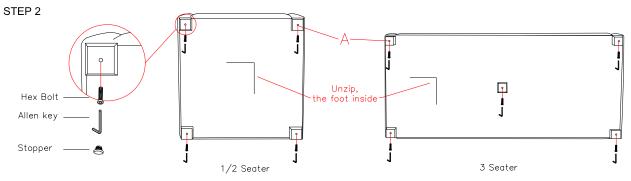

- 1. Locate foot (A) onto the sofa body (B). Align the holes on the foot (A) with the threaded holes on underneath of the sofa body (B). Attaching the foot (A) to sofa body(B) by inserting the Hex bolts (1); the tighten the Hex bolts (1) by Allen Key (2) provided; lid Foot pad (3).
- 2. Repeat for assembling the other Foot (A).

STEP 3

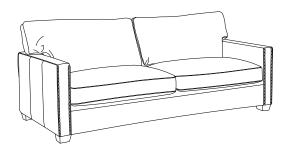

Installation complete, Thank you for your purchase